 
Calendar Thermometer and Hygrometer **Operation Manual**

Outlook

- MODE/SET: Press to select the display mode. Press and hold for 2s to set the mode you have chosen.
- ADJ: Work as Adjust Key when in SET mode. Work as alarm ON/OFF when in Clock Alarm mode.
- SNZ/LIGHT: Press to active the backlight for 5s when alarm clock is off. When alarm clock is on, press to active snooze for 5 minutes.
- 4 MAX/MIN/CLEAR: Press to get the highest/lowest records of temperature and humidity.
- 6 C/F: Fahrenheit or Celsius display
- 6 Battery cover
- Wall mount holes
- 3 Suppressible table stand



LCD dispaly



Time Setting

 Load one battery, a full LCD screen is on for 1 second, then into hour format and ☐ clock mode. Clock mode symbol "☐ " flashes. Press and hold [MODE/SET] to enter hour format setting, hour digits " 2" flashe. Press 【ADJ】 to select 12H or 24H format display. Press MODE/SET】 o enter hour setting and press 【ADJ】 to set hour value.



② Press 【MODE/SET】 to enter minute setting, digits " □□ " flash, then press [ADJ] to set minute value.



Alarm Clock Setting

● Under Alarm Clock mode, press and hold【MODE/SET】 to enter alarm clock setting, hour digits " 🖟 " flash. Press 【ADJ】 to set hour value.

Press [MODE/SET] to enter minute setting, digits " 🔲 " flash, then press [ADJ] to set minute value.

12:00 26.8 £ 58 £

Notice: " " means Alarm Clock is on.
" " means On Time Alarm is on.

| |2:00 26.8 £ S8 £

Calendar Setting

● Under Date Mode, press and hold 【MODE/SET】 to enter date setting. Year digits " 5 " flash, press **【ADJ**】 to set year value.

Press [MODE/SET] to enter month setting. Month digit " | "flashes, press [ADJ] to set month value.

OPress [MODE/SET] to enter day setting. Day digit " ! " flashes, press [ADJ] to set day value.



20 15%

20 IS 🖁 26.8 £ S8 £

Mode of time and alarm clock

Press the **[MODE/SET]** to switch Time mode or Alarm Clock mode. If choose the Time mode, the symbol ": " flashes. If choose the Alarm Clock mode, the symbol ": " doesn't flash. Notice: Under the Alarm Clock mode, it backs to Time mode automatically if no operation for 2m.

ON/OFF Alarm Clock

When Alarm Clock setting is finished, press the **[MODE/SET]** to enture Alarm Clock mode " 🏲 "means Alarm Clock is on), press 【ADJ】 to turn on or turn off the clock alarm. Notice: If there is no operation for 2 minutes, it backs to Time mode automatically.

ON/OFF Backlight, Snooze

When alarm is off, press [SNZ/LIGHT] to active green backlight for 5s. When alarm is on, press **[SNZ/LIGHT]** to active snooze. Press **[ADJ]** to close the alarm.

Review/ Delete

Press [MAX/MIN/CLEAR] to check the max/min of temperature and humidity by using a pen, Press and hold **[MAX/MIN/CLEAR]** for 2s to delete the records.

Convert C/F