



Internal/External Bearing Puller DN-D1031

small of internal puller 15mm-30mm
Large of internal puller 30-80mm
Exernal puller 15-80mm
Locking the nut to open 3-jaws and clip on
the bearing.and then use the slide hammer
to pull out the bearing.



Product Information