

# HBG 1011

## Handheld Control Panel



**Publisher: SIGMATEK GmbH & Co KG**  
**A-5112 Lamprechtshausen**  
**Tel.: +43/6274/4321**  
**Fax: +43/6274/4321-18**  
**Email: office@sigmatek.at**  
**WWW.SIGMATEK-AUTOMATION.COM**

Copyright © 2013  
SIGMATEK GmbH & Co KG

#### **Translation from German**

All rights reserved. No part of this work may be reproduced, edited using an electronic system, duplicated or distributed in any form (print, photocopy, microfilm or in any other process) without the express permission.

We reserve the right to make changes in the content without notice. The SIGMATEK GmbH & Co KG is not responsible for technical or printing errors in the handbook and assumes no responsibility for damages that occur through use of this handbook.

## 10.4“ Handheld Control Panel

**HBG 1011**

The HBG 1011 is a handheld control panel for visualizing processes. Process diagnosis, operating and monitoring functions are therewith simplified.

A touch screen serves as the input medium for process data and parameters.

The output is shown on a 10.4" XGA TFT color display.



## Contents

<b>1</b>	<b>Essential Components .....</b>	<b>4</b>
<b>2</b>	<b>Basic Safety Guidelines .....</b>	<b>5</b>
2.1	Symbols Used .....	5
2.2	General Safety Guidelines .....	7
2.3	Designated Use .....	8
2.4	Residual Risks .....	11
2.5	Safety of the Machine or Equipment .....	12
2.6	Conformity with EU Standards .....	12
2.7	Functional Safety Standards .....	12
2.8	Safety-relevant Parameters .....	13
<b>3</b>	<b>Technical Data .....</b>	<b>14</b>
3.1	Performance Data .....	14
3.2	Electrical Requirements .....	15
3.3	Display .....	16
3.4	Terminal .....	16
3.5	Terminal Requirements .....	16
3.6	Miscellaneous .....	17
3.7	Environmental Conditions .....	17
<b>4</b>	<b>Mechanical Dimensions .....</b>	<b>18</b>
4.1	Wall Mounting .....	19
<b>5</b>	<b>Interfaces .....</b>	<b>20</b>

5.1	<b>Rear Connectors .....</b>	<b>20</b>
5.2	<b>Key Switch.....</b>	<b>22</b>
5.3	<b>Confirmation Switch .....</b>	<b>22</b>
5.4	<b>Emergency Stop.....</b>	<b>23</b>
<b>6</b>	<b>Wiring Guidelines.....</b>	<b>24</b>
6.1	<b>ESD Protection.....</b>	<b>24</b>
6.2	<b>USB Interface Connections .....</b>	<b>24</b>
<b>7</b>	<b>Cleaning the Touch Screen .....</b>	<b>25</b>
<b>8</b>	<b>Recommended Cable Shielding.....</b>	<b>26</b>
8.1	<b>Connection from the Control Cabinet to the HBG.....</b>	<b>26</b>

## 1 Essential Components

- 10.4" XGA TFT color display with backlighting
- 10.4" Touch screen
- Confirmation switch (mounted on the rear side), 2-channel configuration
- Key switch (mounted top center), 2-channel, wired in series with the confirmation switch
- Emergency Stop switch (mounted top center), 2-channel
- USB socket with cover
- M16 connector with special cable for HMI-Link (swivels 90°)

## 2 Basic Safety Guidelines

### 2.1 Symbols Used

For warning, danger messages and informational notes, the following symbols are used in the operator documentation:

---

**DANGER****DANGER**

Identifies an immediate danger with high risk, which can lead to immediate death or serious injury if not avoided.

Indique un danger direct à haut risque d'un décès immédiat ou des blessures graves si les consignes de sécurité ne sont pas respectées.

---

**WARNING****WARNING**

Identifies a possible danger with a mid-level risk, which **can** lead to death or (serious) injury if not avoided.

Indique un danger possible d'un risque moyen de décès ou de (graves) blessures si les consignes de sécurité ne sont pas respectées.

---

**CAUTION****CAUTION**

Identifies a low risk danger, which can lead to injury or property damage if not avoided.

Indique un danger avec un niveau de risque faible des blessures légères ou des dommages matériels si les consignes de sécurité ne sont pas respectées.

---



Danger for ESD-sensitive components

Les signes de danger pour les composants sensibles aux décharges électrostatiques

---



This symbol identifies important or additional information regarding the operation of the safety modules.

Ce symbole indique des informations importantes ou supplémentaires concernant le fonctionnement des modules de sécurité particuliers.

---

## INFORMATION



Provides user tips, informs of special features and identifies especially important information in the text.

---

## 2.2 General Safety Guidelines

According to the EU guideline 2006/42/EG, the operating instructions are a component of a product.

This handbook must therefore be accessible in the vicinity of the machine, since it contains important instructions.

The technical documentation should be included in the sale, rental or transfer of the product.



Please read the corresponding data sheets and operating instructions thoroughly before handling Safety modules. SIGMATEK is not liable for damages caused through non-compliance with these instructions or respective the regulations.

The general and special safety instructions described in the following sections, special safety instructions and technical regulations must therefore be observed.

Subject technical changes, which improve the performance of the devices. The following documentation represents a series of product descriptions and does not serve to guarantee properties under the warranty.

In regard to the requirements for Safety and health connected to the use of machines, the manufacturer must perform a risk assessment in accordance with machine guidelines 2006/42/EG before bringing a machine to the market.

## 2.3 Designated Use

The Safety functions implemented in the Safety modules are designed for use with safety-related applications in a PLC control and meet the required conditions for safe operation in SIL 3 or SIL CL 3 according to EN 62061 and in compliance with PL e. Cat. 4 in accordance with EN ISO 13849-1.



The instructions contained in this document must be followed.

Safety functions can only be powered by supplies that meet the requirements for PELV in compliance with EN60204.

For error-free operation, proper transport and storage are essential.

Installation, mounting, programming, initial start-up, operation, maintenance and discarding of the Safety module **can only be performed by qualified personnel**.

**Qualified personnel** in this context are people, who have completed training or have trained under supervision of qualified personnel and have been authorized to operate and maintain safety-related equipment, systems and facilities in compliance with the strict guidelines and standards of safety technology. The applicable environmental conditions must be maintained.

Les instructions de cette documentation doivent être respectées.

Les composants de sécurité ne doivent être alimentés que par des alimentations conformes aux exigences PELV selon la norme EN60204.

Un transport et un stockage approprié sont essentiels au bon fonctionnement.

L'installation, le montage, la programmation, la mise en service, l'exploitation, la maintenance et la mise hors service des modules de sécurité **ne doivent être effectués que par du personnel qualifié**.

En ce sens, les personnes qualifiées sont des personnes ayant acquis la formation respective ou étant formées par un spécialiste pour superviser des dispositifs, systèmes et systèmes de sécurité conformément aux directives et normes de sécurité applicables. Les conditions environnementales applicables doivent être respectées.

---

**For your own safety and the safety of others, the safety modules should be used for their designated purpose only.**

**Correct EMC installation is also included in the designated use.**

**Utilisez les modules de sécurité pour votre sécurité et celle des autres uniquement d'une façon appropriée.**

**Une utilisation appropriée inclut également une installation conforme à la compatibilité électromagnétique.**

---

**Non-designated use consists of**

Any changes made to the Safety modules or the use of damaged modules.

The use of the Safety modules outside of technical margins described in these operating instructions.

The use of the Safety modules outside of the technical data described in these operating instructions (see the "Technical data" sections of the respective product documentation).

**Sont considérés comme inappropriés**

Toute modification de quelque nature que ce soit faite aux modules de sécurité ou l'utilisation de modules de sécurité endommagés.

L'utilisation de modules de sécurité en dehors du cadre technique décrit dans ce manuel

L'utilisation des modules de sécurité en dehors des données techniques décrites dans ce mode d'emploi (voir également les sections « Caractéristiques techniques » dans la documentation correspondante).

---



**In addition, the Safety Guidelines in the other sections of these instructions must be observed. These instructions are visibly emphasized by symbol.**

**Veillez à bien respecter les consignes de sécurité dans les autres sections de ce manuel. Ces notes sont visuellement mises en évidence par des symboles.**

Regarding electrical safety, the requirements of the EN 61131-2 standard apply. For the machine and the entire installation, further norms and guidelines apply. For example, the EN 60204-1.

For your own safety and that of others, compliance with the environmental conditions is essential.

The control cabinet and the module carrier must be connected to earth correctly.

For maintenance and repairs, disconnect the system from the power supply.

En ce qui concerne la sécurité électrique, les exigences de la norme EN 61131-2 pour l'unité de commande portative s'appliquent. La machine et l'ensemble de l'installation peuvent être soumises à d'autres normes et réglementations, telles que la norme EN 60204-1.

Pour votre propre sécurité et pour la sécurité des autres, assurez-vous du respect des conditions environnementales.

L'armoire de commande et le support de modules doivent avoir un contact de mise à la terre correct.

Débranchez toujours le système du secteur lors de l'entretien et des réparations.

## 2.4 Residual Risks



In the risk assessment defined by the 2006/42/EG guideline (machine guideline), the machine manufacturer must include the possible residual risks posed by Safety modules. These include:

Unwanted movements of driven machine components

Unwanted temperatures, emissions of gas, particles, smell and light.

Dangerous contact voltages

The effects of electrical, magnetic and electromagnetic fields produced during operation (for example, on pacemakers and implants)

Possible effects of information technology devices (cell/smart phones etc.)

Release of non-environmentally compatible substances and emissions

Dans l'évaluation des risques définis par la Directive Machines 2006/42/CE le fabricant de la machine doit inclure les éventuels risques résiduels posés par les modules Safety. Ceux-ci comprennent:

Mouvements involontaires des pièces entraînées de la machine.

Températures non désirées, les émissions de gaz, les particules, l'odeur et la lumière.

Tensions de contact dangereuses

Les effets des champs électriques, magnétiques et électromagnétiques produites pendant le fonctionnement (par exemple, sur les stimulateurs cardiaques et les implants).

Les effets possibles sur les dispositifs de technologie de l'information (téléphones cellulaires / téléphones intelligents, etc.)

Dégagement de substances et d'émissions non respectueux de l'environnement.

## 2.5 Safety of the Machine or Equipment

Strict compliance with the safety guidelines is required, otherwise all warranties and claims are invalid:



Observe all on-site rules and regulations for accident prevention and occupational safety.

## 2.6 Conformity with EU Standards

The components were constructed in compliance with the following European Union guidelines

2006/42/EG	Machine guideline
2014/35/EU	Low-voltage guideline
2014/30/EU	EMV guideline
2011/65/EU	RoHS guideline

## 2.7 Functional Safety Standards

## **Confirmation switch:**

- EN 62061 SIL 3 or SIL CL 3
  - EN ISO 13849-1/-2 PL e / CAT 4

## 2.8 Safety-relevant Parameters

The use of the specified parameters requires a risk analysis of the end application.

Input module	Safety parameters (*)
<b>HBG 1011</b> Including Safe CPU (SCP XXX)	PFH <sub>D</sub> = 1.07E-11 (1/h) MTTF <sub>D</sub> = 306 years DC = 99.9 %
<b>Confirmation switch</b>	B <sub>10D</sub> = 100,000
<b>Key switch</b>	B <sub>10D</sub> = 10,000
<b>Emergency stop switch</b>	B <sub>10D</sub> = 325,000

(\*) Depending on the application, the probability of failure must be determined for the included electromechanical components based on the B<sub>10D</sub> values listed here and included in the calculation for the entire system.

### 3 Technical Data

#### 3.1 Performance Data

Interfaces	1x HMI-Link 1x USB 2.0 Type A 1x Safety Interface <sup>(1)</sup>
Internal interface connections and devices	1x TFT color display 1x touch
Control panel	touch screen (analog resistive) emergency stop switch (2 normally closed) confirmation switch (2 normally open, 3-stage) key switch (2 normally open)
Display	10.4" TFT color display 1024 x 768 RGB

<sup>(1)</sup> The Safety Interface must be used exclusively with the SIGMATEK SCP XXX! The status of the safety-related inputs (confirmation switch, key switch, emergency stop switch) is sent to the SCP XXX.

<sup>(1)</sup> L'interface de sécurité doit uniquement être utilisée avec le SIGMATEK SCP XXX! L'état des entrées de sécurité (interrupteur de validation, interrupteur à clé, interrupteur d'arrêt d'urgence) est transmis au SCP XXX.

The function of the key switch, confirmation switch and emergency stop switch must be tested at least once per month.

L'interrupteur à clé, l'interrupteur de confirmation et de l'interrupteur d'arrêt d'urgence doivent être vérifiés au moins une fois par mois!

### 3.2 Electrical Requirements

Supply voltage	typically +24 V DC (PELV)	
	minimum +24 V DC (PELV)	maximum +30 V DC (PELV)
Supply voltage (UL)	+24-30 V DC (NEC Class 2 or LVLC)	
Current consumption Power supply +24 V	typically 550 mA (without externally connected devices)	maximum 750 mA (with externally connected devices)
Protection class	3	
Inrush current	maximum 9 A for 1 ms	
USB current load	maximum 0.5 A	

**For USA and Canada:**

**The supply must be limited to:**

- a) max. 5 A at voltages from 0-20 V (0-28.3 Vp) or
- b) 100 VA at voltages from 20-30 V (28.3-42.4 Vp)

**The limiting component (e.g. transformer, power supply or fuse) must be certified by an NRTL (Nationally Recognized Testing Laboratory).**

**Pour les États-Unis et le Canada:**

**L'alimentation doit être limitée à :**

- a) max. 5 A pour des tensions de 0-20 V (0-28,3 Vp), ou
- b) 100 VA pour des tensions de 20-30 V (28,3-42,4 Vp)

**Le composant imposant la limite (par exemple, transformateur, alimentation électrique ou fusible) doit être certifié par un NRTL (National Recognized Testing Laboratory, par exemple, UL).**

### 3.3 Display

Type	10.4" TFT LCD color display
Resolution	XGA 1024 x 768 Pixel
Color depth	18-bit RGB (262K colors)
LCD mode	normal black
LCD Polarizer	transmissive
Pixel size	0.0685 mm x 0.2055 mm
Backlighting	LED
Contrast	typically 1000: 1
Brightness	typically 350 cd/m <sup>2</sup>
Angle CR ≥ 10	left and right 88, above 88° and below 88°

### 3.4 Terminal

Dimensions	264 x 226 x 73.3 mm (W x H x D) (without Emergency Stop switch / key switch)
Material	housing: PC/ASA color: RAL7024
Weight	typically, circa 1.1 kg without connector cable

### 3.5 Terminal Requirements

Connection technology	M16 plug (see X2 on page 21)
	special connector cable minimum bend radius: 147 mm

### 3.6 Miscellaneous

Article number	12-245-1011
Hardware version	1.x
Software version	1.x
Connector cable	optionally available (see documentation for connection cables for operating devices)
Standard	UL 508 (E247993)
Approvals	CE, TÜV EC type tested, cULus

**On HMI-Link extenders with SW version 1.x, HMI-Link display units/control panels with SW version 1.x must be used.**


**Sur HMI-Link avec des extenseur versions SW 1.x, HMI-Link unités d'affichage/panneaux de commande avec la version SW 1.x doivent être utilisées.**

### 3.7 Environmental Conditions



Storage temperature	-10 ... +60 °C	
Operating temperature	0 ... +45 °C	
Humidity	10-90 %, non-condensing	
Operating conditions	pollution degree 2 altitude up to 2000 m	
EMC stability	EN 61000-6-2 (industrial area) (increased requirements according to IEC/EN 62061)	
Shock resistance	EN 60068-2-27	150 m/s <sup>2</sup>
Vibration tolerance	10 m/s <sup>2</sup>	
Protection type	EN 60529	IP54 (only with all protective caps fitted)
Free fall (without packaging)	DIN EN 60068-2-31	500 mm

## 4 Mechanical Dimensions

In mm

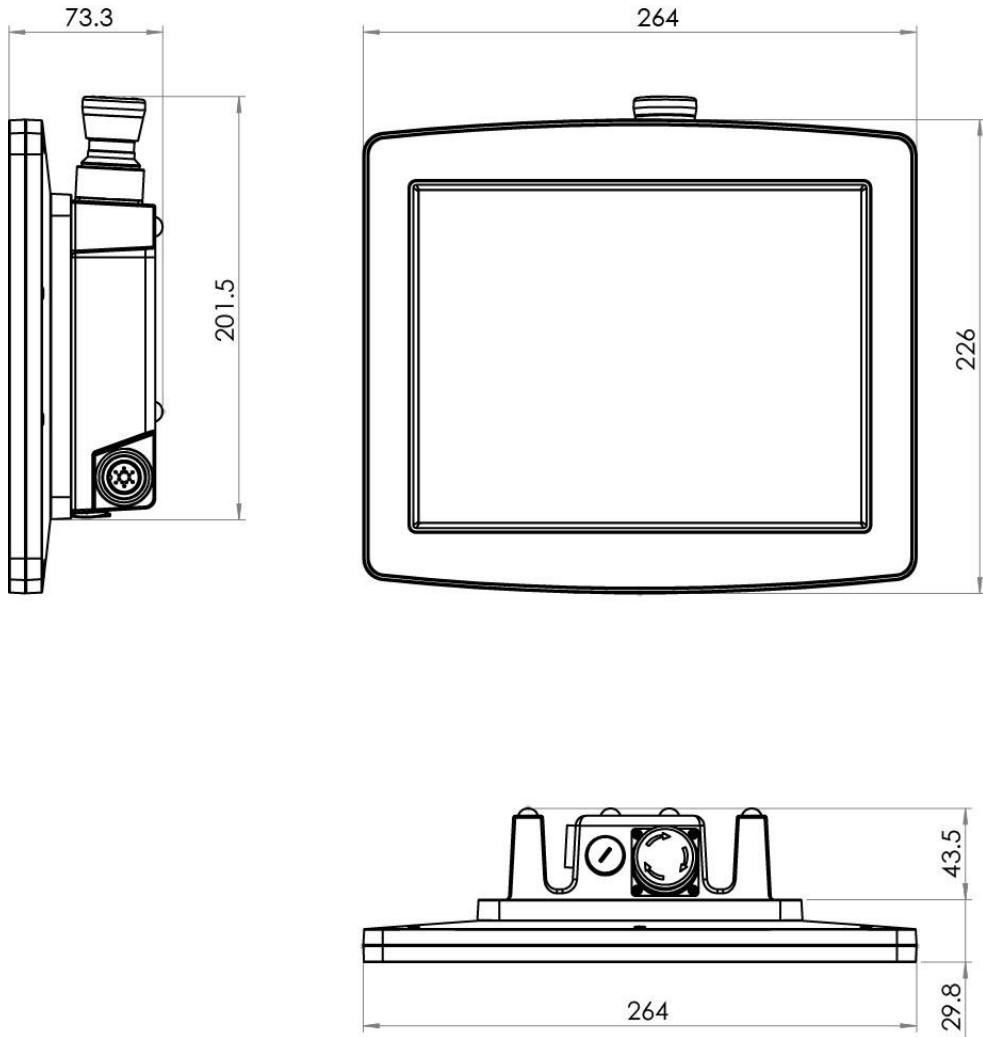

#### 4.1 Wall Mounting

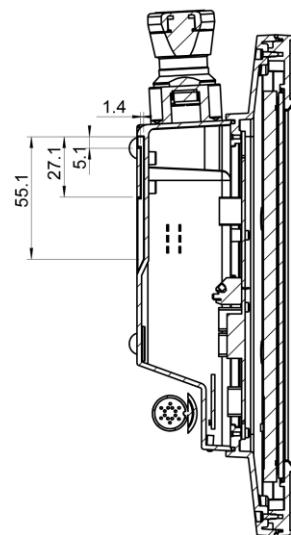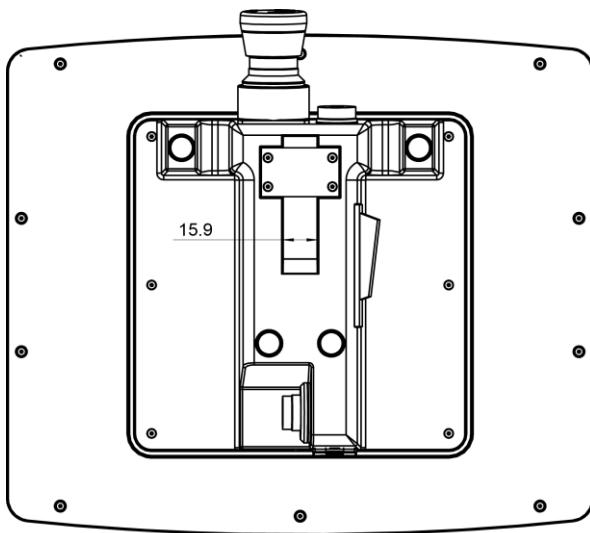


## 5 Interfaces

### 5.1 Rear Connectors




X1: USB Interface Connections 2.0

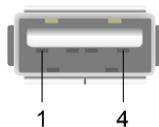

Pin	Function
1	+5 V
2	D-
3	D+
4	GND

It should be noted that many of the USB devices on the market do not comply with USB specifications; this can lead to device malfunctions. It is also possible that these devices will not be detected at the USB port or function correctly. Therefore, it is recommended that every USB stick be tested before actual use.

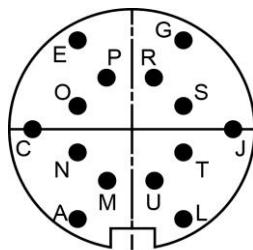**X2: Cable connector M16**

Pin	Wire color	Function
L	Yellow	Safety Interface-H
J	Green	Safety Interface-L
G	Black	Safety Interface shield
E	Red	+24 V DC
C	Black	GND
A	Shield	HMI-Link shield
U	White	D2+
T	Red	D3+
S	Blue	D3
R	Pink	D4
P	Gray	D4+
O	Yellow	D1
N	Green	D1+
M	Brown	D2

The appropriate connector cables are optionally available.  
See documentation for connection cables operating devices.



The handheld control panel can only be operated with the SCP XXX Safety module!

As required by EN ISO 13850, section 4.1 and EN 60204-1, section 10.7.1, it must be impossible to confuse a functioning handheld control panel with a non-functioning one.

Note on the Emergency Stop function: A non-connected HBG 1011 does not have to be visibly sealed!

**LED**

LED status	Definition
LED lights green	DC OK


## 5.2 Key Switch

The key switch is two-stage and read via the SCP XXX connected to the Safety Interface. In the SCP XXX, the "HGB0811\_K" class is used; inputs 5 and 6 are assigned to the key switch.



## 5.3 Confirmation Switch


The confirmation switch is three-stage. The confirmation switch must be activated with the key switch, because they are serial. If the switch is not pressed or pressed only partially, it is inactive. The switch is active when simply pressed (middle stage). In the SCP XXX, the "HGB 0811" module is used; inputs 1 and 2 are assigned to the confirmation switch.

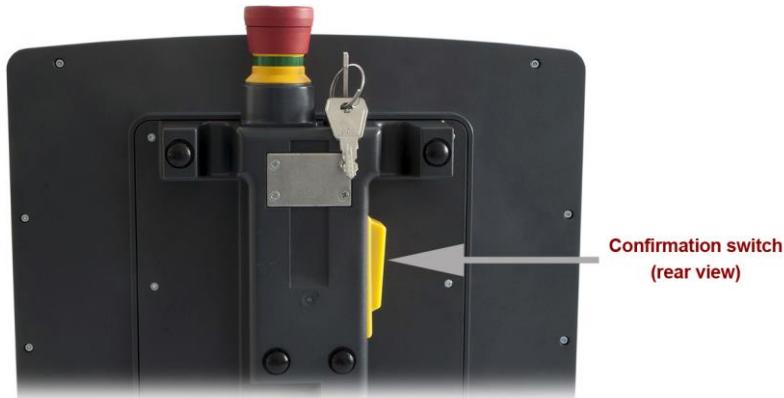

## 5.4 Emergency Stop

The Emergency stop is 2-channel. In the SCP XXX, the "HBG 0811" module is used with the inputs 3 and 4.

Emergency stop (rear view)

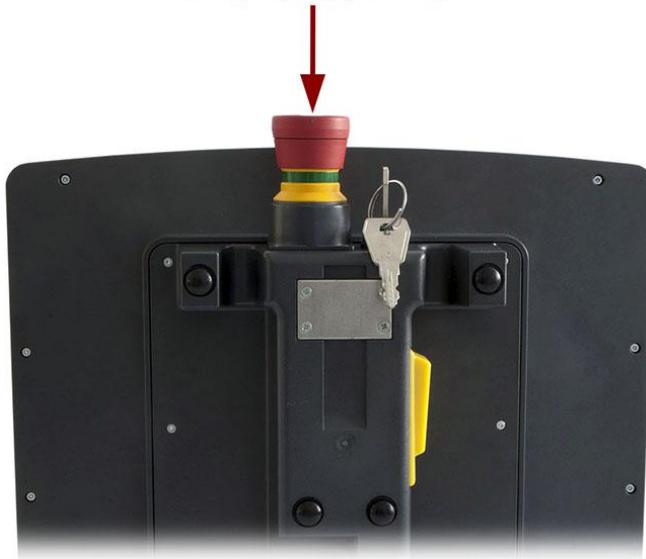

## 6 Wiring Guidelines

### 6.1 ESD Protection

Typically, USB devices (keyboard, mouse...) are not equipped with shielded cables. These devices are disrupted by ESD and in some instances, no longer function.

Before any device is connected to, or disconnected from the terminal, the potential should be equalized (by touching the control cabinet or earth terminal). This will allow the dissipation of electrostatic loads (caused by clothing/shoes).

### 6.2 USB Interface Connections

The handheld control panel has a USB interface connection that can be used to connect various USB devices (keyboard, mouse, storage media, hubs, etc.).

## 7 Cleaning the Touch Screen

**CAUTION!**

**Before cleaning the touch screen, the HBG must be turned off  
in order to prevent triggering functions or commands unintentionally!**

The HBG touch screen can only be cleaned using a soft damp cloth. To dampen the cloth, a screen cleaning solution such as antistatic foam cleaner, water with detergent or alcohol is recommended. To avoid fluids/cleaning solutions from getting into the housing, the HBG should not be sprayed directly. For cleaning, no erosive cleaning solutions, chemicals, abrasive cleansers or hard objects that can scratch or damage the touch screen may be used.

If the HBG is contaminated with toxic or erosive chemicals, it must be carefully cleaned as quickly as possible to prevent acid burns!

**To ensure the optimal function of the HBG, the touch screen should be cleaned  
in regular intervals!**


**To avoid damaging the touch screen, using either the fingers or  
a stylus to operate the panel is recommended.**

## 8 Recommended Cable Shielding

For applications in which the bus is operated outside the control cabinet, the correct shielding is required. This is especially important, if due to physical requirements, the bus cables must be placed next to sources of strong electromagnetic noise. It is recommended that wiring the connector cable in parallel with power cables be avoided whenever possible.

### 8.1 Connection from the Control Cabinet to the HBG

It is recommended that the shielding be mounted at the entry point of the control cabinet housing. Noise can then be deflected from the electronic components before reaching the module.

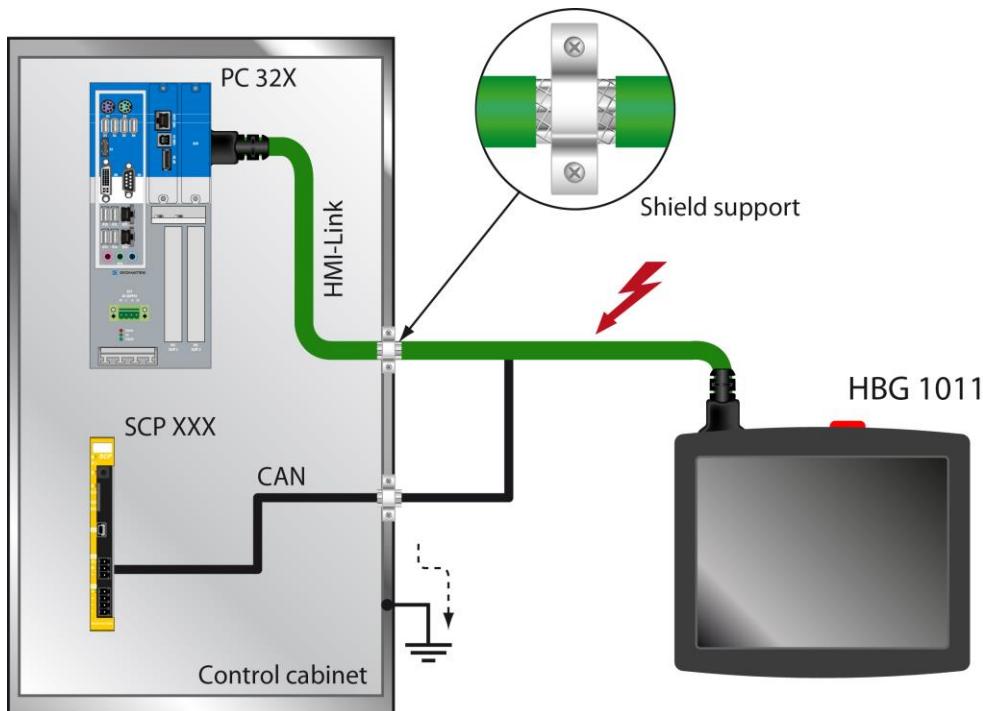

## Documentation Changes

Change date	Affected page(s)	Chapter	Note
18.02.2014	12 13 17	3.2 3.6 5.2	Added Supply Voltage (UL) at Electrical Requirements table and grey notice below the table  Miscellaneous table: Added Standard Added connector description of X3
29.12.2014	15	4.1	Added Wall Mounting
12.03.2015	12 13 5	3.2 3.7 2.1	Changed Supply voltage (UL)  Added shock resistance, vibration tolerance and free fall (without packaging)  Safety Guidelines format
24.03.2015	14	3.6	Added connector cable 9 m
15.06.2015	4	3.6	Added SW version and mnemonic
17.07.2015	22, 23	5.3, 5.4, 5.5	Added Key Switch, Confirmation Button and Emergency Stop
03.09.2015			SCP to general SCP changed
27.06.2016			CAN -> Safety Interface
12.04.2017	4 14 20	1 Essential Components 3.5 Terminal Requirements 3.6 Miscellaneous 5.2 Connector Cable Layout	Length detail removed  Added cable specifications Added article numbers  Length detail removed, replaced picture
08.03.2018	11 14	Document 2.8 Safety-relevant Parameters 3.5 Terminal Requirements 3.6 Miscellaneous 5.2 Connector Cable Layout	Changes due to safety recertification  Emergency Stop switch changed  Connection technology  Connector cable deleted
16.08.2018	14	3.1 Performance Data	Note corrected
08.09.2020	15 17	3.2 Electrical Requirements 3.7 Environmental Conditions	Protection class added  Added for Protection type (only with all protective caps fitted)

