

KeTop

KeTop T50VGA Handheld Terminal User's Manual V 1.3

Translation of the original instructions

KEBA[®]

Automation by innovation.

© KEBA 2007

Specifications are subject to change due to further technical developments. Details presented may be subject to correction.
All rights reserved.

Document: version 1.3 / article no.: 1000459
Filename: t50vga_en.doc, last saving on: 21. 12. 2007

A: KEBA AG, Gewerbepark Urfahr, A-4041 Linz, Tel.: +43 732 7090-0, Fax: +43 732 7309-10, E-Mail: keba@keba.com
D: KEBA GmbH Automation, Leonhard-Weiss-Straße 40, D-73037 Göppingen, Tel.: +49 7161 9741-0,
Fax: +49 7161 9741-40, E-Mail: keba@keba.com
US: KEBA Corp., 100 West Big Beaver Road, Troy, MI 48084, US, Tel.: +1 248 526-0561, Fax: +1 248 526-0562,
E-Mail: usa@keba.com
CN: KEBA Ltd., Unit 2107 Air China Plaza, Xiaoyun Road 36 #, Chaoyang District, Beijing, 100027, China,
Tel.: +86 10 8447-5861, Fax: +86 10 8447-5871, E-Mail: china@keba.com
www.keba.com

History

Modification from / to	Date	Modified pages	Description	Author
V1.0 /	August 2006	-	newly created	sam
V1.0->V1.1	Aug 2006		Chap „Power Supply“: The WARNING has been changed	sam
			Chap „Technical Data -> Enabling device ratings“: 125 mJ has been changed to 145 mJ	
V1.1->V1.1a	10-2006	S.25	Chap. „Example of Connection with PILZ PST1 Control Relay“: Connector has been renamed in drawing: S19 -> S22	sam
		S.27	Chap. „Example of Connection with ELAN SRB-NA-R-C.27/S1 Control Relay“: Connector has been renamed in drawing: S19 -> S22	
V1.1a->V1.1b	10-2006	116	Chap. “ Connection Cable KeTop TTxxx” : Cable length in drawing has been corrected	sam
V1.1b->V1.2	03-2007	11, 16, 89	Type of USB connector has been added (Mini-B)	sam
		68	new registry in the example	
		146-147	Chap.“ EU Conformity and Type Examination“ has been added.	
V1.2->V1.3	08-2007	Alle	The style sheet of the document has been changed	sam
			The chap. “Standard keypad” has been added.	
			The chap. “Back-up battery” has been added.	
			The chap. „Junction Box JB 001“ has been added.	

Contents

1	Introduction	9
1.1	Purpose of the document	9
1.2	Target groups, pre-conditions	9
1.3	Intended Use of the Handheld Terminal	9
1.4	Notes on this document	10
1.5	Documentation for further reading	11
2	Safety notes	12
2.1	Representation.....	12
2.2	General safety instructions.....	13
2.3	Personnel safety instructions	15
3	General product discription	16
3.1	Construction	17
3.2	Ergonomic Features.....	18
3.3	Housing	18
3.4	Operating and Display Panel	18
3.5	Hardware.....	19
3.6	Type Plate	19
4	Connection	20
4.1	Cable Entrance Area.....	20
4.2	Cable Routing in Cable Entrance Area	21
4.3	Power Supply	23
4.4	Emergency Stop Button and grey Stop Button	23
4.5	Enabling Switch.....	25
4.6	Foreseeable Misuse of Enabling Switch	32
4.7	Ethernet.....	33
4.8	RS-422-A	35
4.9	RS-232-C	37
4.10	Serial port female connector S2 for Debug Interface (RS-232-C).....	38
4.11	USB memory sticks.....	38
5	Membrane Keypad	41
5.1	Standard Keypad	41
5.2	Robotic Keypad.....	45
5.3	Numbering of LEDs at Robotik Keypad	48
6	Display	50
6.1	Touch Screen.....	50
7	Software	52
7.1	Windows CE.....	52
7.2	Generation of Program for Windows CE	53

7.3	KeTop API Design.....	53
7.4	Functions.....	55
7.5	Update API Design.....	67
7.6	Initialising.....	68
7.7	Program for Starting the Application and KeTop API.....	71
7.8	RDP – Connection via Remote Desktop Protocol.....	74
7.9	KVC – KEBA Virtual Channel.....	81
7.10	Remote Software ActiveSync.....	91
8	KeTop - Specific Operating Instructions	93
8.1	Setting of Date and Time.....	93
8.2	KeTop Configuration Tool (ConfigTool).....	94
8.3	Installation of Programs.....	100
8.4	Saving Files.....	100
8.5	Transferring Files.....	101
8.6	Changeover from KeTop T100.....	102
9	Options	103
9.1	Override Potentiometer	103
9.2	Electronic Handwheel.....	103
9.3	Illuminated Push-Button	104
9.4	Key Switch.....	104
9.5	Joystick.....	104
10	Accessories.....	105
10.1	Wall bracket KeTop WB090 and KeTop WB095.....	105
10.2	Wall Bracket with Height Adjustment plate KeTop WBxxx.....	107
10.3	JB 001 Junction Box.....	109
10.4	KeTop CB211 Connection Box	119
10.5	Connection Cable KeTop TTxxx.....	126
10.6	Intermediate Cable KeTop IC2xx	127
10.7	Download Cable KeTop XD040	128
10.8	Back-up battery	129
11	Transport Conditions	133
12	Disposal of the KeTop	134
13	Technical Data.....	135
14	CE Conformity, Directives and Standards.....	138
14.1	European Union Directives.....	138
14.2	Machinery Safety.....	139
14.3	Electromagnetic Compatibility	149
14.4	List of the appropriate EC directives and applied standards	160
15	Conformity and Type Examination.....	162
15.1	EU Conformity Declaration.....	162

15.2 ROHS Conformity Declaration163
15.3 Type-Examination Certificate164

1 Introduction

1.1 Purpose of the document

This document describes the handheld terminal KeTop T50VGA.

1.2 Target groups, pre-conditions

Target group	Knowledge and skills pre-requirements
Project engineer	<ul style="list-style-type: none"> • Basic technical training (University of Applied Science/University level or corresponding professional experience), • Knowledge in: <ul style="list-style-type: none"> • working mode of a PLC, • safety instructions, • the application.
Commissioning technician	<ul style="list-style-type: none"> • Fundamental technical training (technical college, qualification as an engineer or corresponding practical experience). • Knowledge of: <ul style="list-style-type: none"> • Safety regulations, • The method of operation of the machine or plant, • Fundamental functions of the application, • System analysis and troubleshooting, • The setting possibilities at the operating devices.
Service technician	<ul style="list-style-type: none"> • Basic technical training (Vocational high school, engineer training or corresponding professional experience). • Knowledge in: <ul style="list-style-type: none"> • working mode of a PLC, • safety instructions, • working mode of machine or plant, • Diagnosis possibilities, • systematic error analysis and rectification.

1.3 Intended Use of the Handheld Terminal

The intended use of the Handheld Terminal covers tasks like watching and parametrizing up to operating of machines e.g.:

- Injection moulding machine
- Robots
- Machine tools
- Textile machines
- Printing machines
- Theater backdrops
- and similar.

in normal operating modes

- Automatic

as well as

- Setting,
- Teaching,
- Testing,
- and similar.

in half automatic or manual mode.

Enabling switches and an emergency stop button are the safety elements of the device.

The Handheld Terminal is intended for fixed connection to a robot. Handheld Terminals for temporary connection must not have a red-yellow emergency stop button.

To meet the safety category 3 in accordance with EN 954-1, the safety functions are realized with 2 circuits.

The selection of the Handheld Terminal which is suitable for the machine and the projecting of the additional functions must obey the necessary hazard analyses and risk assessment bounded by law.

For intended use of the Handheld Terminal also please pay attention to chapter *CE Conformity, Directives and Standards*.

1.4 Notes on this document

This manual is part of the product. It must be retained over the whole lifetime and if necessary referred to subsequent owners or users of the product.

1.4.1 Contents of document

- Safety Precautions
- General Instructions
- Connection
- Membran Keypad
- Display
- Software

- Specific Operating Instructions
- Options
- Accessories
- Transport Conditions
- Disposal
- Technical Data
- CE Conformity, Directives and Standards

1.4.2 Not contained in this document

- Mask description of the application

1.5 Documentation for further reading

Doc.No.	Description	Target group
-	-	-

2 Safety notes

2.1 Representation

At various points in this manual you will see notes and precautionary warnings regarding possible hazards. The symbols used have the following meaning:



DANGER!

- indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
-



WARNING!

- indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury..
-



CAUTION!

- means that if the corresponding safety measures are not taken a potentially hazardous situation can occur which, if not avoided, may result in property damage or slight bodily injury.
-

NOTICE

- NOTICE used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.
-



- This symbol reminds you of the possible consequences of touching electrostatically sensitive components.
-

Information

Informations on use of equipment and useful practical tips are identified by the symbol "Information". "Information" do not contain any information that draws attention to potentially dangerous or harmful functions.

2.2 General safety instructions

The device was developed, manufactured, tested and documented in accordance with the applicable safety standards. If you follow the instructions regarding safety and use as described in this manual (see chap. *Intended Use of the Handheld Terminal*), the product will, in the normal case, neither cause personal injury nor damage to machinery and equipment.

The instructions contained in this manual must be precisely followed in all circumstances. Failure to do so could result in the creation of potential sources of danger or the disabling of safety features integrated in the handheld terminal.

Apart from the safety instructions given in this manual, the safety precautions and accident prevention measures appropriate to the situation in question must also be observed.

Handling of KeTop

You have chosen a high-quality KeTop that is equipped with highly sensitive state-of-the-art electronics.

To avoid malfunctions or damage through improper handling, follow these instructions during operation.



WARNING!

- The following application areas are expressly excluded for the KeTop:
 - Use in areas prone to explosion or fire
 - Use in mining
 - Outdoor use

Other products must be used for these applications!



- The KeTop housing must not be opened (exception: cable entrance area) , as the KeTop is sensitive to electrostatic discharge.
-

NOTICE

- Turn off the power supply before opening the cable entrance area of the KeTop. Otherwise the components could be destroyed or undefined signals could occur.
 - Make sure that nobody can fall over the cable to avoid that the device falls to ground.
 - Take care not to squeeze and thus damage the cable with any object.
 - Do not lay the cable over sharp edges to avoid damaging the cable sheath.
 - If you do not use the device, hang it into the wall bracket KeTop WBxxx provided for storage.
 - Do not lay down the device with the operating side facing down to avoid damaging the operating elements.
 - Never lay the device onto unstable surfaces. It could fall to ground and thus be damaged.
 - Never lay the device close to heat sources or into direct sunlight.
 - Avoid exposing the device to mechanical vibrations, excessive dust, humidity or to strong magnetic fields.
 - Never clean the device, operating panel and operating elements with solvents, scouring agent or scrubbing sponges. For cleaning the device, use a soft cloth and a bit of water or a mild cleaning agent.
 - Make sure that no foreign objects or liquids can penetrate into the device. Check at regular intervals the protective covers of the device, if all housing screws are firmly tightened and if the housing or the cable entry is damaged.
 - If the device shows any defect, please send it, including a detailed error description, to your supplier or the relevant after-sales service office.
 - If the KeTop is equipped with a touch screen, then operate the touch screen with fingers or use a touch-pen. Never use sharp objects (e.g. screwdriver,...) for operating the touch screen. This could damage the touch screen.
-

2.3 Personnel safety instructions



WARNING!

Danger to persons by electric shock!

- Only supply the device with power from voltage sources having protective extra-low voltage (e.g. SELV or PELV acc. to IEC 61131-2)
 - Only connect voltages and circuits which are safely separated from dangerous voltages (e.g. by means of sufficient insulation) to connections, terminals or interfaces up to a rated voltage of 50 V.
-



CAUTION!

Danger of fire in case of component failure!

- In final application, make sure the 24 V DC power supply to the operator panel is adequately fused!
Max. permissible fuse is 20A! (see chap. *Power supply operator panel*)
-



WARNING!

- For the right projecting of the Handheld Terminal the manufacturer must enforce a hazard and risk analysis. The following safety aspects must be considered:
 - Right cable length for limitation of workspace.
 - Is an emergency stop button necessary and permissible?
 - Is the safety category for the application sufficient?
 - The device may be operated in faultless condition only and the operating instructions must be observed.
 - The operator must have a sufficient educational level and must know details of intended use described in the user's manual.
 - The safety advices in the following chapters must be considered absolutely.
 - Further informations to safety and EMC are included in chapt. „CE Conformity, Directives and Standards“. They must be considered absolutely.
-

3 General product discription

The handheld terminal KeTop is a portable operating and display device with rugged design and Windows-CE compatible electronics. Using a high-performance Iprocessor and providing a serial interface and Ethernet, the KeTop is ideal for a great variety of applications (see chapt. *Intended Use of the Handheld Terminal*).


All tasks can be solved graphically and in color, and operation is intuitive using a touch screen.

Instead of rotating mass memories such as floppy disk and hard disk drives that are not suitable for rough environmental conditions, the KeTop uses scalable FLASH and RAM banks.

The KeTop provides a Windows CE platform for applications generated with common visualization tools or with C#, Visual Basic.NET or Visual C++. Moreover, the KeTop can be connected as a client to a Win NT, Win 2000 or Windows XP server.

Through the use of optional operating and control elements, the KeTop can easily be adapted to the specific application.

3.1 Construction

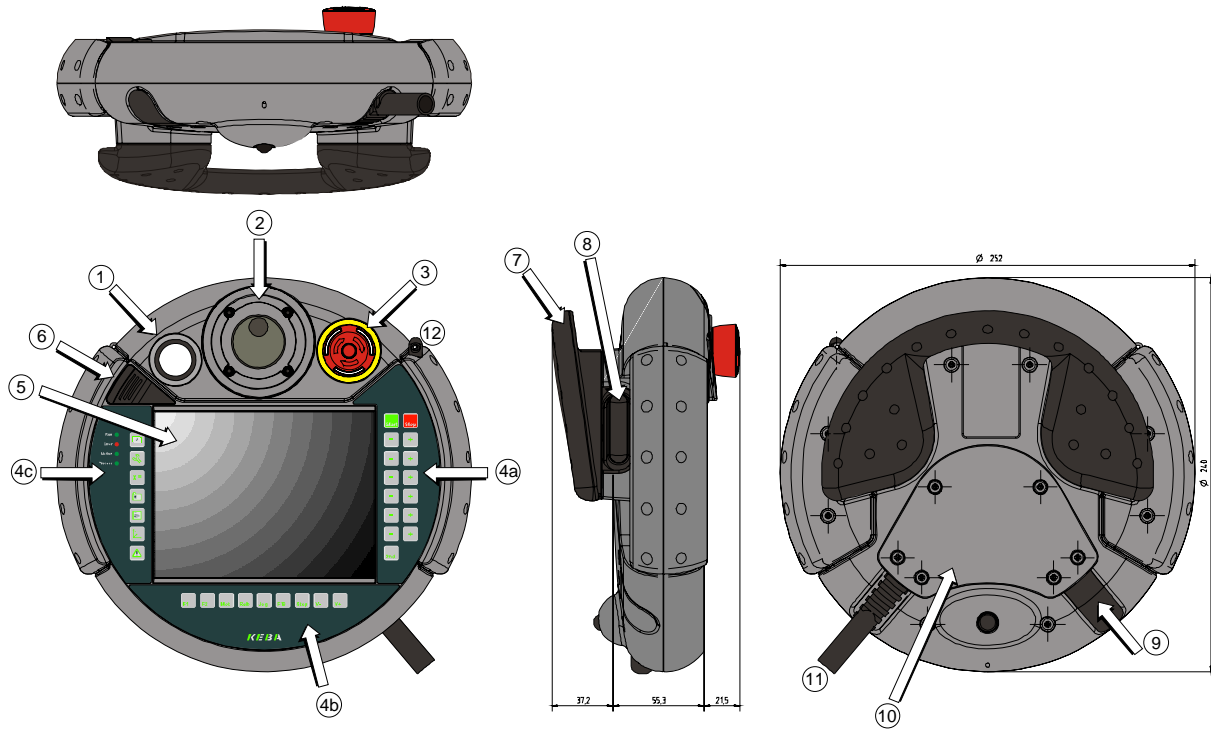

- | | |
|---|---|
| <p>1 location for (option):
illuminated push-button
key switch
override potentiometer</p> <p>2 location for (option):
electronic handwheel
3 axis joystick</p> <p>3 emergency stop switch (twin circuit) or stop switch
(option)</p> <p>4a membrane keypad with 15 keys</p> <p>4b membrane keypad with 9 keys</p> <p>4c membrane keypad with 4 status LEDs and 7 keys</p> <p>5 color display with touch screen:
6.5" TFT-LCD VGA resolution (640 x 480)</p> | <p>6protection cover for USB host (USB memory
sticks)</p> <p>7multigrip handle</p> <p>8two 3-position enabling switches (left and right),
twin circuit</p> <p>9blind plug for cable outlet not used
(to meet protection degree IP65)</p> <p>10cable entrance area</p> <p>11strain relief and bend protection for connection
cable (delivered with the cable)</p> <p>12.....touch stylus (integrated in housing)</p> |
|---|---|

NOTICE: All optional operating elements are described in the chapter „Options" on page 103.

Construction of KeTop T50VGA

3.2 Ergonomic Features

- Multigrip handle
- Round housing
- Different holding positions
- Operation by right-handed and left-handed people
- Desk top operation
- Operation in wall bracket
- The cable outlet can be on the left or right side of the housing.
- Easy-to-read display

3.3 Housing

- Vibration- and shock resistance
- Housing made of non-flammable material (UL 94-V0), impact-resistant, withstands water, cleaning agents (alcohol and tensides), oil, drilling oils, grease and lubricants
- Double-walled, extremely sturdy ABS housing. Drop-tested on industrial flooring from a height of 1.5 m (59.1 in).

3.4 Operating and Display Panel


- Membrane keys with tactile feedback
- 4 status LEDs (max. 12; 4 on each keypad)
- Buzzer optional
- Resistive touch screen, to be operated with finger or stylus
- Backlit color LC display
6.5" TFT (640x480 pixels)

3.5 Hardware

- CPU Intel PXA270 416MHz
- Memory:
 - SDRAM: max. 256 MB, FLASH: max. 128 MB
- Interfaces:
 - Ethernet 10/100MBit (10MBit default)
 - Serial interface:
 - RS-422-A or RS-232-C (selectable by dip switch),
 - RS-232-C (debug interface in device)
 - USB host, with protection cover to guarantee IP65 when the device is closed:
 - For connection of various USB memory sticks.
 - USB client in cable entrance area (debug and ActiveSync device), USB-Receptacle, series Mini-B

3.6 Type Plate

Sample of a KEBA type plate:

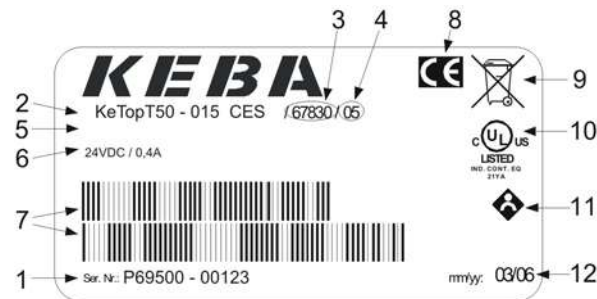


- 1 **Serial number**
- 2 **Material name**
- 3 **Material number**
- 4 Revision number of device
- 5 Further information (optional)
- 6 Technical data (here: power supply)
- 7 Bar code
- 8 CE marking
- 9 Advice for electronic scrap regulation
- 10 UL marking
- 11 NSBIV marking
- 12 Date of production (month/year)

Description of a KEBA type plate

4 Connection

4.1 Cable Entrance Area

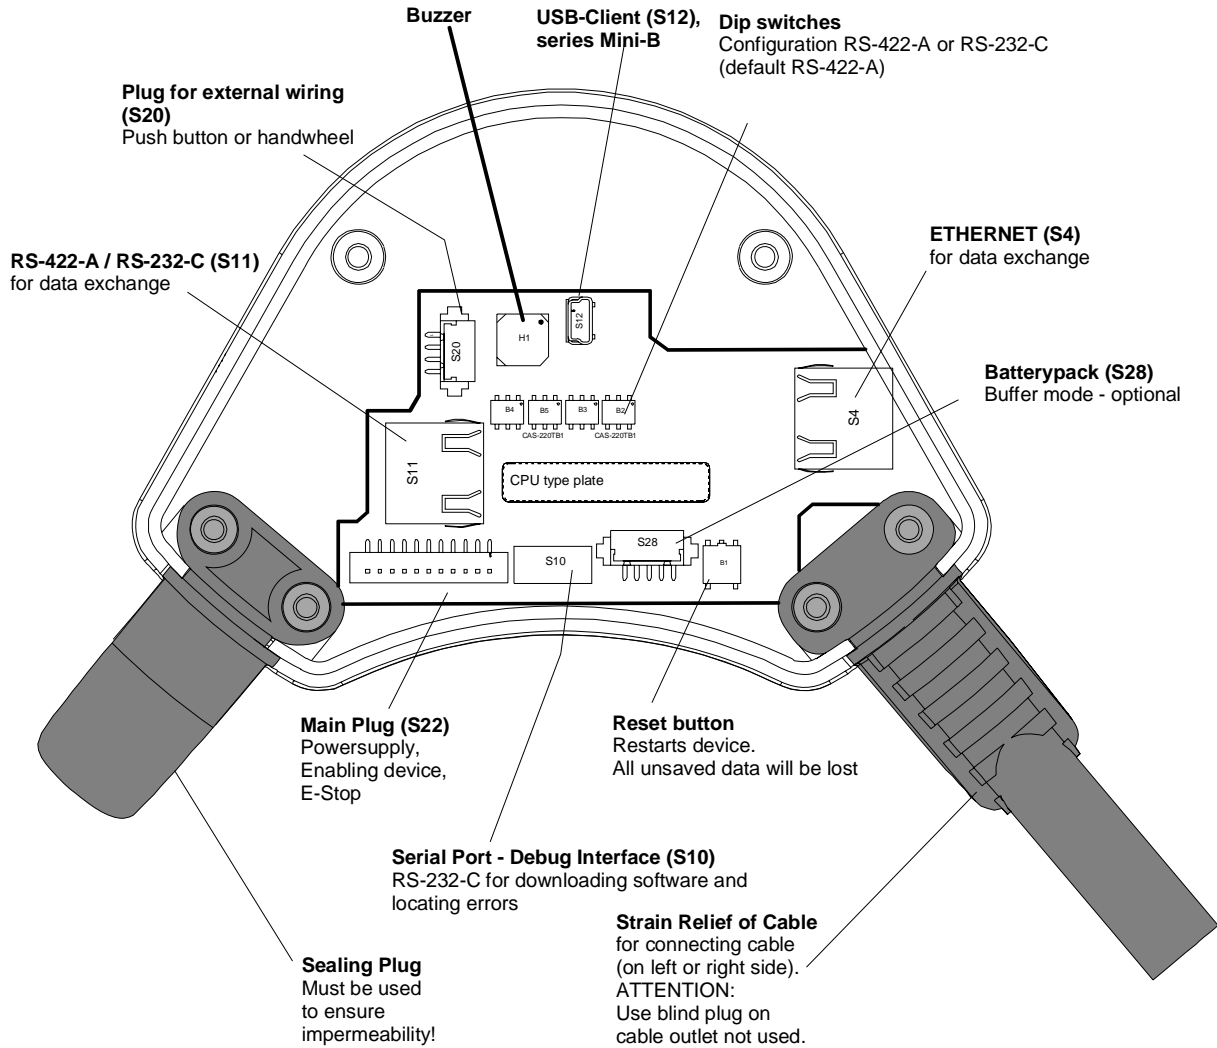

Cable entrance area of the KeTop

4.2 Cable Routing in Cable Entrance Area


After opening the cable entrance area, the connecting lines can be routed as described in the following chapters. Before opening the KeTop please pay attention to the following safety instructions:

Instructions for opening the cable entrance area:

- Lay the KeTop with the display facing down onto a plane and clean table (preferable on ESD pad) and take care not to damage the KeTop and its operating elements.
- For opening and closing the cable entrance area use the following type of screwdriver: „Phillips size 2“.

Instructions for modifications in the cable entrance area:

- Unplug the main connector (S22) by pulling on its wires with your fingers. Do not use any sharp objects.
- For unplugging the RJ-45 jack (S11 or S4), actuate the locking lever:

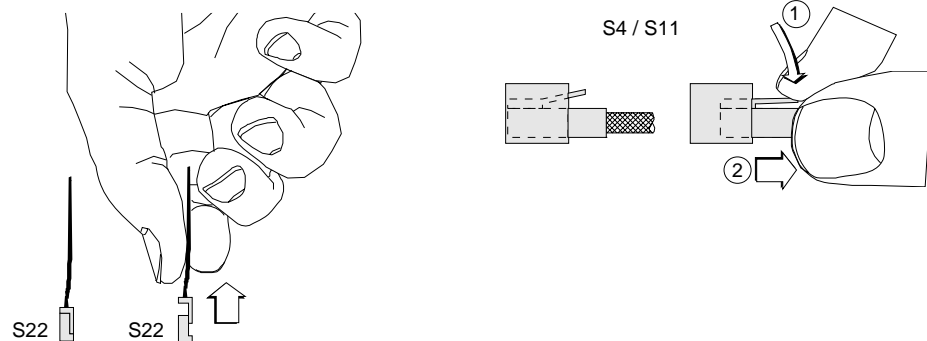

Make sure that the connectors S22 and S4 / S11 correctly snap in when you plug them in. Otherwise the emergency stop functionality (S22) or the correct shielding (S4 / S11) might not be given any more.


Instructions for closing the cable entrance area: Make sure that

- the sealing is clean, not damaged and correctly positioned in the cable entrance area,
- no cables are squeezed in,
- the cover of the cable entrance area is attached again with all 6 screws (torque: 0.4 bis 0.5 Nm). Otherwise the protection degree cannot be guaranteed.

Information:


The position of connectors S11 (RS-422-A / RS-232-C) and S4 (Ethernet) in KeTop T50VGA is just the other way round like in KeTop T100. Users of both devices please take care for this!

4.2.1 Cable outlet RS-422-A

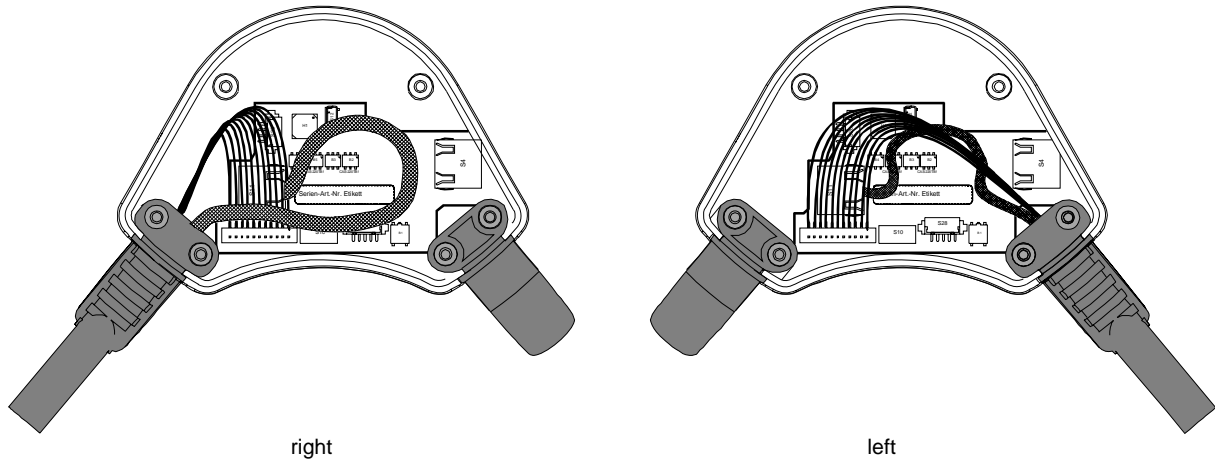

Cable outlet on left and right side if the RS-422-A interface is used.

4.2.2 Cable outlet Ethernet

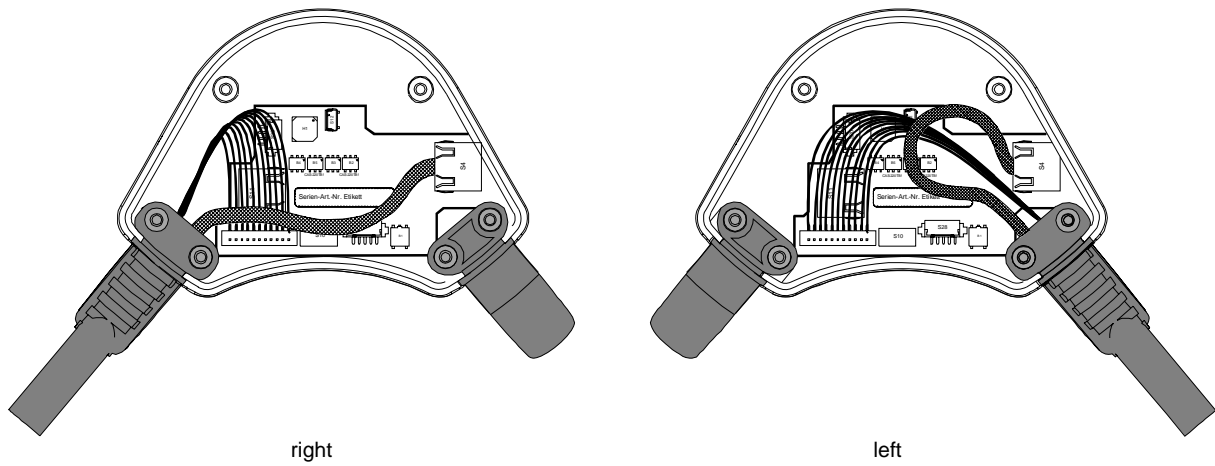

Cable outlet on left and right side if the Ethernet interface is used.

4.3 Power Supply



WARNING!

- All supply circuits connected to KeTop must be protected with a fuse of a maximum of 3.15 A.

Notice

- When planning the power supply, take into account the voltage drop on the KeTop TTxxx connection cable:

Specification of power supply lines in the KeTop TTxxx connection cable:

Cross section: AWG24 (0.24mm²)

Material: zinc-coated copper strand

Line resistance: ≤ 90 Ohm/km (≤ 145 Ohm/mile)

- The nominal supply voltage directly on the handheld terminal (without KeTop TTxxx connection cable) is:
+24 VDC (fully operational in the range: 19,2-30 VDC).
- Power consumption:
9.6 W (400 mA at 24 V DC)
- Maximum interruption time of supply voltage:
≤ 10 ms (lt. IEC 61131)

4.4 Emergency Stop Button and grey Stop Button

The emergency stop button respectively the grey stop button used on the KeTop features two circuits. The contacts are normally closed.

The red-yellow emergency stop button of the handheld terminal meets the requirements of the EN ISO 13850. It must be designed as an emergency stop of category 0 or category 1 (see EN 60204-1 chapter 9.2.5.4.2) on the basis of the risk assessment for the machine. The connection of the positive-break contacts to an appropriate monitoring system must meet the safety category which is defined by means of the risk assessment (in accordance with EN 954-1) of the machine.

Optionally the KeTop is also available with a grey stop button instead of the red-yellow emergency stop button. In principle the grey stop button has the same functionality as the red-yellow emergency stop button.

If the handheld terminal is not plugged in, the grey color of the stop button should avoid the usage of the non-effective (emergency) stop button in dangerous situations.

The grey stop button fulfils also all mechanical aspects of the EN ISO 13850 and differs from the emergency stop button only by its color.



WARNING!

- **Not fully functional emergency stop devices may have fatal consequences! Emergency stop switches which are red-yellow marked must be effective under all circumstances in all operating modes of a machine or plant.**

Store handheld terminals with not operational red-yellow emergency stop switches on a place where the operator cannot see it, so that he can not mistake the device.

Handheld terminals which are plugged in and out frequently for temporarily use, must not have a red-yellow emergency stop switch. Such devices must be equipped with a grey stop switch.

- **Resetting an activated emergency stop facility must not result in uncontrolled start-up of machines or installations.**
- **The emergency stop button does not replace other safety facilities.**
- **The emergency stop button on the handheld terminal does not replace the emergency stop buttons to be mounted directly on the machine**
- **Some mechanical errors in emergency stop switches can be recognized at operation only.**

Test the function of the emergency stop switch when the device had been exposed to mechanical shock (e.g. it had been fallen on the ground)

Note for maintenance:

Additionally the emergency stop switch must be tested cyclic (6 monthly). Watch the machine stopping after the emergency stop switch had been pushed.

- **For further informations to emergency stop switch observe chapt. *CE Conformity, Directives and Standards.***

The manufacturer guarantees a lifetime of > 50,000 switching cycles.

4.5 Enabling Switch

The KeTop is equipped with two enabling switches, one at the left and one at the right side of the device. This allows a left- and right-hand operation of the enabling switch. Both enabling switches are equivalent and parallel switched. So for enabling only one of both enabling switches must be activated.

The enabling switch consists of a 3-position operating element and an separated evaluation electronics. An essential feature are the continuous two-channel circuits beginning from the actuating elements up to the connecting terminals. For the evaluation circuits different technologies and circuits are used. Due to the electronic switching contacts, their lifetime does not depend on the load provided the nominal values of the load (ohmic, inductive and capacitive) are not exceeded.

The switching elements of the enabling switches are protected against reversed polarity. The outputs of both circuits are protected against short circuits and overload.

Circuit 1: thermal protective circuit

Circuit 2: fold back line

4.5.1 Functioning

The actuating element consists of two symmetrically arranged slides. The position of these slides is detected by electrical switches and transmitted to the evaluation electronics.


Positions of enabling switch:

Position	Function	Enabling switch	Contacts
1	home position	is not pressed	enabling outputs are open
2	enabling	is pressed	enabling outputs are closed
3	panic	is pressed strong	enabling outputs are open

For the enabling switch, the following switching sequences are possible:

4.5.1.1 Enabling

Home position \boxed{x} enabling \boxed{y} home position

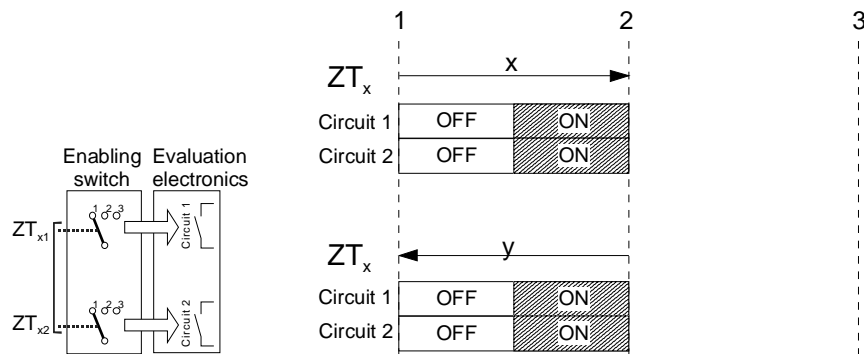


x ... L (Left) or R (Right)

Contact travel diagram for enabling

4.5.1.2 Panic

The pushing of the actuating elements into the panic position is evaluated in a way that the enabling position is skipped when the actuating elements are released.

Home position \boxed{x} enabling \boxed{u} panic \boxed{v} home position

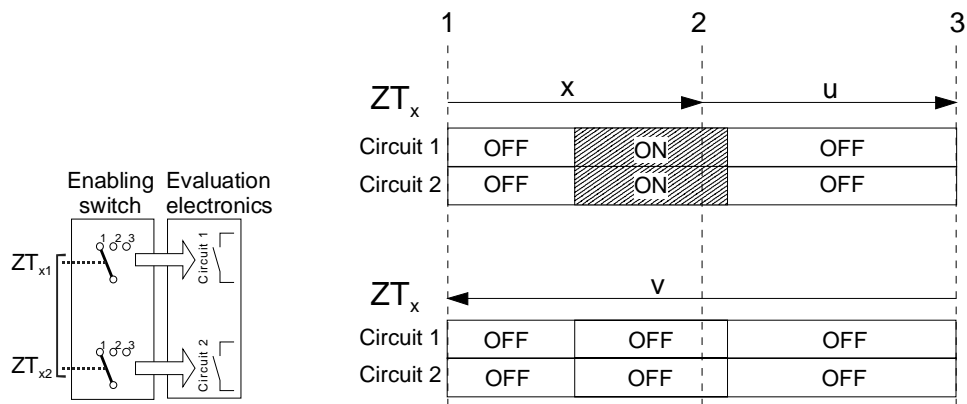

x ... L (Left) or R (Right)

Contact travel diagram for panic

Information

- At the KeTop, the enabling switches always feature two circuits.

To meet the safety category 3 in accordance with EN 954-1:1996, the enabling switch must be realized with 2 circuits.

The safety category 3 means, that one failure must not lead to the loss of the safety function, and whenever possible, the single failure is detected.


The chapters „Example of Connection with PILZ PST1 Control Relay“ and “Example of Connection with ELAN SRB-NA-R-C.27/S1 Control Relay” show how the **safety category 3** can be fulfilled with the KeTop and its safety-related parts. The entire concept of the machine must be laid out according to the principles of safety category 3.

The monitoring of the simultaneity by the control relay is necessary, because otherwise maybe a failure culmination would not be recognised and this would cause the loss of safeness:

Example: If one circuit of the enabling device switches to the enabled state as a result of a failure and after some time the second circuit also switches to the enabled state as a result of an failure, then no de-energisation by the enabling device would be possible.

Further the EN 60204-1:1997 prescribes that the enabling switches shall be connected to a category 0 stop or a category 1 stop, that means the energy must be switched off.

4.5.2 Example of Connection with PILZ PST1 Control Relay

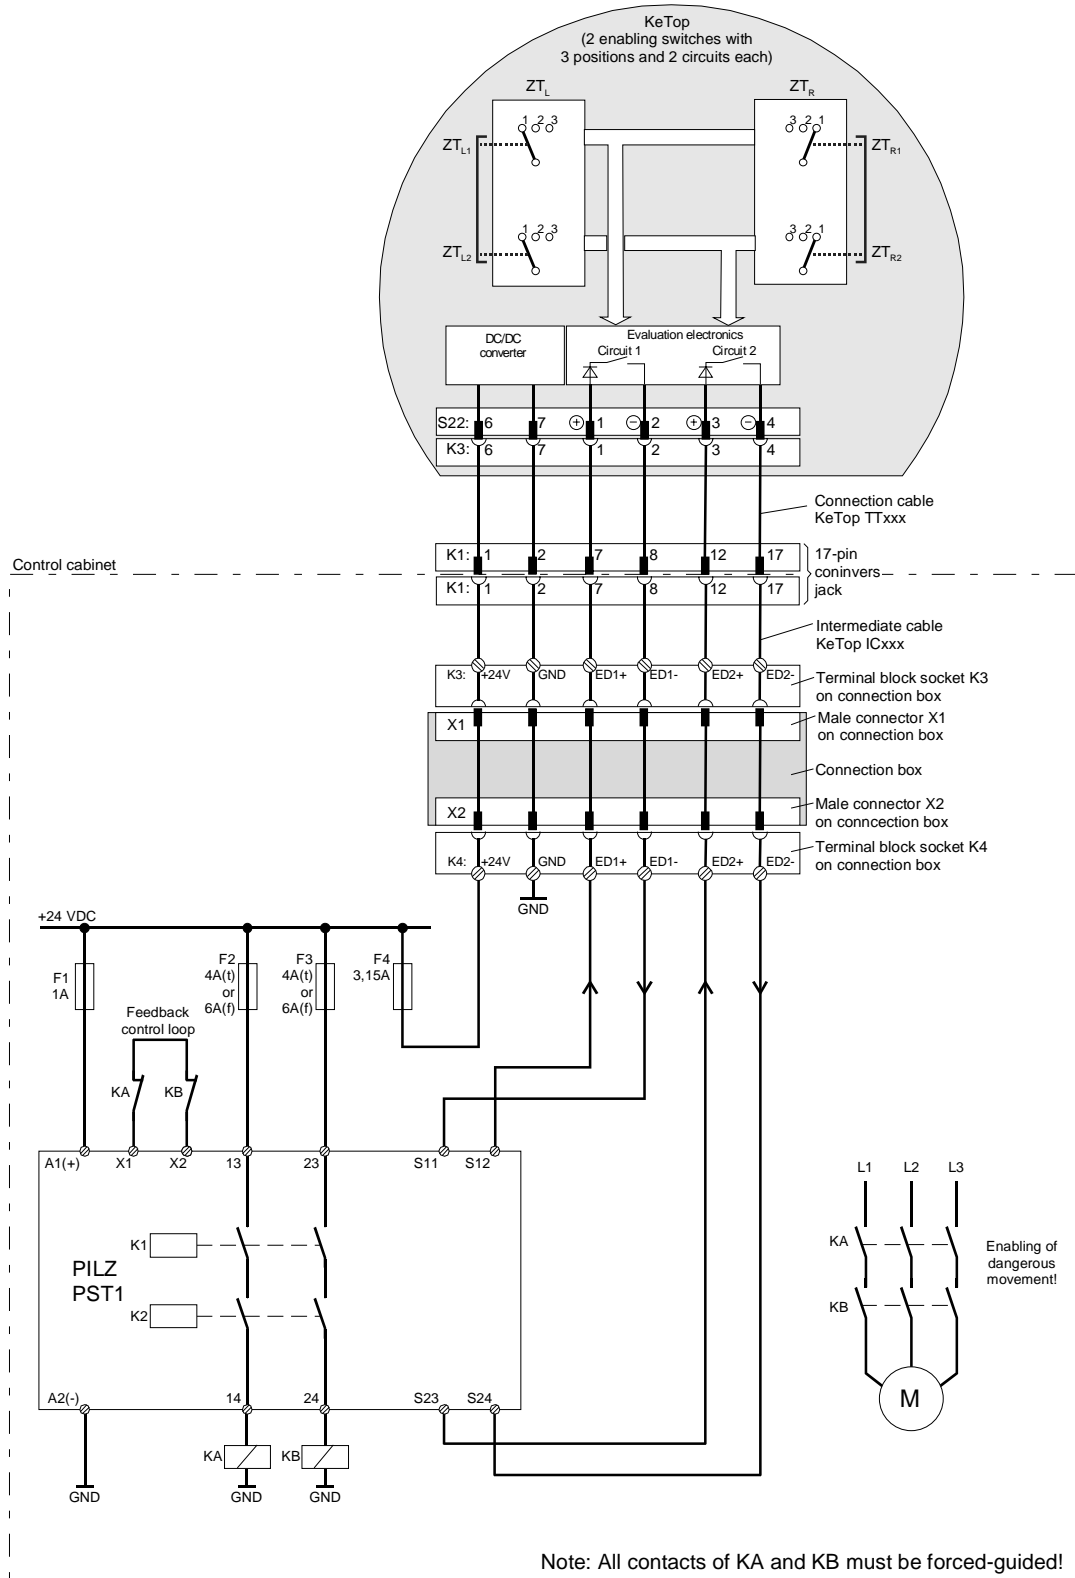

Suggested wiring of enabling switches to fulfill safety category 3 with PILZ control relay. Also follow the instructions described in the PILZ operating manual about the PST1 device.

Functional procedure:


- Only if both channels are activated „simultaneously“ (by pressing one of the enabling switches) both output relays K1 and K2 will energize and the output contacts 13-14 and 23-24 will close.

- The output relays K1 and K2 will not energize if
 - only one enabling channel is activated (in case of a defect),
 - the tolerance value for the simultaneity period is exceeded,
 - the feedback control loop X1-X2 is open.

- If one enabling channel is deactivated after being simultaneously activated (by releasing the enabling switch or in case of a defect), the output relays K1 and K2 will return to their initial position again. The forced-guided output contacts 13-14 and 23-24 will open. The output relays will energize again only after both enabling channels have been deactivated and simultaneously activated once again.

In this way the enabling switches avoid that one single error makes the safety function inoperational. A single error will be recognized at the next cycle at the latest.

4.5.3 Example of Connection with ELAN SRB-NA-R-C.27/S1 Control Relay

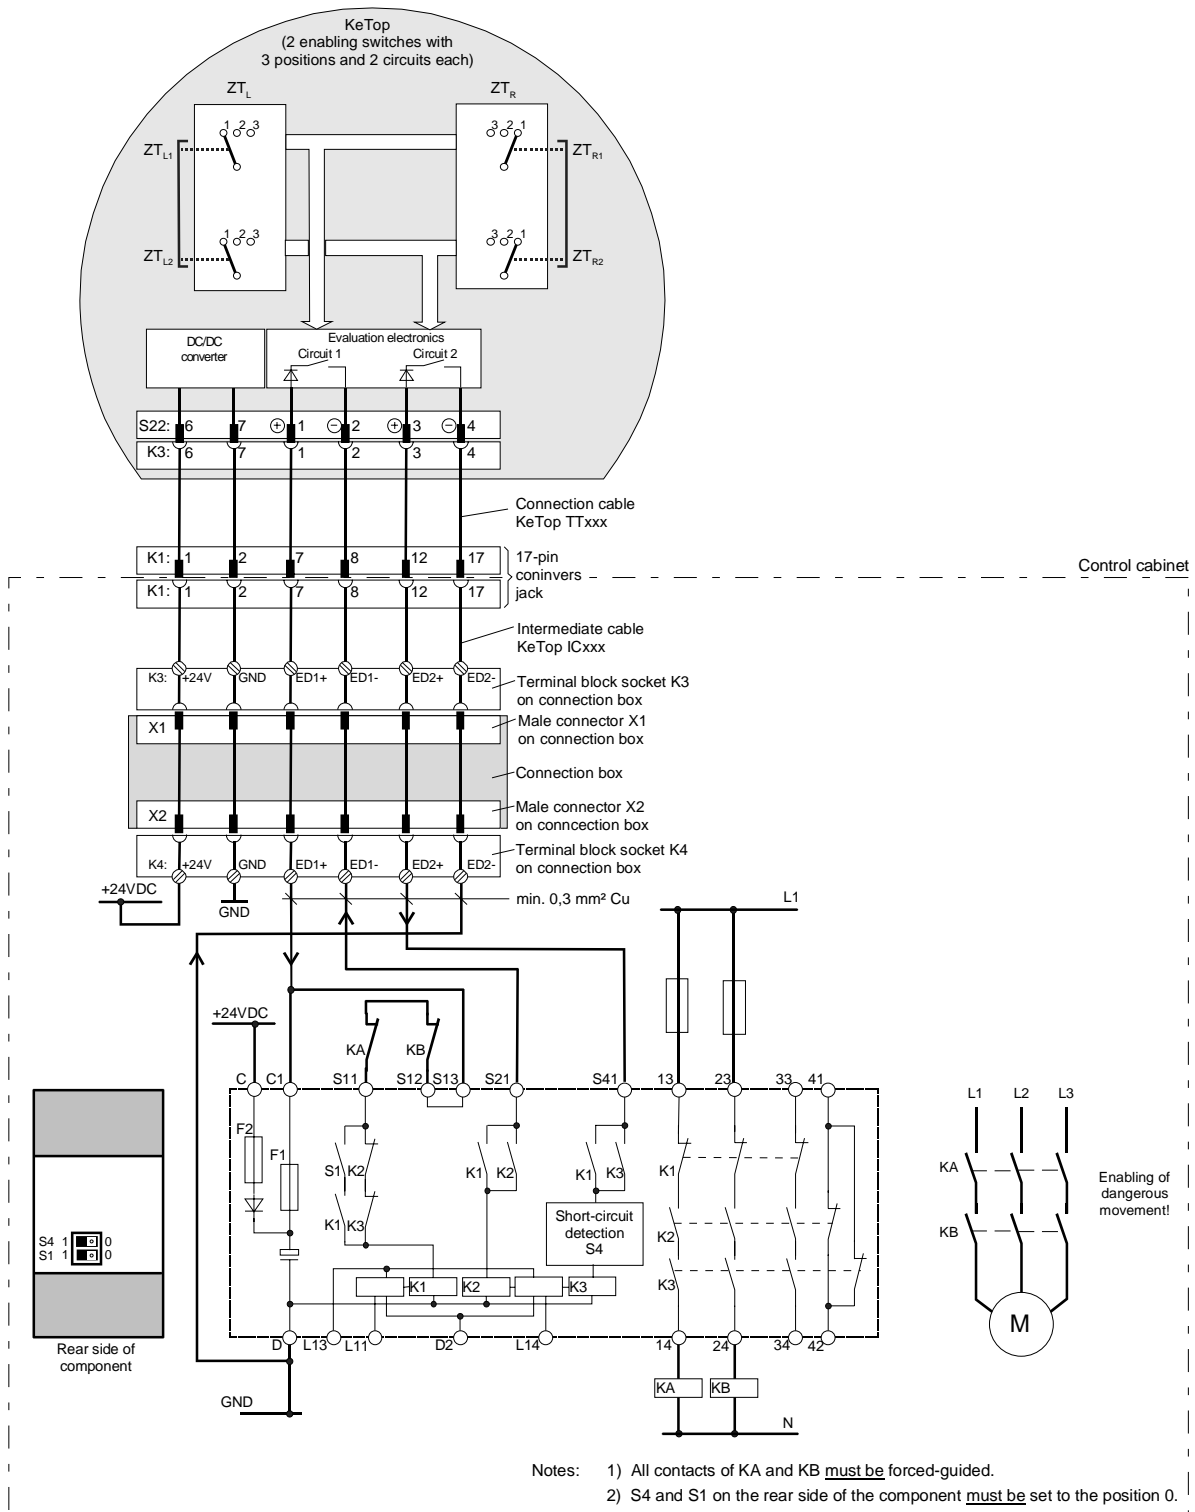

Suggested wiring of enabling switches for safety category 3 with the ELAN SRB-NA-R-C.27/S1 control relay. In addition follow the instructions of the operating manual about the SRB-NA-R-C.27/S1.

Functional procedure:

- Only if both channels are activated „simultaneously“ (by pressing one of the enabling switches) both output relays K2 and K3 will energize and the output contacts 13-14, 23-24 and 33-34 will close.

- The output relays K2 and K3 will not energize if
 - only one enabling channel is activated (in case of a defect),
 - the tolerance value for the simultaneity period is exceeded,
 - the feedback control loop S11-S12 is open.

- If one enabling channel is deactivated after being simultaneously activated (by releasing the enabling switch or in case of a defect), the output relays K2 and K3 will return to their initial position again. The forced-guided output contacts 13-14 and 23-24 will open. The output relays will energize again only after both enabling channels have been deactivated and simultaneously activated once again.

In this way the enabling switches avoid that one single error makes the safety function inoperational. A single error will be recognized at the next cycle at the latest.

4.6 Foreseeable Misuse of Enabling Switch

Foreseeable misuse means the not allowed fixing of the enabling switch in the enabling position. The foreseeable misuse of the enabling switch must be restricted. The following measures causing the stop of the machine in the manual mode are recommended:

- Inquiry of the enabling switch when turning on the machine/plant and inquiry of the enabling switch when changing the operating mode from automatic to manual (The enabling switch must not be in the enabling position.).
- The enabling switch must be released within a defined period and pushed into the enabling position again. The length of the period must be defined according to the activity.



WARNUNG!

- **The enabling switch is only suitable as safety function if the operator activating the enabling switch recognizes the dangerous situation in time so that he can immediately take the necessary measures to avoid such situations.**
As additional measure reduced speed of the movement can be necessary. The allowed speed must be determined by means of a risk assessment.
 - **The enabling switch is only used to enable commands for performing dangerous movements. The commands themselves must be activated by a separate operating element (key on handheld terminal).**
 - **Only the person who operates the enabling switch is allowed to work in the dangerous area.**
 - **For further informations regarding the enabling switch please pay attention to chapter *CE Conformity, Directives and Standards*.**
-

4.7 Ethernet

The standard version of the KeTop is equipped with an Ethernet interface. This interface is based on the 10BaseT specification and suitable for the half-duplex mode (the operation with 100Mbit requires a special connection cable)

The data communication for these interfaces takes place via the Ethernet connector S4 (marking: ETHERNET) in the cable entrance area of the KeTop.

The following interface parameters are defined and cannot be changed:

- 10 MBit (100MBit with appropriate cable possible)
- TCP/IP protocol

The Ethernet interface is selected under Windows CE as follows:

Start -> Settings -> Control Panel -> Network and Dial-up Connections:
Here you can select the Ethernet on-board interface *SMSC911x1*.



WARNING!

- **If the KeTop and the control do not communicate via a point-to-point connection, it may happen that the keypad data, for example, are transmitted with a delay.**


Therefore it is advisable to establish the connection between the control and the KeTop only via an Ethernet switch which enables a point-to-point connection.

The positions of the Dip switches in the cable entrance area are not relevant for this interface.

Information

- *The simultaneous use of the Ethernet interface and the COM interface (RS-422-A or RS-232-C) is only possible with an appropriate cable .*
-

4.7.1 Wiring diagram

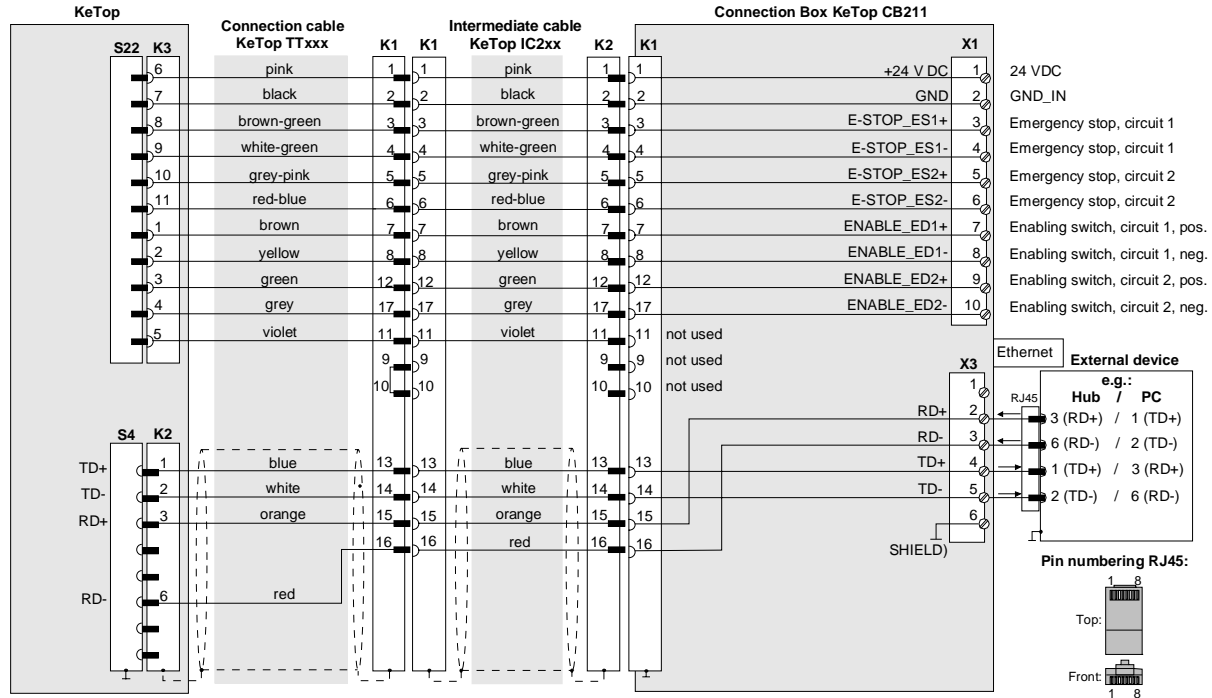

KeTop T50VGA with Ethernet via connection box KeTop CB211

4.8 RS-422-A

The serial interface can be used as RS-422-A or as RS-232-C interface (selection by Dip switches).


The communication takes place via the COM-SIO connector S11 in the cable entrance area of the KeTop.

Information

- The simultaneous use of the Ethernet interface and the COM interface (RS-422-A or RS-232-C) is only possible with an appropriate cable .

The RS-422-A interface assigned to the COM 5 interface port is in the software. The interface parameters are set via the WIN32API in the Windows operating system.

4.8.1 Wiring diagram

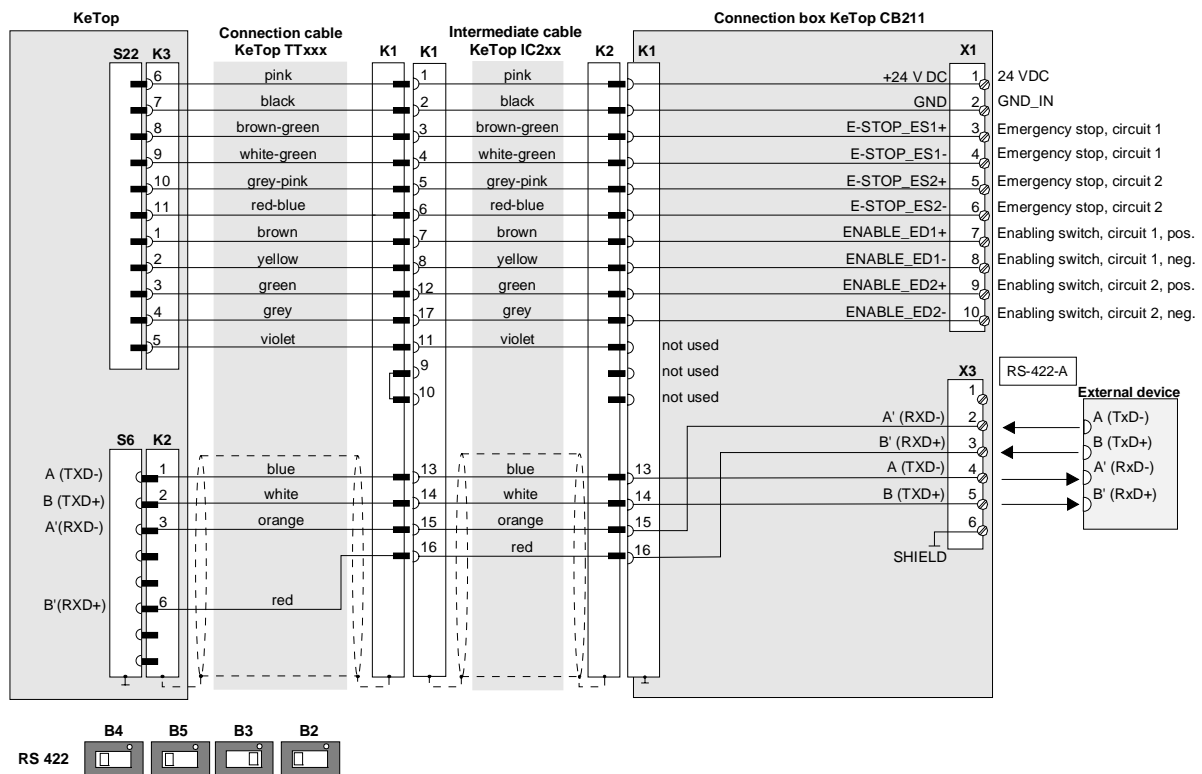

Connection of KeTop T50VGA with RS-422-A via connection box KeTop CB211

4.8.2 General information about the RS-422-A interface

- The A terminal of the generator shall be negative with respect to the B terminal for a binary 1 (MARK or OFF) state.
- The A terminal of the generator shall be positive with respect to the B terminal for a binary 0 (SPACE or ON) state.

To identify the lines, the voltage between the lines A and B can be measured by means of a voltmeter.

4.9 RS-232-C

The serial interface can be used as RS-232-C or as RS-422-AC interface (selection by Dip switches).


The communication takes place via the COM-SIO connector S11 in the cable entrance area of the KeTop.

Information

- The simultaneous use of the Ethernet interface and the COM interface (RS-422-A or RS-232-C) is only possible with an appropriate cable .

The RS-232-C interface assigned to the COM 5 interface port is in the software. The interface parameters are set via the WIN32API in the Windows operating system.

4.9.1 Wiring diagram

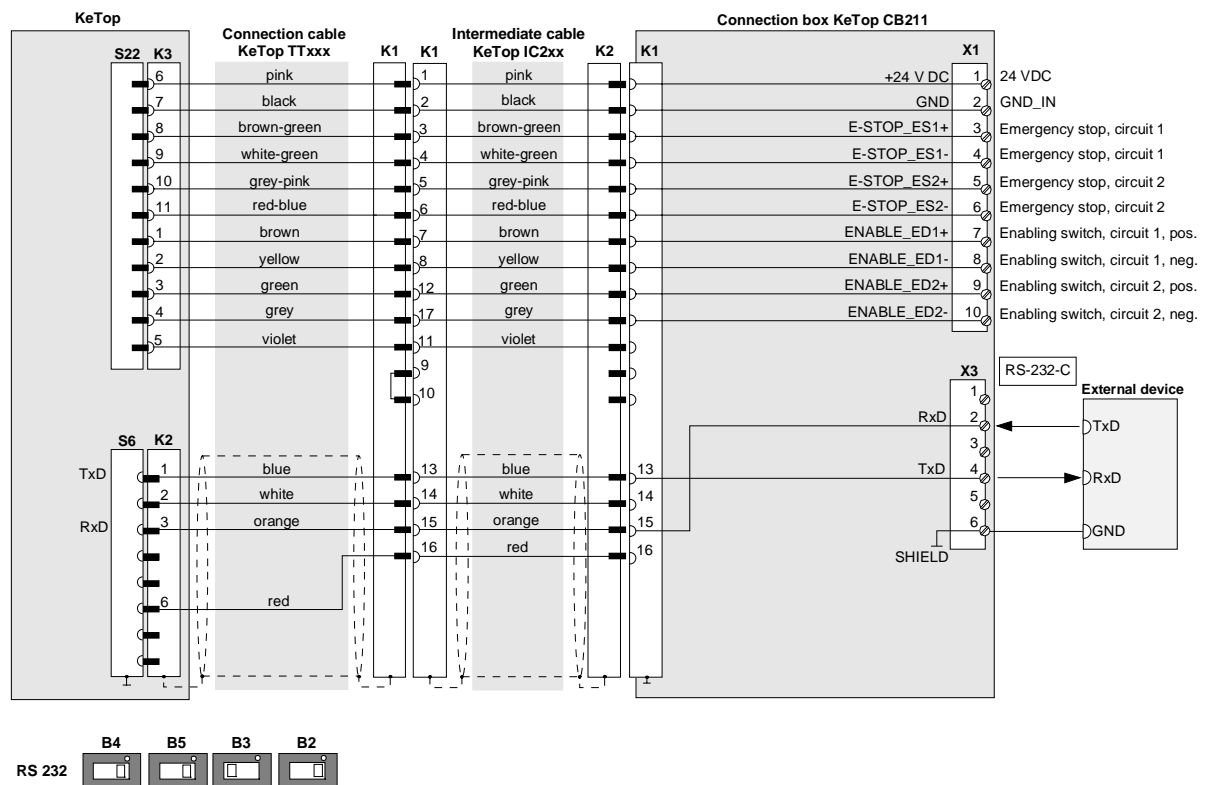

Connection of KeTop T50VGA with RS-232-C via connection box KeTop CB211

4.10 Serial port female connector S2 for Debug Interface (RS-232-C)

Using the „Boot-Loader“ software, the „serial port“ interface can be used for debugging and for downloading software. Using the remote software ActiveSync, it can be used for adjusting and transmitting data from and to a PC.

For that purpose, the download cable KeTop XD040 is available.

The following interface parameters are defined and cannot be changed:

- 38400 baud (until Bootloader V1.05)
115200 baud (from Bootloader V1.06 on)
- 8 data bits
- 1 stop bit
- No parity
- No handshake

The debug interface is assigned to the COM 1 interface port in the software.

The positions of the Dip switches in the cable entrance area are not relevant for this interface.

4.11 USB memory sticks

The following list gives an overview about the tested USB memory sticks and their manufacturers.

These USB memory sticks are recommended for the use in the KeTop.

Kingston Data Traveler:

- Manufacturer: Kingston
Type: USB 2.0 memory stick
Memory sizes: 128 MB and more


Transcend JetFlash:

- Manufacturer: Transcend
Type: USB 2.0 memory stick
Memory sizes: 128 MB and more

Notice

- *USB memory sticks from other manufacturers have not been tested. USB memory sticks from other manufacturers can cause problems.*

4.11.1 Plug-in the USB memory stick

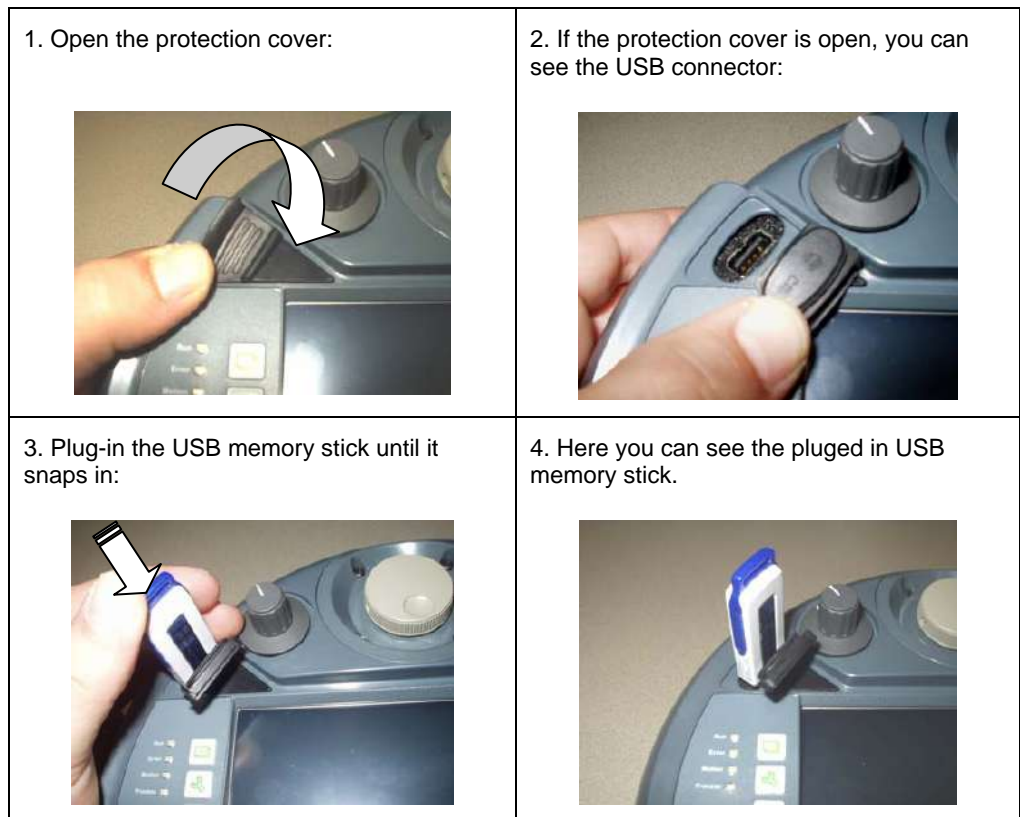

Information:

- *The USB memory stick will be detected immediately and will be shown as Hard Disk.*

4.11.2 Unplug the USB memory stick

Notice:

- Never unplug the USB memory stick during read/write operations!

1. Unplug the USB memory stick:



2. Close the protection cover correctly:



3. The protection cover must be closed completely, otherwise IP65 won't be guaranteed:



5 Membrane Keypad

The keypad assignment is stored in the registry and defined for the robotics membrane keypad in the following chapters.


Legend for the following drawings:

1	... key code decimal
2	... key code hex

Pressing the illuminated push button two key codes will be send (0x7D und 0x7E).


5.1 Standard Keypad

5.1.1 Keypad left

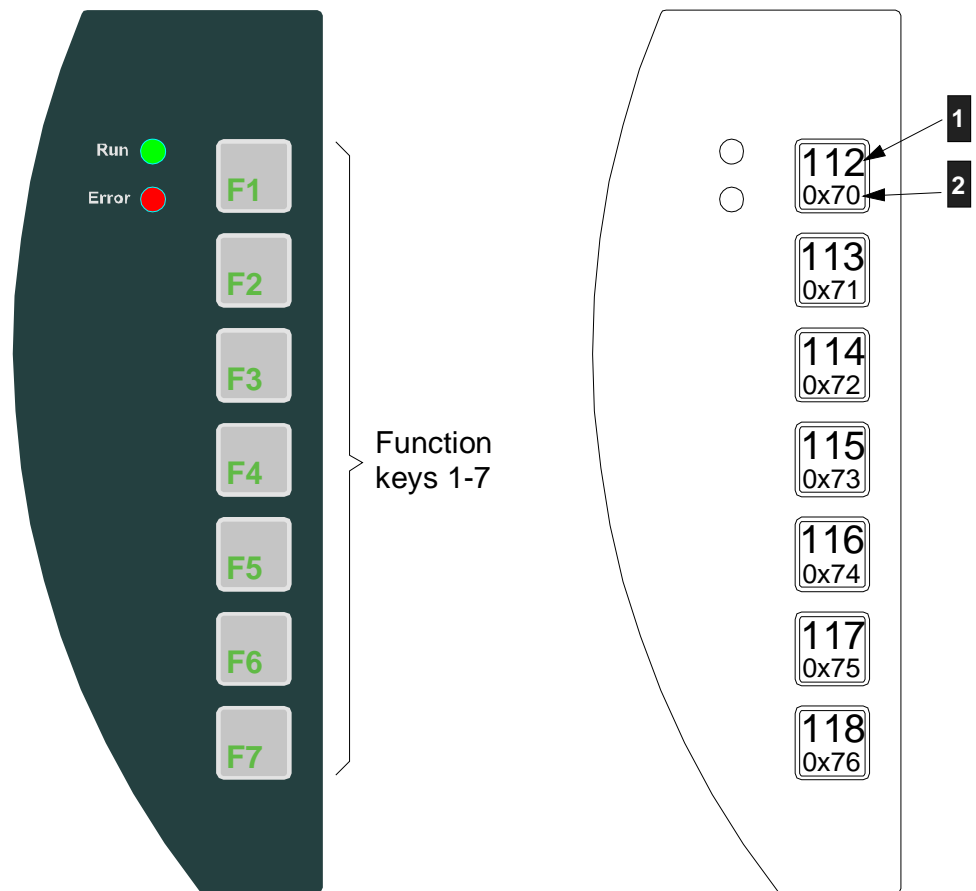


KeTop T50VGA standard keypad, left side

5.1.2 Keypad right

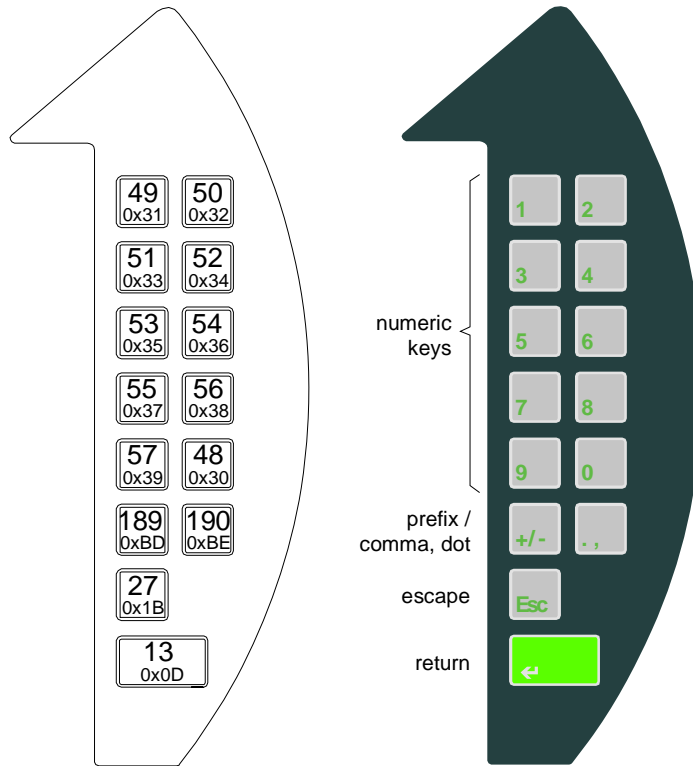





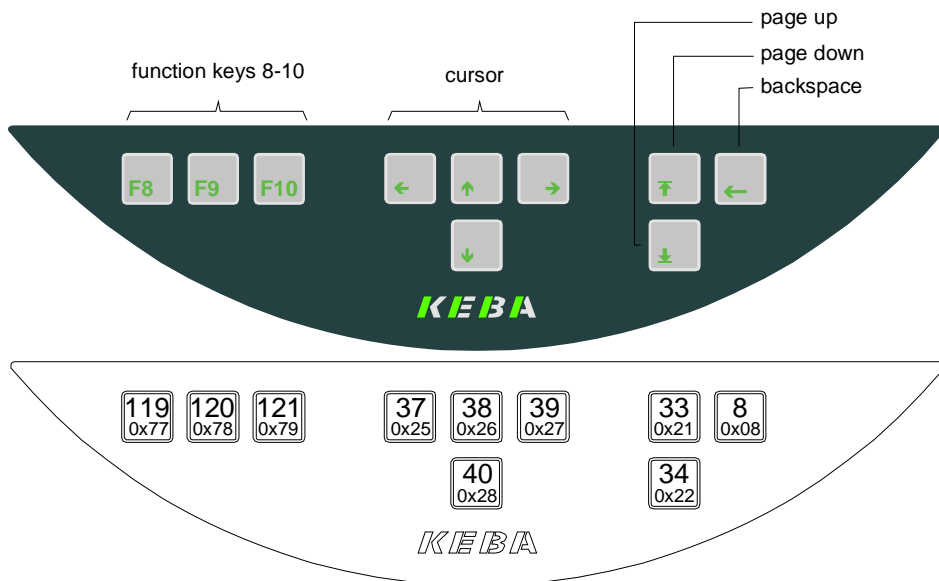
















KeTop T50VGA standard keypad, right side














5.1.3 Keypad below



KeTop T50VGA standard keypad below


Tabulated overview of the standard keypad, sorted decimal:

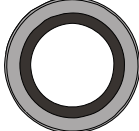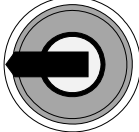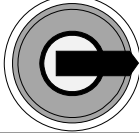Key labelling standard keypad	dec	hex	Windows virtual key code	Description
	8	0x08	VK_BACK	backspace
	13	0x0D	VK_RETURN	return
	27	0x1B	VK_ESCAPE	escape
	33	0x21	VK_PRIOR	page up
	34	0x22	VK_NEXT	page down
	37	0x25	VK_LEFT	cursor left
	38	0x26	VK_UP	cursor up
	39	0x27	VK_RIGHT	cursor right
	40	0x28	VK_DOWN	cursor down
	48	0x30	VK_0	numeric keys
	49	0x31	VK_1	
	50	0x32	VK_2	
	51	0x33	VK_3	
	52	0x34	VK_4	
	53	0x35	VK_5	
	54	0x36	VK_6	
	55	0x37	VK_7	
	56	0x38	VK_8	
	57	0x39	VK_9	
	112	0x70	VK_F1	function keys
	113	0x71	VK_F2	

	114	0x72	VK_F3	
	115	0x73	VK_F4	
	116	0x74	VK_F5	
	117	0x75	VK_F6	
	118	0x76	VK_F7	
	119	0x77	VK_F8	
	120	0x78	VK_F9	
	121	0x79	VK_F10	
	125 and 126	0x7D and 0x7E	VK_F14 and VK_F15	illuminated push button (by pressing the button, two keycodes will be send)
	125	0x7D	VK_F14	key switch left (instead of the illuminated push button)
	126	0x7E	VK_F15	key switch right (instead of the illuminated push button)
	189	0xBD	VK_HYPHEN	prefix
	190	0xBE	VK_PERIOD	dot, comma


5.2 Robotic Keypad

5.2.1 Keypad left

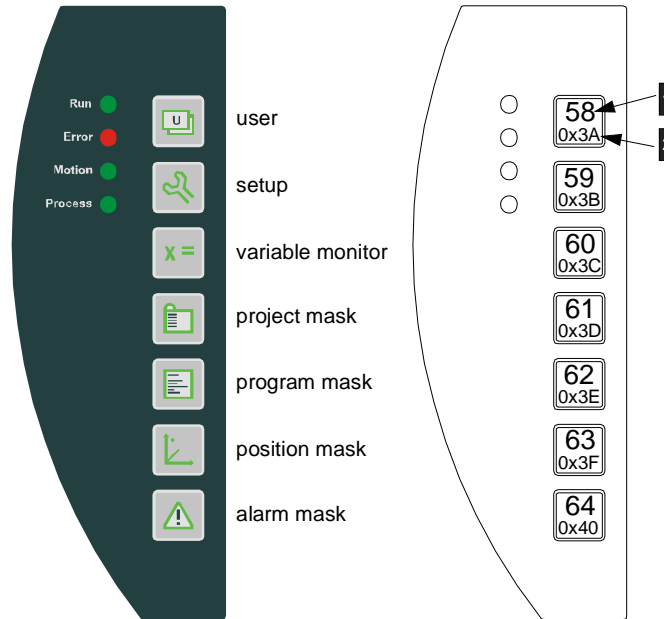


KeTop T50VGA robotic keypad left side

5.2.2 Keypad right

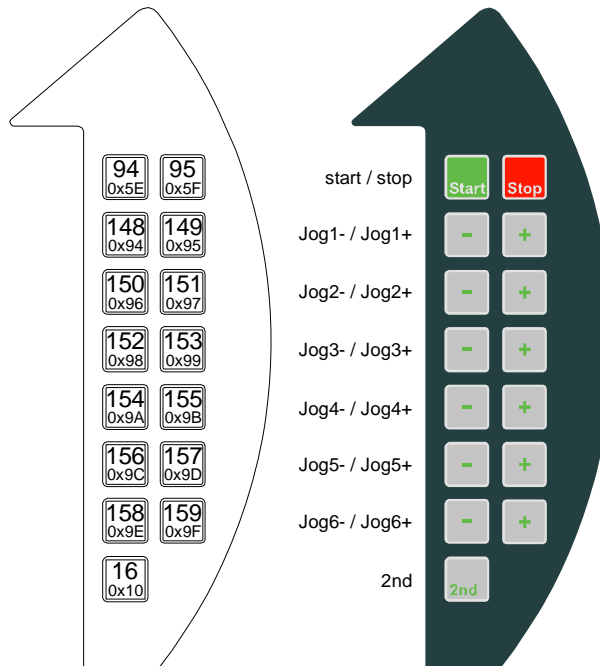





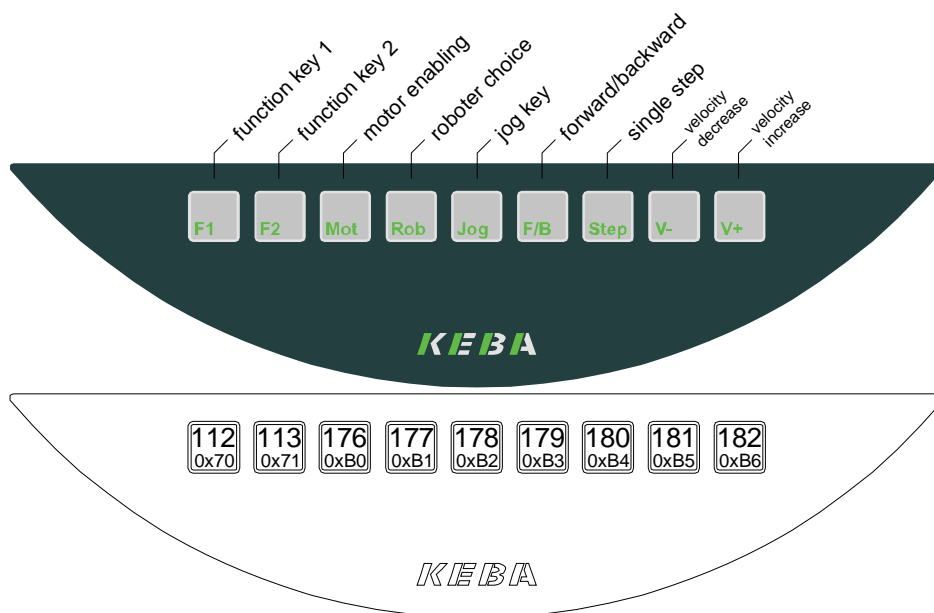






KeTop T50VGA robotic keypad right side


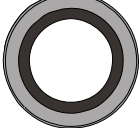
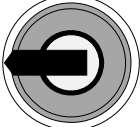
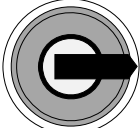

















5.2.3 Keypad below





KeTop T50VGA robotic keypad below

Tabulated overview of the standard keypad, sorted decimal:

Key labelling, robotic keypad	dec	hex	Windows virtual key code	Description
	16	0x10	VK_SHIFT	2nd Function
	58	0x3A	-	User login
	59	0x3B	-	service area (setup mask, machine data-viewer)
	60	0x3C	-	variable mask
	61	0x3D	-	project mask
	62	0x3E	-	program mask
	63	0x3F	-	positions mask
	64	0x40	-	message mask
	94	0x5E	-	Starts the interrupted program
	95	0x5F	-	Stops all active programs.
	112	0x70	VK_F1	function keys

	113	0x71	VK_F2	
	125 and 126	0x7D and 0x7E	VK_F14 and VK_F15	illuminated push button (by pressing the button, two keycodes will be send)
	125	0x7D	VK_F14	key switch left (instead of the illuminated push button)
	126	0x7E	VK_F15	key switch right (instead of the illuminated push button)
	148	0x94	-	jog key axis 1 -
	149	0x95	-	jog key axis 1 +
	150	0x96	-	jog key axis 2 -
	151	0x97	-	jog key axis 2 +
	152	0x98	-	jog key axis 3 -
	153	0x99	-	jog key axis 3 +
	154	0x9A	-	jog key axis 4 -
	155	0x9B	-	jog key axis 4 +
	156	0x9C	-	jog key axis 5 -
	157	0x9D	-	jog key axis 5 +
	158	0x9E	-	jog key axis 6 -
	159	0x9F	-	jog key axis 6 +
	176	0xB0	-	motor enabling
	177	0xB1	-	robot choice
	178	0xB2	-	jog key
	179	0xB3	-	forward / backward
	180	0xB4	-	single step

	181	0xB5	-	velocity decrease
	182	0xB6	-	velocity increase

5.3 Numbering of LEDs at Robotik Keypad


This chapter describes the numbering of the keyboard LEDs and push-button LEDs.

The LED number is needed for activating the LED.

A LED can be activated in two ways:


- Via KeTop API design
(see chapter „LED Functions -> KtpSetKeyboardLed“ on page 60)
- Via KVC – KEBA Virtual Channel
(see chapter „Example: Interface on Server“ on page 84)

Standard Keypad

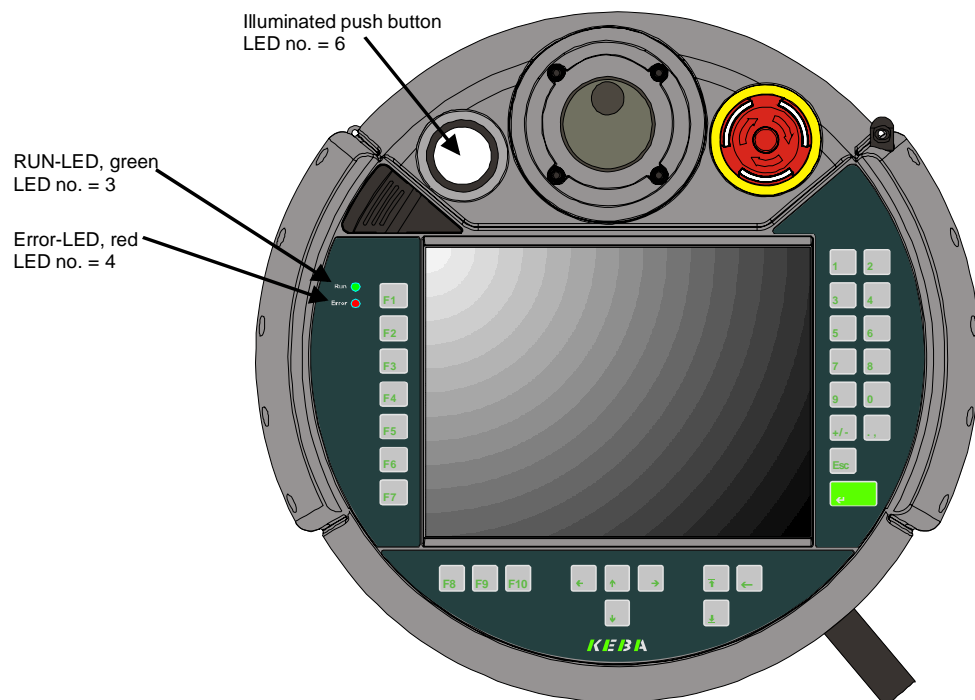

Numbering of LEDs of standard keypad

Robotic Keypad

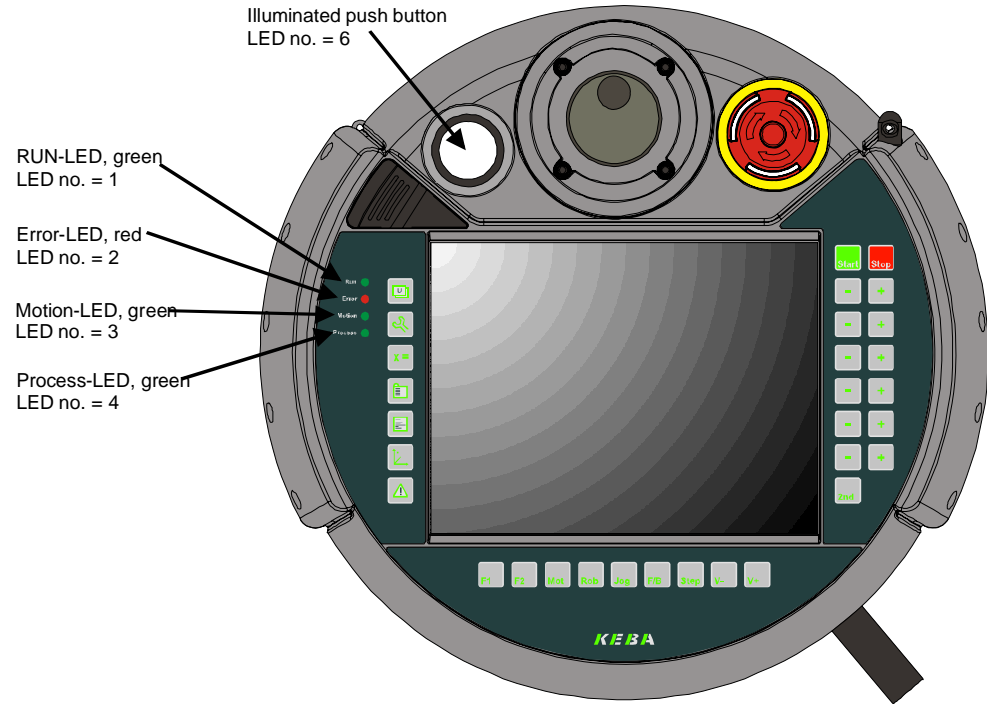

Numbering of LEDs of robotic keypad

6 Display

The KeTop is equipped with a 6.5" TFT color LC-Display:

	color display 6.5"
Type:	graphics-capable color TFT-LCD
Size:	6.5" (132.5 x 99.4 mm)
Resolution:	VGA 640 x 480 pixels
Representation:	65535 colors
Background lighting:	2 CCFT (cold cathode tube)
Touch screen:	analog-resistive

The lifetime of the background lighting (50.000 h) can be increased through the activation of a screen saver via the control panel.

Procedure:

*Start -> Settings -> Control Panel -> Display -> Folder Backlight
Select the function „Automatically turn off backlight while on external power“*

Here you can enter the turn-off time (15s to 30min).

Information

Frequent activation of the back-lighting by switching the KeTop on and off (plugging in and unplugging) reduces the lamp service life. When the screensaver is activated, the back-lighting is only dimmed to minimum brightness and is not switched off.

6.1 Touch Screen

Touch stylus with touch stylus cord (KeTop ETP 002)

If the touch screen is not operated with the finger, we recommend using a touch stylus (included in delivery). Touch styluses for example of PDAs by PALM or SONY are also suitable.

On delivery of the KeTop from the works, a 60 cm long touch stylus cord is also included in the original package for fastening the touch stylus to the KeTop.

The touch stylus can be fastened to the left-hand or right-hand eyelet of the KeTop using the touch stylus cord.



Touch stylus attached to the left or right of the KeTop

Touc screen re-calibration

The touch screen is already calibrated when the KeTop is delivered. No further calibration is required.

If a re-calibration is required for any reason (humidity of air, temperature, etc.), perform the calibration procedure under Windows CE as follows:

Start -> Settings -> Control Panel -> Stylus -> Calibration -> Recalibrate

For the calibration you can also use the ConifgTool. See chapter *Display and Touch Screen Settings* on page 95.

7 Software

7.1 Windows CE

The KeTop is delivered with pre-installed software that is stored in the flash of the device. This software is also called "Image" since it combines all software contents in one file. The image contains the Windows CE operating system core and possibly additional applications. The image is created by means of the MS Platformbuilder for Windows CE.

This description is valid for images from version 1.00. (Get image version on KeTop as follows: Start -> Programs -> KeTop -> Version)

7.1.1 Software of Standard KeTop

7.1.1.1 Operating system Windows CE 5.0:

- System control
- Command Prompt
- Windows Explorer
- Pocket Internet Explorer

7.1.1.2 Flash File System:

- IPSM (Intel Persistent Storage Manager)

7.1.1.3 Pre-installed application programs:

- Pocket Notepad
- RDP-Client (Remote Desktop Connection)
- Pocket Registry Editor (\windows\regedit.exe)
- Active Sync

7.1.1.4 KeTop-specific software (see: Start -> Programs -> KeTop):

- KeTop Configuration Tool (extension in system control for configuration of background lighting, screensaver, touch screen and joystick calibration, clearing of registry, image update, ..)
- KebaVirtualChannel KVC
- Registry Backup
- SetTime, temporary time and date entry
- TouchClean, Touch Cleaning Application
- Version, overview of versions
- Toggle sip (software keyboard)

7.1.1.5 Test tools

- TestSerial, test program for serial interfaces (\windows\testserial.exe)
- Reset (\windows\reset.exe)

7.2 Generation of Program for Windows CE

The user can easily generate programs for Windows CE. Programming is similar to an application for a standard MS Windows NT PC. Under Windows CE, only the number of available WIN32-APIs is limited.

7.2.1.1 Prerequisites for Application Programming

- **Microsoft eMbedded Visual C++ 4.0, Visual Studio 2003 / 2005**
- SDK (Software Development Kit) by manufacturer of Windows CE device (KEBA).
The SDK provides to the programming environment the processor-dependent header and library files of the OEM adaptation.
(If special hardware-dependent functions of the KeTop should be used, the SDK of the KeTop must be installed subsequently since the standard SDK for HPC (Handheld PC) and HPC Pro (Handheld PC Professional) does not take into account certain customer-specific adaptations.)

7.3 KeTop API Design

The entire SDK is implemented in a single dynamic link library (DLL). All functions described in this document are exported from this DLL. For Visual Basic, the module file KeTopAPI.bas must be imported into the Visual Basic project. This file and the corresponding SDK are contained on the CD „KeTop SK001“.

The following platform names are assigned to the KeTops:

KeTop T100:	KETOPT100
KeTop T50:	KETOPT50
KeTop T41:	KETOPT41
KeTop T41:	KETOPT41

- System files that are copied to \windows directory by Visual Studio remain stored permanently. For this reason, these files must be copied manually to the directory \IPSM\windows (must be created by the user if necessary).

In case of a restart of Windows CE, these files are automatically copied to the \windows directory. Therefore these files will be available for the operating system and after a restart.

7.3.1 Common data types

This section contains a detailed description of the common data types for the communication with the handheld terminal. For further information, see TpuHwDataTypes.h.

INT8	Signed 8 bit integer variable.
UINT8	Unsigned 8 bit integer variable.
BacklightStat	Enum, displays the backlight status
JoystickPos	Struct, for joystick data.
Status Struct	Describes the startup state of the device.
EventMsg	Enum, describes the event message received.
EventMsgDomains	Enum, describes the events a handler has been subscribed to.
eventCallback	Function pointer to callback function.

7.3.2 Handling of Errors

Rules

- All functions expecting any input parameter check if the parameter is located inside the range and if its data type is correct. If a parameter is located outside the range the function will return INVALID_ARG_RANGE.
- All functions expecting a pointer for output data as parameter check if the pointer is valid, i.e. the pointer must not be NULL. If the pointer is invalid, the function will return INVALID_ARG_INVALID_PTR.
- All functions having any string as parameter check if the pointer to the string is valid. If the pointer is invalid, the function will return INVALID_ARG_INVALID_STR_PTR.

Defines

SUCCESS	0
OK	0
FAIL	1
INVALID_ARG_RANGE	2
INVALID_ARG_PTR	3
INVALID_ARG_STR_PTR	4
INVALID_ARG_UNKNWN_COOKIE	5
INVALID_ARG_UNKNWN_DOMAIN	6
INVALID_NOT_CALIBRATED	7
INVALID_POTI_NOT_CALIBRATED	8
UNSAVE_DLL_TERMINATION	-100
API_NOT_INIT	-101

7.4 Functions

7.4.1 Functions for starting and closing

This chapter describes functions that are needed for starting and closing the KetopApi.dll.

KtpAPIInit

<i>Declaration</i>	UINT8 KtpAPIInit(void);
<i>Description</i>	This method initializes the KetopAPI.
<i>Arguments</i>	-

KtpAPIDeinit

<i>Declaration</i>	void KtpAPIDeinit(void);
<i>Description</i>	This method cancels all initializations of the KtpAPIInit.
<i>Arguments</i>	-

7.4.2 Functions for Configuration

This section describes the functions that are available for the configuration of the device. All functions return one of the above defines as error code.

KtpSetBrightness

<i>Declaration</i>	UINT8 KtpSetBrightness(/*[in]*/UINT8 u8_Brightness);
<i>Description</i>	This method sets the brightness of the LC display on the device.
<i>Arguments</i>	0-7, 0 = min, 7 = max

KtpSetBrightnessPercent

<i>Declaration</i>	UINT8 KtpSetBrightnessPercent(/*[in]*/UINT8u8_Brightness);
<i>Description</i>	This method sets the brightness of the LC display on the device in percent.
<i>Arguments</i>	0-100%

KtpSetContrast

<i>Declaration</i>	UINT8 KtpSetContrast(/*[in]*/UINT8 u8_Contrast);
<i>Description</i>	This method sets the contrast of the LC display on the device.
<i>Arguments</i>	0-31, 0 = min, 31 = max (Ketop T50: 0-63, 0 = min, 63 = max)

KtpSetContrastPercent

<i>Declaration</i>	UINT8 KtpSetContrastPercent(<i>/*[in]*/</i> UINT8u8_Contrast)
<i>Description</i>	This method sets the contrast of the LC display on the device in percent.
<i>Arguments</i>	0-100%

KtpSwitchBacklight

<i>Declaration</i>	UINT8 KtpSwitchBacklight(<i>/*[in]*/</i> BacklightStat backlight);
<i>Description</i>	Turns on/off the backlight of the LC display on the device.
<i>Arguments</i>	BACKLIGHT_ON, BACKLIGHT_OFF

KtpSetScreenSaverTimeOutMin

<i>Declaration</i>	UINT8 SetScreenSaverTimeOutMin(<i>/*[in]*/</i> UINT8 u8_ScreenSaverTO);
<i>Description</i>	Sets the timeout value of the screensaver in minutes.
<i>Arguments</i>	0-255, 0 = off, 255 = max

KtpSetScreenSaverTimeOutSec

<i>Declaration</i>	UINT8 SetScreenSaverTimeOut- Min(<i>/*[in]*/</i> UINT16u16_ScreenSaverTO);
<i>Description</i>	Sets the timeout value of the screensaver in seconds.
<i>Arguments</i>	0-65535, 0 = off, 65535 = max

7.4.3 Functions for Reading the Configuration

These functions return the current value of the configuration parameters. None of the functions need any parameter. These functions do not enable checking for errors since the return value of the function is the value of the configuration parameter.

KtpGetBrightness

<i>Declaration</i>	UINT8 KtpGetBrightness(void);
<i>Description</i>	Gets the current brightness value of the LC display.
<i>Arguments</i>	-

KtpGetBrightnessPercent

<i>Declaration</i>	UINT8 KtpGetBrightnessPercent(<i>/*[out]*/</i> UINT8 *u8_Brightness);
<i>Description</i>	Gets the current brightness value of the LC display in percent.
<i>Arguments</i>	UINT8 *u8_Brightness: brightness value 0-100%

KtpGetContrast

<i>Declaration</i>	UINT8 KtpGetContrast(void);
<i>Description</i>	Gets the current contrast value of the LC display.
<i>Arguments</i>	-

KtpGetContrastPercent

<i>Declaration</i>	UINT8 KtpSetContrastPercent(/*[out]*/UINT8 *u8_Contrast);
<i>Description</i>	Gets the current contrast value of the LC display in percent.
<i>Arguments</i>	UINT8 *u8_Contrast: contrast value 0-100%

KtpGetBacklight

<i>Declaration</i>	TKtpBacklightStat KtpGetBacklight(void);
<i>Description</i>	Gets the current status of the background lighting.
<i>Arguments</i>	-

KtpGetScreenSaverTimeoutMin

<i>Declaration</i>	UINT8 GetScreenSaverTimeOutMin(void);
<i>Description</i>	Gets the current timeout value of the screensaver in minutes.
<i>Arguments</i>	-

KtpGetScreenSaverTimeoutSec

<i>Declaration</i>	UINT8 GetScreenSaverTimeOutSec(void);
<i>Description</i>	Gets the current timeout value of the screensaver in seconds.
<i>Arguments</i>	-

7.4.4 Peripheral Functions**KtpJoystickIsInstalled**

<i>Declaration</i>	UINT8 KtpJoystickIsInstalled(void);
<i>Description</i>	Returns the number of joystick axes. If no joystick is installed on the device, 0 will be returned.
<i>Arguments</i>	-

KtpWheelsInstalled

<i>Declaration</i>	UINT8 KtpWheelIsInstalled(void);
<i>Description</i>	Returns 1 if an handwheel is installed on the device, otherwise 0.
<i>Arguments</i>	-

KtpPotIsInstalled

<i>Declaration</i>	UINT8 KtpPotIsInstalled(void);
<i>Description</i>	Returns 1 if an override potentiometer is installed on the device, otherwise 0.
<i>Arguments</i>	-

KtpGetJoystickPos

<i>Declaration</i>	UINT8 KtpGetJoystickPos (/*[out]*/TKtpJoystickPos *p_jPos);
<i>Description</i>	Gets the current joystick position.
<i>Arguments</i>	TKtpJoystickPos structure. Each component in the structure may only range between -15 and 15.
<i>Remarks</i>	Calling this function is only allowed if a joystick is installed on the device. If no joystick is installed the values of the components are undefined.

KtpGetJoystickPosEx

<i>Declaration</i>	UINT8 KtpGetJoystickPosEx(/*[out]*/int *posX, int *posY, int *posZ);
<i>Description</i>	Gets the current joystick position.
<i>Arguments</i>	Each component in the structure may only range between -15 and 15.
<i>Remarks</i>	Calling this function is only allowed if a joystick is installed on the device. If no joystick is installed the values of the components are undefined.

KtpGetJoystickPosRaw

<i>Declaration</i>	UINT8 KtpGetJoystickPosRaw (/*[out]*/TktpJoystickPosRaw *p_jPos);
<i>Description</i>	Gets the actual raw data of the joystick.
<i>Arguments</i>	-
<i>Remarks</i>	Calling this function is only allowed if a joystick is installed on the device. If no joystick is installed the values of the components are undefined.

KtpGetJoystickPosRawEx

<i>Declaration</i>	UINT8 KtpGetJoystickPosEx(/*[out]*/UINT16 *posX, UINT16 *posY, UINT16 *posZ);
<i>Description</i>	Gets the actual raw data of the joystick.
<i>Arguments</i>	-
<i>Remarks</i>	Calling this function is only allowed if a joystick is installed on the device. If no joystick is installed the values of the components are undefined.

KtpSetJoystickCalibData

<i>Declaration</i>	UINT8 KtpSetJoystickCalibData(/*in*/TktpJoystickChannel ch, UINT16 rawMin, UINT16 rawCenter, UINT16 rawMax, UINT16 calibRange);
<i>Description</i>	Calibrates the axis of the joystick.
<i>Arguments</i>	TktpJoystickChannel ch: channel to be calibrated. UINT16 rawMin: value for smallest raw value UINT16 ramCenter: average value for raw data UINT16 rawMax: maximum value of raw data UINT16 calibRange: maximum range of joystick
<i>Remarks</i>	This function may only be called if a joystick is installed on the device. If no joystick is installed, the value of the components are undefined.

KtpGetOverridePoti

<i>Declaration</i>	UINT8 KtpGetOverridePoti(/*out*/UINT8 *p_pos);
<i>Description</i>	Gets the current value of the override potentiometers.
<i>Arguments</i>	Pointer to the variable containing the current value of the override potentiometer.
<i>Remarks</i>	This function may only be called if a override potentiometer is installed on the device. If no override potentiometer is installed, the value of the components are undefined.

KtpGetOverridePotiRaw

<i>Declaration</i>	UINT8 KtpGetOverridePotiRaw(<i>/*out*/</i> UINT16 *p_pos);
<i>Description</i>	Gets the uncalibrated value from the override potentiometer.
<i>Arguments</i>	Pointer to the variable containing the current value of the override potentiometer.
<i>Remarks</i>	This function may only be called if a override potentiometer is installed on the device. If no override potentiometer is installed, the value of the components are undefined.

KtpGetEnablingDevice

<i>Declaration</i>	UINT8 KtpGetEnablingDevice(<i>/*in*/</i> TKtpEnablingDeviceCircuit circuit);
<i>Description</i>	Circuit is the value of the enabling switch to be read out when it is pressed completely (panic position).
<i>Arguments</i>	Returns the current value of the enabling switch transferred in the circuit.
<i>Remarks</i>	This function may only be called if a enabling switch is installed on the device. If no enabling switch is installed, the value of the components are undefined.

KtpSetPotiCalibData

<i>Declaration</i>	UINT8 KtpSetPotiCalibData(<i>/*in*/</i> UINT16 rawMin, UINT16 rawMax, UINT16 calibRange);
<i>Description</i>	Calibration of override potentiometer. This function may only be called if a override potentiometer is installed on the device. If no override potentiometer is installed, the value of the components are undefined.
<i>Arguments</i>	UINT16 rawMin: value for smallest raw value UINT16 rawMax: maximum raw value UINT16 calibRange: maximum range of overridepoti

KtpGetWheelValue

<i>Declaration</i>	UINT8 KtpGetWheelValue(<i>/*out*/</i> UINT16 *p_val);
<i>Description</i>	Gets the actual value of the handwheel.
<i>Arguments</i>	Pointer to the variable containing the current value of the handwheel.
<i>Remarks</i>	This function may only be called if a handwheel is installed on the device. If no handwheel is installed, the value of the components are undefined.

KtpSetWheelValue

<i>Declaration</i>	UINT8 KtpSetWheelValue(<i>/*in*/</i> UINT16 val);
<i>Description</i>	Sets the current position of the handwheel to the value transferred in val.
<i>Arguments</i>	val is the value the handwheel should be set to.
<i>Remarks</i>	This function may only be called if a handwheel is installed on the device. If no handwheel is installed, the value of the components are undefined.

7.4.5 LED Functions

Because the SxTPU2 is not equipped with LEDs, following functions are not relevant.

KtpSetKeyboardLed

<i>Declaration</i>	UINT8 KtpSetKeyboardLed(<i>/*in*/</i> UINT8 ledNr, TLedState ledState);
<i>Description</i>	Switches the set LED to the desired state.
<i>Arguments</i>	UINT8 ledNr: number of LED to be set. UINT ledState: state, the LED is set to.

KtpGetKeyboardLed

<i>Declaration</i>	TLedState KtpGetKeyboardLed(<i>/*in*/</i> UINT8 ledNr);
<i>Description</i>	Returns the state of the desired LED.
<i>Arguments</i>	UINT8 ledNr: number of LED.

7.4.6 Other Functions

These functions perform various actions on the device.

KtpGetStatus

<i>Declaration</i>	UINT8 KtpGetStatus(<i>/*out*/</i> Status *p_tpuStatus);
<i>Description</i>	Gets the start-up state of the handheld terminal.
<i>Arguments</i>	Status *p_tpuStatus, pointer to memory area that will receive a copy of the status structure.

KtpWriteToFlash

<i>Declaration</i>	UINT8 WriteToFlash(void);
<i>Description</i>	Writes the registry of the device to the flash.
<i>Arguments</i>	-

KtpReset

<i>Declaration</i>	UINT8 KtpReset(void);
<i>Description</i>	Restarts the device new.
<i>Arguments</i>	-

KtpGetVersionString

<i>Declaration</i>	UINT8 KtpGetVersionString(<i>/*out*/</i> TCHAR *wszVersionString, unsigned int bufferSize);
<i>Description</i>	Returns the state of the KeTop during start-up.
<i>Arguments</i>	TCHAR *wszVersionString: pointer to buffer for the versions string unsigned int bufferSize: length of transferred buffer.

KtpGetEEPromData

<i>Declaration</i>	UINT8 KtpGetEEPromData(/*out*/TEEPromData *data);
<i>Description</i>	Read the data from the EEPROM
<i>Arguments</i>	TEEPromData data: data structure for the data contained in the EEPROM

KtpWriteByteToEEProm

<i>Declaration</i>	UINT8 KtpWriteByteToEEProm (/*in*/UINT16 addr, UINT8 data);
<i>Description</i>	Writes a byte to the EEPROM location transferred in addr.
<i>Arguments</i>	UINT16 addr: address of memory location UINT8 data: data for saving

KtpReadByteFromEEProm

<i>Declaration</i>	UINT8 KtpReadByteFromEEProm (/*in*/UINT16 addr, /*out*/UINT8 *pData);
<i>Description</i>	Reads a byte from the EEPROM location transferred in addr.
<i>Arguments</i>	UINT16 addr: address of memory location UINT8 *pData: data from the EEPROM

KtpLaunchTouchScreenCalibApp

<i>Declaration</i>	UINT8 KtpLaunchTouchScreenCalibApp (void);
<i>Description</i>	Starts the touch-screen calibration tool.
<i>Arguments</i>	-

KtpGetTemperature

<i>Declaration</i>	UINT8 KtpGetTemperature (void);
<i>Description</i>	Returns the current temperature of the KeTop.
<i>Arguments</i>	-

KtpDoBeep

<i>Declaration</i>	UINT8 KtpDoBeep (/*in*/ UINT8 beepTime10ms);
<i>Description</i>	Is active for beepTime10ms * 10 ms
<i>Arguments</i>	UINT8 beepTime10ms: duration of beeps in n* 10ms

KtpGetVariantData

<i>Declaration</i>	UINT8 KtpGetVariantData (/*out*/ TKtpVariantData *data);
<i>Description</i>	Reads the device configuration from the EEPROM.
<i>Arguments</i>	TKtpVariantData data: data structure for VariantData.

7.4.7 Functions for Subscribing Events

These functions are used to subscribe/unsubscribe callback functions for different events. Joystick, override potentiometer, handwheel and keypad can be used as events.

KtpInstallWheelEventCallback

<i>Declaration</i>	<code>UINT8 KtpInstallWheelEventCallback (*in*/TktpWheelEventCallback pWheelProc, int *cookie);</code>
<i>Description</i>	Subscribes a callback function for the WheelEvent and returns an index (cookie) for the callback function.
<i>Arguments</i>	TKtpWheelEventCallback pWheelProc: callback function to be called when the event occurs. int cookie: The index for the callback function is required for removing the callback function.

KtpInstallWheelEventMessage

<i>Declaration</i>	<code>UINT8 KtpInstallWheelEventMessage (HWND hWnd, int *cookie);</code>
<i>Description</i>	Subscribes a WindowHandler for the WheelEvent and returns an index (cookie).
<i>Arguments</i>	HWND hWnd: WindowHandler, where the message is sent to. int cookie: Index, is required for removing the WindowHandler.

KtpRemoveWheelEventCallback

<i>Declaration</i>	<code>UINT8 KtpRemoveWheelEventCallback (int cookie);</code>
<i>Description</i>	Removes the WheelEventCallback function.
<i>Arguments</i>	int cookie: index for the callback function to be removed.

KtpRemoveWheelEventMessage

<i>Declaration</i>	<code>UINT8 KtpRemoveWheelEventMessage (int cookie)</code>
<i>Description</i>	Removes the WindowHandler.
<i>Arguments</i>	int cookie: index for the WindowHandler to be removed.

KtpInstallOvrEventCallback

<i>Declaration</i>	<code>UINT8 KtpInstallOvrEventCallback (*in*/ TKtpOvrEventCall- back pOvrProc, /*out*/ int *cookie);</code>
<i>Description</i>	Subscribes a callback function for the OverrideEvent and returns an index (cookie) for the callback function.
<i>Arguments</i>	TKtpOvrEventCallback pOvrProc: callback function to be called when the event occurs. int cookie: The index for the callback function is required for removing the callback function.

KtpInstallOvrEventMessage

<i>Declaration</i>	<code>UINT8 KtpInstallOvrEventMessage (HWND hWnd, int *cookie);</code>
<i>Description</i>	Subscribes a WindowHandler for the OverrideEvent and returns an index (cookie) for the WindowHandler.
<i>Arguments</i>	HWND hWnd: WindowHandler, where the message is sent to. int cookie: Index, is required for removing the WindowHandler.

KtpRemoveOvrEventCallback

<i>Declaration</i>	UINT8 KtpRemoveOvrEventCallback (int cookie);
<i>Description</i>	Removes the OverrideEventCallback function.
<i>Arguments</i>	int cookie: index for the callback function to be removed.

KtpRemoveOvrEventMessage

<i>Declaration</i>	UINT8 KtpRemoveOvrEventMessage (int cookie);
<i>Description</i>	Removes the WindowHandler.
<i>Arguments</i>	int cookie: index for the WindowHandler to be removed.

KtpInstallKbdEventCallback

<i>Declaration</i>	UINT8 KtpInstallKbdEventCallback (/*in*/ TktpKbdEventCallback pKbdProc, /*out*/ int *cookie);
<i>Description</i>	Subscribes a callback function for the KeyboardEvent and returns an index (cookie) for the callback function.
<i>Arguments</i>	TktpKbdEventCallback pKbdProc: callback function to be called when the event occurs. int cookie: The index for the callback function is required for removing the callback function.

KtpInstallKbdEventMessage

<i>Declaration</i>	UINT8 KtpInstallKbdEventMessage (HWND hWnd, int *cookie);
<i>Description</i>	Subscribes a WindowHandler for the KeyboardEvent and returns an index (cookie) for the WindowHandler.
<i>Arguments</i>	HWND hWnd: WindowHandler, where the message is send to. int cookie: The index for removing the WindowHandler.

KtpRemoveKbdEventCallback

<i>Declaration</i>	UINT8 KtpRemoveKbdEventCallback (int cookie);
<i>Description</i>	Removes the WheelEventCallback function.
<i>Arguments</i>	int cookie: index for the callback function to be removed

KtpRemoveKdbEventMessage

<i>Declaration</i>	UINT8 KtpRemoveKdbEventMessage (int cookie);
<i>Description</i>	Removes the WindowHandler.
<i>Arguments</i>	int cookie: index for the WindowHandler to be removed

KtpInstallJoyEventCallback

<i>Declaration</i>	UINT8 KtpInstallJoyEventCallback (/*in*/ TktpJoyEventCallback pJoyProc, /*out*/ int *cookie);
<i>Description</i>	Subscribes a callback function for the JoystickEvent and returns an index (cookie) for the callback function, if a joystick is installed.
<i>Arguments</i>	TktpJoyEventCallback pJoyProc: callback function to be called when the event occurs. int cookie The index for the callback function is required for removing the callback function.

KtpInstallJoyEventMessage

<i>Declaration</i>	UINT8 KtpInstallJoyEventMessage (HWND hWnd, int *cookie);
<i>Description</i>	Subscribes a WindowHandler for the JoystickEvent and returns an index (cookie) for the WindowHandler.
<i>Arguments</i>	HWND hWnd: WindowHandler, where the message is send to. int cookie: index for the WindowHandler to be removed

KtpRemoveJoyEventCallback

<i>Declaration</i>	UINT8 KtpRemoveJoyEventCallback (int cookie);
<i>Description</i>	Removes the JoyEventCallback function, if a joystick is installed.
<i>Arguments</i>	int cookie: index for the callback function.

KtpRemoveJoyEventMessage

<i>Declaration</i>	UINT8 KtpRemoveJoyEventMessage (int cookie);
<i>Description</i>	Removes the WindowHandler.
<i>Arguments</i>	int cookie: index for the WindowHandler to be removed

KtpLaunchJoystickCalibApp

<i>Declaration</i>	UINT8 KtpLaunchJoystickCalibApp(HANDLE *pProcHandle);
<i>Description</i>	Starts the joystick calibration tool.
<i>Arguments</i>	HANDLE *pProcHandle: Handle for the started program.

KtpGetDispalyRotation

<i>Declaration</i>	TKtpDispalyRot KtpGetDisplayRotation (void)
<i>Description</i>	Returns the state for the DisplayRotation (for left or right handers).
<i>Arguments</i>	-

KtpSetDisplayRotation

<i>Declaration</i>	UINT8 KtpSetDisplayRotation(TKtpDisplayRot dispRot);
<i>Description</i>	Changes the design of the display for left or right handers. Maybe for some devices no changes.
<i>Arguments</i>	TKtpDisplayRot dispRot: eKtpDisplayLeft for left handers, eKtpDisplayRight for right handers

KtpEraseRegistry

<i>Declaration</i>	UINT8 KtpEraseRegistry(void);
<i>Description</i>	Deletes the registry of the device during next startup.
<i>Arguments</i>	-

7.4.7.1 KtpErasePSM

<i>Declaration</i>	UINT8 KtpErasePSM(void);
<i>Description</i>	Deletes the flash file system of the device during next startup.
<i>Arguments</i>	-

KtpGetPowerFailState

<i>Declaration</i>	UINT8 KtpGetPowerFailState(void);
<i>Description</i>	Returns the actually state of the powerFail input.
<i>Arguments</i>	-

KtpForcePressedHardbuttons

<i>Declaration</i>	UINT8 KtpForcePressedHardbuttons (void);
<i>Description</i>	A WM_KEYDOWN message will be send for each pressed keyswitch and the KeyboardCallback function will be activated. This function will be activated also for the initializing of the KetopApi and for the installation of the KeyboardCallback function.
<i>Arguments</i>	-

KtpIsJoystickCalibrated

<i>Declaration</i>	UINT8 KtpIsJoysstickCalibrated (void);
<i>Description</i>	Returns OK (0) if all joystick axes are calibrated. If one or more axes are not calibrated, it returns INVALID_NOT_CALIBRATED (7). If no joystick exists, it returns INVALID_NOT_SUPPORTED (6).
<i>Arguments</i>	-

KtpIsPotiCalibrated

<i>Declaration</i>	UINT8 KtpIsPotiCalibrated (void);
<i>Description</i>	Returns OK (0) if the override potentiometer is calibrated. Returns INVALID_NOT_CALIBRATED (7), if it is not calibrated. Returns INVALID_NOT_SUPPORTED (6) if no override potentiometer is installed.
<i>Arguments</i>	-

KtpRestoreMemorySettings

<i>Declaration</i>	UINT8 KtpRestoreMemorySettins(void);
<i>Description</i>	Saves the registry-value of the path "System\MemorySettings\ StorePages" as storage memory. If the registry-value is in a range where memory for storage respectively for program memory is reserved, these settings wont be changed and IVALID_ARG_RANGE will be returned. If it is not allowed to save the memory settings ("System\MemorySettings\MemorySaveEnable"=0), INVALID_NOT_SUPPORTED will be returned.
<i>Arguments</i>	-

KtpStoreCurrentMemorySettings

<i>Declaration</i>	UINT8 KtpStoreCurrentMemorySettins(void);
<i>Description</i>	Saves the memory settings of the registry ("System\MemorySettings\StorePages"), if it is allowed. If it is not allowed to save, INVALID_NOT_SUPPORTED will be returned.
<i>Arguments</i>	-

KtpShowInputPanel

<i>Declaration</i>	UINT8 KtpShwoInputPanel(UINT8 show);
<i>Description</i>	Opens (show=1) or closes (show=0) the input panel on the display and returuns OK or FAIL.
<i>Arguments</i>	-

7.5 Update API Design

All required methods for an image update are implemented in one single dynamic link library (update.dll). All functions described in this document are exported from this DLL.

For running the update.dll the appropriate KetopAPI.dll will be necessary. Both DLL files must exist in the image and correspond with each other.

7.5.1 Handling of Errors

Rules

- All functions expecting any input parameter check if the parameter is located inside the range and if its data type is correct. If a parameter is located outside the range the function will return ERROR_INVALID_RANGE.

Defines

OK	0
SUCCESS	0
FAIL	1
ERROR_INVALIDE_RANGE	100
ERROR_IMGUPD_INIT	101
ERROR_IMGUPD_FILEOPEN	102
ERROR_IMGUPD_WRONGIMG	103
ERROR_IMGUPD_PROGRAMERROR	104
ERROR_IMGUPD_TOMUCHUPD	105
ERROR_PROGRAM_FLASH_BURN	106
ERROR_PROGRAM_FLASH_ERASE	107
ERROR_IMGUPD_NOTEQUAL	108
ERROR_IMGUPD_FILEWRITE	109
ERROR_IMGUPD_FILEREAD	110
ERROR_WRONG_FILE_HEADER	111

7.6 Initialising

All required initialisation will be carried out by starting respectively by loading the update.dll.

7.6.1 Functions

UpdStartImageUpdate

<i>Declaration</i>	
	<pre> BOOL UpdStartImageUpdate (LPCTSTR fileName, BOOL eraseRegPSM, TUpdProgressCallback pCallback) </pre>
<i>Description</i>	<p>With this method the file handed over by <code>fileName</code> will be stored to the FLASH memory of the device. If <code>eraseRegPSM</code> is set, the registry respectively the PSM will be deleted, after the FLASH has been written successfully.</p> <p>If a method is handed over with <code>pCallback</code>, the method will be executed depending of the program progress. The method returns OK or the corresponding error message.</p>
<i>Arguments</i>	<p>LPCTSTR <code>fileName</code>: Name of the image file</p> <p>BOOL <code>eraseRegPSM</code>: Flag for deleting the registry respectively the PSM</p> <p>TUpdProgressCallback <code>pCallback</code>: Callback function for program progress or 0</p>

UpdPartialImageUpdate

<i>Declaration</i>	
	<pre> BOOL UpdPartialImageUpdate (LPCTSTR fileName, unsigned long from, unsigned long to, BOOL eraseRegPSM, TUpdProgressCallback pCallback) </pre>
<i>Description</i>	<p>With this method the file handed over by <code>fileName</code> will be stored from the address <code>from</code> to the address <code>to</code> to the FLASH memory of the device.</p> <p>If <code>eraseRegPSM</code> is set, the registry respectively the PSM will be deleted, after the FLASH has been written successfully.</p> <p>If a method is handed over with <code>pCallback</code>, the method will be executed depending of the program progress. The method returns OK or the corresponding error message.</p>
<i>Arguments</i>	<p>LPCTSTR <code>fileName</code>: Name of image file</p> <p>unsigned long <code>from</code>: First address for overwriting</p> <p>unsigned long <code>to</code>: Address, out of overwriting</p> <p>BOOL <code>eraseRegPSM</code>: Flag for deleting the registry respectively the PSM</p> <p>TUpdProgressCallback <code>pCallback</code>: Callback function for program progress or 0</p>

UpdCheckFile

<i>Declaration</i>	BOOL UpdCheckFile(LPCTSTR fileName, TupdProgressCallback pCallback)
Visual C: Visual Basic:	UINT8 KtpSetBrightness(*[in]*/UINT8 u8_Brightness); KtpSetBrightness(ByVal brightness As Byte) As Byte
<i>Description</i>	UpdCheckFile verifies the image file and if the image file corresponds to the device. If a method is handed over with pCallback, the method will be executed depending on the program progress. The method returns OK or the corresponding error message.
<i>Arguments</i>	LPCTSTR fileName: Name of the image file TupdProgressCallback pCallback: Callback function for program progress or 0

UpdCompareFile

<i>Declaration</i>	BOOL UpdCompareFile(LPCTSTR fileName, TupdProgressCallback pCallback)
<i>Description</i>	UpdCompareFile compares the handed over image file with the entries of the FLASH memory. If a method is handed over with pCallback, the method will be executed depending on the program progress. The method returns OK or the corresponding error message.
<i>Arguments</i>	LPCTSTR fileName: Name of the image file TupdProgressCallback pCallback: Callback function for program progress or 0.

UpdSetFlashLock

<i>Declaration</i>	BOOL UpdSetFlashLock(long from, long to)
<i>Description</i>	This method sets the lock bits of the FLASH chips from the address from to the address to. So, this address area can't be overwritten. After an image update, the lock bits are reset. One lock bit locks one whole FLASH block. So the saved area can differ from the handed over addresses.
<i>Arguments</i>	long from: First address for locking bits. long to: Address as far as the lock bits are set.

UpdResetFlashLock

<i>Declaration</i>	BOOL UpdResetFlashLock(long from, long to)
<i>Description</i>	This method resets the lock bits of the FLASH chips from the address from to the address to, One lock bit locks one whole FLASH block. So the unsaved area can differ from the handed over addresses.
<i>Arguments</i>	long from: First address for reset locking bits. long to: Address as far as the lock bits are reset.

UpdGetImage

<i>Declaration</i>	<code>BOOL UpdGetImage(LPCTSTR fileName, unsigned long from, unsigned long to, TUpdProgressCallback pCallback);</code>
<i>Description</i>	UpdGetImage creates a copy of the device-image from the address from to the address to and saves it in the file fileName. If a method is handed over with pCallback, the method will be executed depending of the program progress. The method returns OK or the corresponding error message.
<i>Arguments</i>	LPCTSTR fileName: Name of the image file unsigned long from: Starting address stored in the file unsigned long to: Address not stored TUpdProgressCallback pCallback: Callback funktion for program progress or 0.

UpdEraseRegistry

<i>Declaration</i>	<code>BOOL UpdEraseRegistry();</code>
<i>Description</i>	The method UpdEraseRegistry clears the registry of the device after the next update.

UpdErasePSM

<i>Declaration</i>	<code>BOOL UpdErasePSM();</code>
<i>Description</i>	the method UpdErasePSM clears the PSM of the device after the next update.

UpdResetDevice

<i>Declaration</i>	<code>BOOL UpdResetDevice();</code>
<i>Description</i>	The method UpdResetDevice resets the device.

UpdGetFileVersion

<i>Declaration</i>	<code>BOOL UpdGetFileVersion(LPCTSTR fileName, LPTSTR version);</code>
<i>Description</i>	UpdGetFileVersion returns the version information stored in the image file in the string version. The number of characters returned can be defined in VERSION_STRING_LEN. Therefore version has to exceed VERSION_STRING_LEN.
<i>Arguments</i>	LPCTSTR fileName: Name of the image file LPTSTR version: String for version information

UpdGetImageVersion

<i>Declaration</i>	<code>BOOL UpdGetImageVersion(LPTSTR version);</code>
<i>Description</i>	UpdGetImageVersion returns the in the registry stored version information in the string version. The number of characters returned is defined in VERSION_STRING_LEN. Therefore version has to exceed VERSION_STRING_LEN.
<i>Arguments</i>	LPTSTR version: String for version information

TupdProgressCallback

<i>Declaration</i>	<code>typedef void (* TUpdProgressCallback) (int percent);</code>
<i>Description</i>	TUpdProgressCallback is the prototype of the callback functions, which can be called from the Update API.
<i>Arguments</i>	<code>int percent</code> : Number between 0 and 100 for the progress

7.7 Program for Starting the Application and KeTop API

This chapter describes the program for starting the application and the Ke-Top API. The program is contained as a StartAPI.exe in the Windows directory.

7.7.1 Functional description

The StartAPI program is started by an entry in the Startup directory or by an entry in the registry under [HKEY_LOCAL_MACHINE\init] when the Ke-Top is started.

When the program is started, the KeTop API will be initialized first and then the programs entered under [HKEY_LOCAL_MACHINE\Autostart] will be started.

The program remains invisible in the memory and handles different input devices, e.g. override potentiometer and handwheel.

7.7.2 Registry entries

[HKEY_LOCAL_MACHINE\Autostart] contains the entries that are read out by the program.

The following entries are possible:

- **Startx**
string identifying the program to be started. x is a number between 1 and 255.
- **Paramsx**
string containing the parameters for the program identified in Startx. x must have the same value as in Startx.
- **Delayx**
DWORD containing the waiting time in milliseconds until the next program is started. x must have the same value as in Startx.
- **DependStartx**
array of 10 bytes containing the numbers of the programs which must have been started so that the program x may start.
If there is no such entry or all bytes are 0 then the program x starts and no other programs must have been started.
- **DependEndx**
array of 10 bytes containing the numbers of the programs which must have been stopped before the program x starts.

If there is no such entry or all bytes are 0 then the program x starts without waiting of any other programs.

- **StartTypex**
 DWORD affecting the startup of the application.
 StartTypex = 0: The application starts automatically
 StartTypex = 1: The application wont be started
 StartTypex = 2: A window with the message „start programm <Yes> / <No>“ appears. The user can decide, if the application should be started or not.
 x must have the same value as **Startx**.

7.7.3 Example

Example of a possible configuration in the registry of the KeTop T41/T41 image vers. 1.06a:
 (shown with a pocket registry editor)

[HKEY_LOCAL_MACHINE\Autostart]

```

Start1           = "cmd.exe"
Params1         = "/c DirCopy \ipsm\Windows \windows"
Delay1          = 0x00000100 (256)
StartType1      = 0x00000000 (0)

Start2          = "Explorer.exe"
Params2         = ""
Delay2          = 0x00000100 (256)
StartType2      = 0x00000000 (0)
DependEnd2      = 01 00 00 00 00 00 00 00 00 00
DependStart2    = 00 00 00 00 00 00 00 00 00 00

Start10         = "SetTime.exe"
Params10        = "/onstartup"
Delay10         = 0x00002000 (8192)
StartType10     = 0x00000000 (0)
  
```

First the entry „Start1“ will be executed.

The call of " cmd.exe /c DirCopy \ipsm\Windows \windows " causes, that all sub direktries and data from the directory \ipsm\windows will be copied to the normal Windows directory.

Because each windows application has its own window, all “Start..” entries can be executed at the same time.

The entry “Delay1“ delays the application “explorer.exe“at least for 256 ms. Furthermore the entry ”DependEnd2 = 01 ...” forces a dependence to the application before. This causes, that “explorer.exe” does not start, before the application “DirCopy.exe” has been finished.

“Start10 = SetTime.exe” causes the call of the entry window for setting date and time.

If no more entries are available, the start processs of the applications will be finished.

Programs, started by StartAPI, wont be finished.

TSCDialog.exe can be exited by pressing the button "Service". User has to enter a password (default: "keba") which can be changed.

7.8 RDP – Connection via Remote Desktop Protocol


The Remote Desktop Protocol (Abbreviated as "RDP") is a specification by Microsoft for remote control of applications.

Microsoft has replaced the earlier name "Microsoft Terminal Server Client" (Abbreviated as "MSTSC") by the term RDP-Client.

A detailed description of this term can be found on Microsoft's website.

Likewise, it can also be found in the Windows-Help feature using the search criteria "mstsc" and "rdp".

Operating principle (highly simplified):

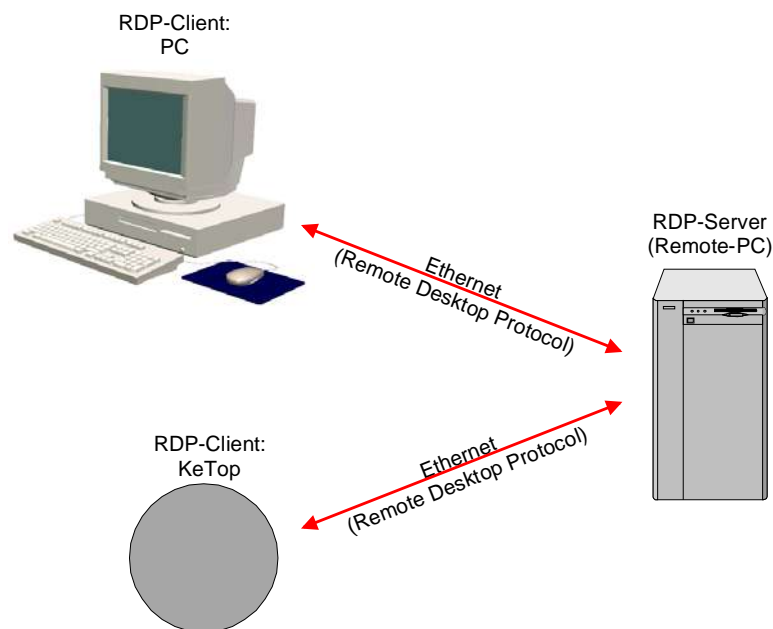

RDP-Client <-> RDP-Server

Programs and data are stored on the remote computer. This is where the program is executed and the data is accessed. This remote computer (Remote PC) is identified as "RDP-Server."

However, data is entered and displayed on the monitor of the local "RDP-Client."

The exchange of data between the client and the server takes place as per the "Remote Desktop Protocol."

7.8.1 RDP-Server (Remote-PC)

The RDP-Server (Remote-PC) requires one of the following operating systems:

- Windows NT4 Terminal server
- Windows 2000 Server
- Windows Server 2003
- Windows XP Professional (Not Windows XP Home !)
- Windows XP embedded (The Server-functionality is integrable.)

Information

When using Windows XP Professional, the RDP-access on the PC in use, must be enabled using the path below: "Control Panel -> System -> Remote" (The option "(x) Remotedesktop" must be activated.)

7.8.2 RDP-Client (PC)

To start the RDP-Client on the PC, the file <mstsc.exe> must be invoked. In Windows XP, this can be found in the Windows directory or under "Start -> All Programs -> Accessories -> Communication -> Remote Desktop Connection."


For other operating systems such as Windows 95/98/NT, the appropriate files can be obtained from the Microsoft website.

7.8.3 RDP-Client (KeTop)


When starting the client on the KeTop, the file `cetsc.exe` must be invoked. This is located in the Windows directory and can be accessed using the path "Start-> Programs -> Remote Desktop Connection."

7.8.3.1 Starting a RDP-Connection manually

- 1) Start the RDP-client using the file `cetsc.exe` and the login window shown below, appears:

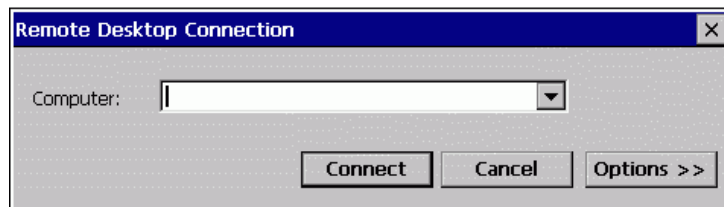

- 2) Enter the IP-Address of the destination computer in the field "Computer."

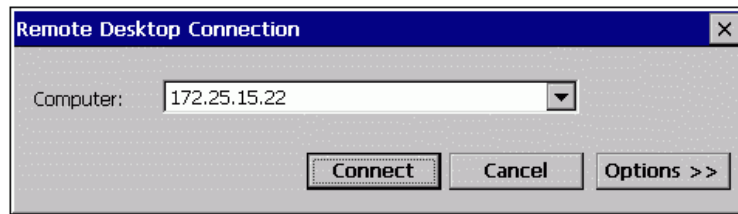


In case the network name is to be used in place of the IP-Address, then resolution of the name must be ensured either via the DNS-server or by an entry in the file "hosts.ini."

Information

The "Input panel" in this case must be enabled on the KeTop, as access to this feature is blocked during the logging process:




- 3) Click the button "Connect" to establish connection with the destination computer.

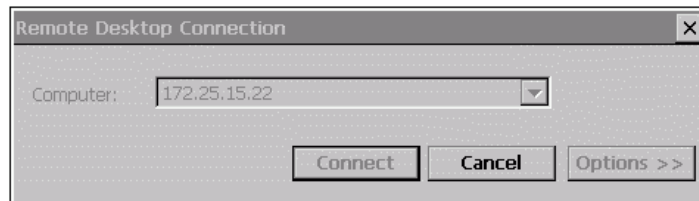

Clicking the "Cancel" button disrupts the connection set up.


Once the connection has been established, the login window of the destination computer is displayed with a trapezoidal title bar that is treated as an identifier of the RDP-Connection.

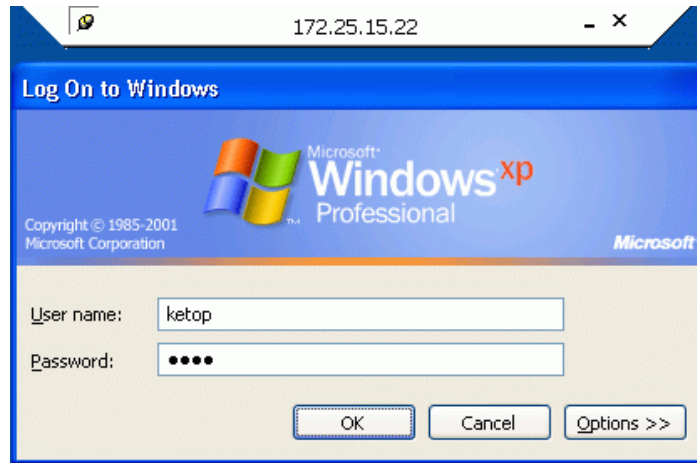

- 4) Enter the username and the password and confirm by clicking OK.



The Windows screen of the destination computer is displayed once login is successful.

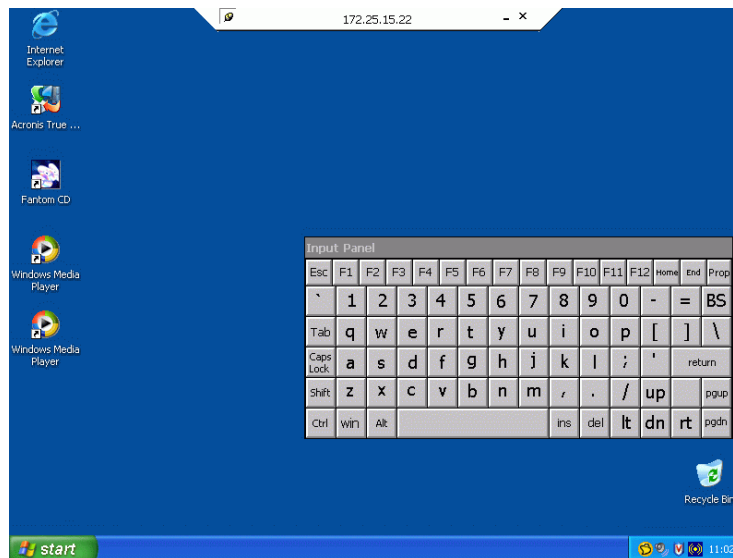


If the trapezoidal title bar shows any errors when being used with certain applications, it can be deactivated when logging in the next time, by simply clicking the symbol at the top left.




If this symbol is displayed, the title bar automatically disappears after the next login.


By invoking “Start->Logout,” you can logout of the destination computer.

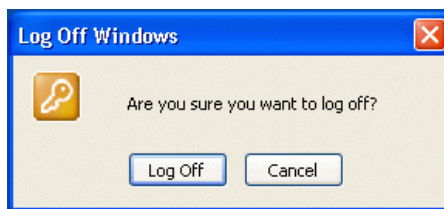


7.8.3.2 Saving the settings of a RDP-Connection

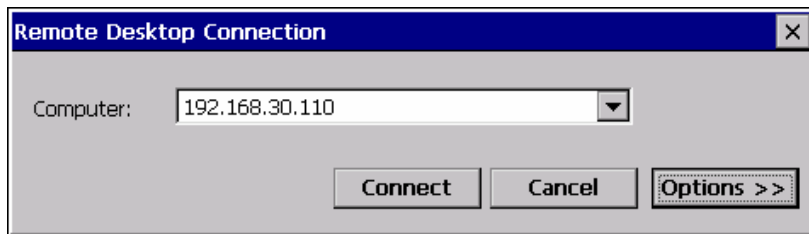

- 1) Clicking the button “Options >>” on the login window of the RDP-Client displays an expanded window with the current settings.

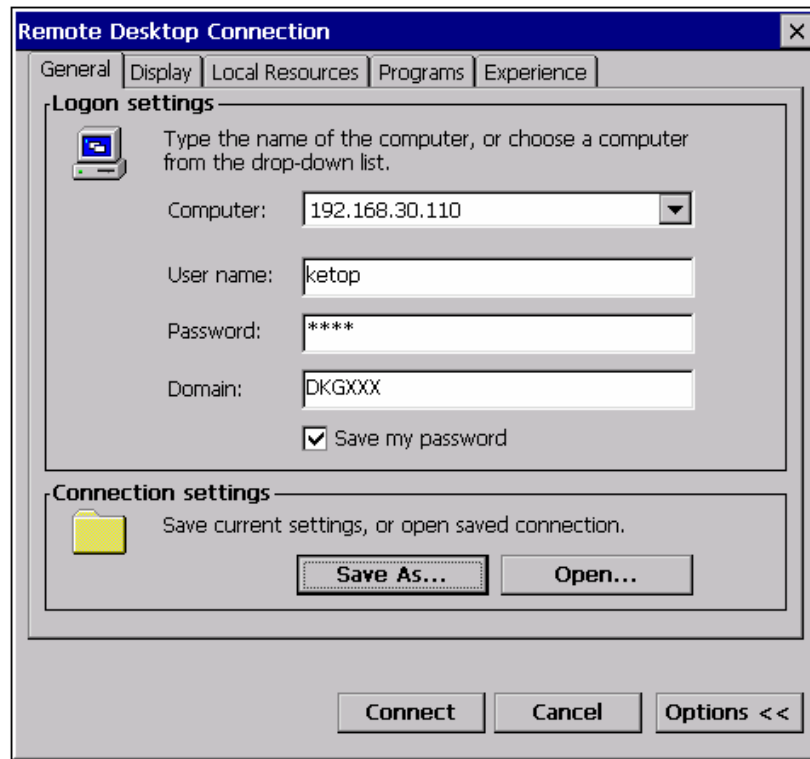

- 2) Click the button “Save As...” and save all these settings in a file of the type “rdp”

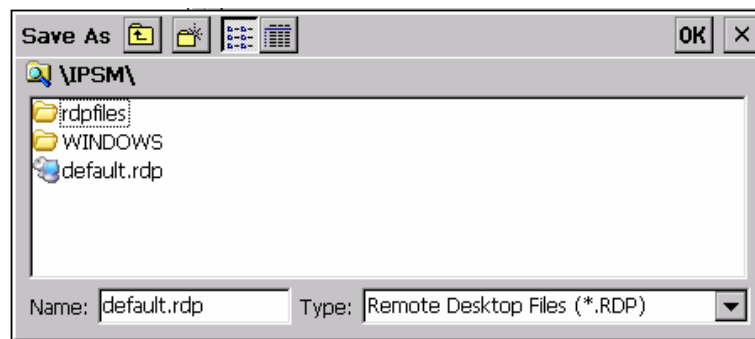

7.8.3.3 Starting the RDP-Connection automatically via an entry in the registry

Connection with the destination compute can be established automatically on starting the KeTop with the help of an entry in the registry under [HKEY_LOCAL_MACHINE\Autostart]. (Also refer the chapter “Program for starting the application and the KeTop API”)


Startx = "\windows\cetsc.exe "
 Paramsx = "\ipsm\default.rdp"

While doing so, the precise RDP-settings must be saved in the file “\ipsm\default.rdp.”

7.8.3.4 Starting a RDP-Connection via TSCDialog

KEBA has produced TSCDialog.exe, an upgraded version of the RDP-Client with further enhancements.

This program can be used to regulate the operator's access to Windows CE. Moreover, the login screen can be designed as desired.

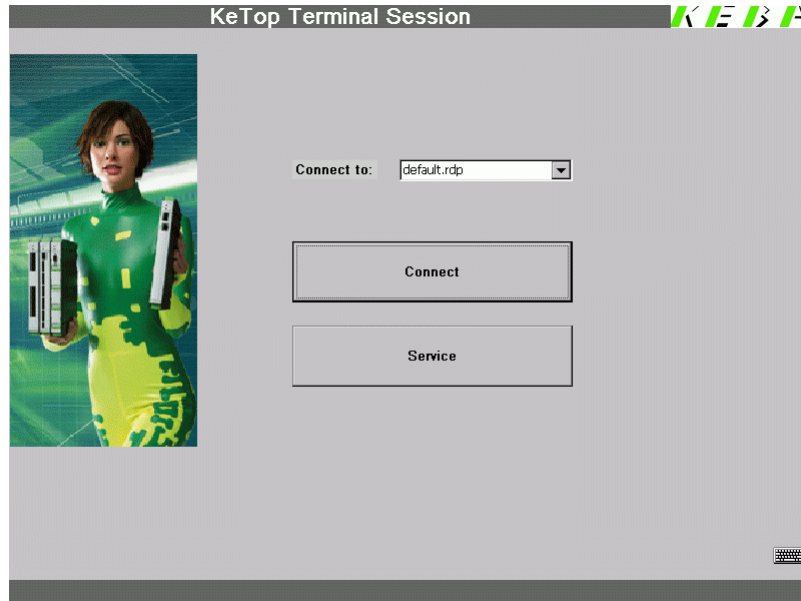

The following entry must exist in the registry in order to invoke the TSCDialog.exe when the KeTop is turned on:

```
HKEY_LOCAL_MACHINE\Autostart\Startx = "\windows\tscdialog.exe"
```

While doing so, the precise RDP-settings must be saved in the file "\ipsm\rdpfiles\default.rdp."

To customize the login screen as required, individual elements of the login screen may be replaced by customer-specific elements.

The customization is controlled using the file
 \ipsm\rdpfiles\resources\TSCDialog.ini

```
TakeUserLogo:i:1
ProgTitle:s:title           (Title)
LogoFileName:s:logo.bmp   (Logo right top, in place of "KEBA")
ImgFileName:s:bitmap.bmp  (Image to the left, in place of the woman
                           in green)
```

Likewise, the files "logo.bmp" and "bitmap.bmp" must also be entered in the directory "\ipsm\rdpfiles\resources\".

7.9 KVC – KEBA Virtual Channel

The protocol "KEBA Virtual Channel" (KVC) is used to transmit control and operating element data between a control and one or more KeTop handheld terminals.

The following data can be transmitted via the KVC:

Data	Direction ST ↔ HT	Value range	Size [bytes]	Transmission
Override potentiometer	↔	0..127	1	Event in case of modification and upon request of the control
Electronic handwheel	↔	0 .. 65535	2	Event in case of modification, upon request of the control, and as set command for adjusting
Joystick	↔	3x -15..15	2	Event in case of 0-Pos and ≠ 0-Pos, then request of control
Lighting for button below display	↔	on flashing off	2	As command from the control and as request from the client to the control.
LEDs on keypad				
Contrast, brightness	↔	0..255	2	As command from the control and as request from the client to the control
Time for screensaver	↔	0..255	1	As command from the control and as request from the client to the control
State of screensaver	↔	0..1	1	Event or as request from the client to the control
Background lighting	↔	0..1	1	As command from the control and as request from the client to the control
WriteToFlash	→	-	-	Command
PlaySound	→	0..255	1	Command
KeepAlive	↔	0..65535	2	Command and KeepAliveEvent if parameterized by the server

The data transmission between the control and the handheld terminals is based on an Ethernet connection (TCP/IP protocol, Listening Port **0xCEBA**). All devices must be identified by their IP address.

Several handheld terminals may be connected to one control, but **one** handheld terminal can only be connected to **one** control. The KVC protocol is an event-driven protocol, i.e. each station can send data at any time without request.

To monitor the functioning of the KeTop in the control, the KVC offers the possibility to use KeepAlive data packages that are periodically sent from the client to the server. The intervals at which the data packages are sent can be set in milliseconds.

Events causing the client to send data:

- Modification of value of override potentiometer
- Modification of handwheel value
- Modification of key status of a key
- The joystick or the space mouse reaches the 0 position.
- The joystick or space mouse leaves the 0 position.
- Data inquiry of server

With each event, the client sends to the server a data package containing the information about the type of event as well as the current data of all operating elements. If the client produces several events one after the other, and the server cannot process all of them at once (e.g. quick rotation of handwheel and simultaneous rotation of the override potentiometer), the server will send one message containing all events.

7.9.1 Events of Server

By sending a package to the client, the server can influence the status of the LEDs on the client, set the current value of the handwheel, or request the current values (position of joystick, handwheel and override potentiometer, as well as state of keys). The server can also read the current states of the values which can be modified by the server.

7.9.2 Data Transmission

Each of the two socket connections between the client and the server constitutes a channel for the data transmission in each direction. The data structures relevant for the corresponding data direction are described in this chapter.

Client → Server

```
typedef enum {
    eKVCJoystickIsZero      0x0001
    eKVCJoystickNotZero    0x0002
    eKVCSpaceMouseIsZero   0x0004
    eKVCSpaceMouseNotZero 0x0008
    eKVCHandWheelChanged   0x0010
    eKVCOverrideChanged    0x0020
    eKVCKeyPressed         0x0040
    eKVCKeyReleased        0x0080
    eKVCLedValue           0x0100
    eKVCContrast            0x0200
    eKVCBrightness         0x0300
}
```

```

        eKVCVolume           0x0400
        eKVCScreensaverTime  0x0500
        eKVCScreensaverState 0x0600
        eKVCBacklightState   0x0700
        eKVCLED              0x0800
        eKVCJoystickResp     0x0900
        eKVCSpaceMouseResp   0x0A00
        eKVCHandWheelResp    0x0B00
        eKVCOverrideResp     0x0C00
        eKVCALive            0xFE00
        eKVCClientDisconnect 0xFF00
    } TKVCEvent;

typedef struct {
    UINT16 event;
    struct {
        UINT8          overrideVal;
        UINT8          keyVal;
        TKVCJostickData joystickVal;
        SINT16         handWheelVal;
        TKVCSpaceMouseData spaceMouseVal;
    } data;
} TKVCClientData;

typedef enum {
    eKtpKeyboardLedOff   = 1,
    eKtpKeyboardLedOn   = 2,
    eKtpKeyboardLedBlink = 3
} TKtpLedState;

typedef struct {
    char posX;
    char posY;
    char posZ;
} TKVCJostickData;

typedef struct {
    UINT16 posX;
    UINT16 posY;
    UINT16 posZ;
} TKVCSpaceMouseData;

typedef struct {
    SINT16 absVal;
    SINT16 dynVal;
} TKVCHandWheelData;

```

Server → Client

```

typedef enum {
    eKVCSetWheelValue,
    eKVCSetLed
        eKVCSetContrast,
        eKVCSetBrightness,
        eKVCSetVolume,
    eKVCSetScreensaver,

```

```

    eKVCGetLed,
    eKVCGetContrast,
    eKVCGetBrightness,
    eKVCGetVolume,
    eKVCGetScreensaverTime,
    eKVCGetJostickValue,
    eKVCGetSpaceMouseValue,
    eKVCGetOverrideValue,
    eKVCGetWheelValue,

    eKVCSwtichBacklight,
    eKVCGetBacklightState,

    eKVCCPlaySound,
    eKVCCWriteFlash
    eKVCCDisconnect
} TKVCCCommand;

typedef struct {
    TKVCCCommand command;
    SINT16 param;
} TKVCCServerData;

```

7.9.3 Example: Interface on Server

On the server side, the KVC protocol is represented by two classes: `CKVCServer` and `CKVCCConnection`. An object of the `CKVCServer` class represents the actual server (the "listener") and an object of the `CKVCCConnection` class represents a connection to a client.

"Server class"

```

class CKVCServer {
public:
    virtual int Init();
    virtual int Exit();
    virtual CKVCCConnection* OnClientConnect(SOCKET socket,
                                              sockaddr_in
&sockAdr);
    virtual int OnClientDisconnect(CKVCCConnection *pConnection,
                                   TDisconInfo info);
    POSITION ConnectionListHeadPos();
    CKVCCConnection* ConnectionListGetNext(POSITION pos);
    int ConnectionListGetCount();
};

int Init();
Initializes the server and opens the port 0xCEBA for
incoming connections.

int Exit();
Finishes all connections and closes the port 0xCEBA.

```

```
CKVCCConnection* OnClientConnect(SOCKET socket, sockaddr_in  
&sockAdr);
```

This method is always called when a teach pendant establishes a connection to the control. The parameters `socket` and `sockAdr` specify the connection parameters of the teach pendant. This function must return a pointer to an object of the class `CKVCCConnection`. A return value of 0 indicates that the control rejects the logon of the teach pendant.

```
int OnClientDisconnect(CKVCCConnection *pConnection,  
TDisconInfo info);
```

This method will be called if the server cannot reach the client any more. The cause of the logoff is specified in `info`.

```
POSITION ConnectionListHeadPos();
```

This method returns the position of the first entry in the `OpenConnection` list.

```
CKVCCConnection* ConnectionListGetNext(POSITION pos);
```

This method returns a pointer to the `ConnectionObject` that is stored on the position `pos` in the `OpenConnection` list.

```
int ConnectionListGetCount();
```

This method returns the number of connections that are stored in the `OpenConnection` list.

Connections

For details about the LED numbering (ledNr) needed for the following functions, refer to the chapter *Numbering of LEDs* on page 48.

```
class CKVCCConnection {
private:
    char *pIpAdr;
public:
    virtual int Init(CKVCServer *pServer, SOCKET socket,
                    SOCKADDR_IN &socketAdr);
    virtual int Exit();
    virtual int OnOverrideChange(SINT16 val);
    virtual int OnWheelChange(SINT16 wheelAbsVal);
    virtual int OnKeypadEvent(TKVCEvent keyEvent, UINT8 keyNum);
    virtual int OnJoystickEvent(TKVCEvent event, TKVCJoystickData *pJData);
    virtual int OnSpaceMouseEvent(TKVCEvent event,
                                    TKVCSpaceMouseData *pSMDData);
    virtual int OnDisconnect();

    virtual int GetWheelVal(TKVCHandWheelData &hwData);
    virtual int GetOverrideVal(SINT8 &overrideVal);
    virtual int GetJoystickPos(TKVCJoystickData &jData);
    virtual int GetSpaceMousePos(TKVCSpaceMouseData &smData);
    virtual int GetLedState(UINT8 ledNum,UINT8 &state);
    virtual int GetContrast(UINT8 &contrast);
    virtual int GetBrightness(UINT8 &brightness);
    virtual int GetVolume(UINT8 &volume);
    virtual int GetScreensaverTime(UINT16 &time);
    virtual int GetScreensaverState(UINT8 &state);

    virtual int SetWheelVal(SINT16 val);
    virtual int SetLed(UINT8 ledNum, TKVCLedMode mode);
    virtual int SetContrast(UINT8 contrast);
    virtual int SetBrightness(UINT8 brightness);
    virtual int SetVolume(UINT8 volume);
    virtual int SetScreenSaver(UINT16 screenSaverTime);
    virtual int SwitchBacklight(UINT8 backlightOnOff);

    virtual int WriteToFlash();
    virtual int PlaySound(UINT16 soundNr);
    sockaddr_in GetSocketAdr();
    SOCKET GetSocket();
};
```

The methods `OnOverrideChange`, `OnWheelChange`, `OnKeypadEvent`, `OnJoystickEvent` and `OnSpaceMouseEvent` will be called if an event has occurred at the corresponding operating element on the client.

```
int CKVCCConnection::OnOverrideChange(SINT16 val);
```

This method will be called if the value of the override potentiometer has changed on the client. The current value is specified in the parameter `val`.

```
int CKVCCConnection::OnWheelChange(SINT16 wheelAbsVal);
```

The method `OnWheelChange` will be called if the value of the handwheel has changed. The current value is transferred as an absolute value in the parameter `wheelAbsVal`.

```
virtual int OnKeypadEvent(TKVCEvent keyEvent, int keyNum);
```

The method `OnKeypadEvent` will be called if a key has been pressed/released. The key number is specified in `keyNum`, the state of the key (make, break) in `keyEvent`.

```
int CKVCCConnection::OnJoystickEvent(TKVCEvent event,
                                     TKVCJoystickData *pJData);
```

The method `OnJoystickEvent` is called when the joystick is moved from the 0 position and reaches the 0 position. The current position is transferred in the parameter `event`, and the current values in the parameter `pJData`.

```
int CKVCCConnection::OnSpacemouseEvent(TKVCEvent event,
                                       TKVCSpaceMouseData *pSMDData);
```

The method `OnSpacemouseEvent` is called when the space mouse is moved from the 0 position and reaches the 0 position. The current position is transferred in the parameter `event`, and the current values in the parameter `pSMDData`.

```
int CKVCCConnection::OnDisconnect(int val);
```

The method `OnDisconnect` will be called if the client terminates the connection with the disconnect message.

```
int CKVCCConnection::GetWheelVal(TKVCHandWheelData &hwData);
```

The method `GetWheelVal` returns the current position value of the wheel in `hwData.absVal`, and the modification value since the last call in `hwData.dynVal`.

```
int CKVCCConnection::GetOverrideValue(SINT16 &overrideVal);
```

The method `GetOverrideValue` returns the current value of the override potentiometers in the variable `overrideVal`.

```
int CKVCCConnection::GetJoystickPos(TKVCJoystickData &jData);
```

The method `GetJoystickPos` returns the current joystick position in the variable `jData`.

```
int CKVCCConnection::GetSpaceMousePos(TKVCSpaceMouseData &smData);
```

The method `GetSpaceMousePos` returns the current space mouse position in the variable `smData`.

```
int CKVCCConnection::GetLedState(UINT8 ledNr , UINT8 &state);
```

The method `GetLedState` is used to request the current state of the LED transferred in `ledNr`. The result is returned in `state`.

```
int CKVCCConnection::GetContrast(UINT8 &contrast);
```

The method `GetContrast` returns the current value of the contrast setting in the variable `contrast`.

```
int CKVCCConnection::GetBrightness(UINT8 &brightness);
```

The method `GetBrightness` returns the current value of the brightness setting in the variable `brightness`.

```
int CKVCCConnection::GetVolume(UINT8 &volume);
```

The method `GetVolume` returns the current value of the volume setting in the variable `volume`.

```
int CKVCCConnection::GetScreensaverTime(UINT16 &screensaverTime);
```

The method `GetScreensaverTime` returns the current value of the screensaver setting in the variable `screensaverTime`.

```
int CKVCCConnection::GetScreensaverState(UINT8 &state);
```

The method `GetScreensaverstate` returns the current state of the screensaver in the variable `state`.

```
int CKVCCConnection::GetBacklightState(UINT8 &state);
```

The method `GetBacklightState` returns the current state of the background lighting in the variable state.

```
int CKVCCConnection::SetWheel(SINT16 value);
```

This method sets the value of the handwheel to the value specified in `value` and returns the last value. This value is the initial value for the absolute value returned by `OnWheelChange`.

```
int CKVCCConnection::SetLed(UINT8 ledNum, TKVCLedeMode mode);
```

Calling the method `SetLed` sets the LED defined in `ledNum` to the mode transferred in `mode`.

```
int CKVCCConnection::SetContrast(UINT8 contrast);
```

Calling the method `SetContrast` changes the value of the contrast setting on the client.

```
int CKVCCConnection::SetBrightness(UINT8 brightness);
```

Calling the method `SetBrightness` changes the value of the brightness setting on the client.

```
int CKVCCConnection::SetVolume(UINT8 volume);
```

Calling the method `SetVolume` changes the value of the volume setting on the client.

```
int CKVCCConnection::SetScreensaver(UINT16 screensaverTime);
```

Calling the method `SetScreensaver` changes the response time of the screensaver on the client.

```
int CKVCCConnection::SwitchBacklight(UINT8 backlightOnOff);
```

Calling the method `SwitchBacklight` switches on and off the background lighting on the client (`backlightOnOff = 1 / backlightOnOff = 0`).

```
int CKVCCConnection::WriteToFlash();
```

Calling the method `WriteToFlash` saves the contents of the Client Windows Registry in the flash memory.

```
int CKVCCConnection::PlaySound(UINT16 soundNr);
```

Calling the method `PlaySound` starts the reproduction of the sound with the number transferred in `soundNr`.

```
sockaddr_in GetSocketAdr();
```

The method `GetSocketAdr` returns the features of the connection;

```
SOCKET GetSocket();
```

The method `GetSocket` returns the current socket of the connection with the client.

Server Implementation

The base of the server are the two classes `CKVCServer` and `CKVCCConnection`. The class `CKVCServer` establishes and manages the connections. The class `CKVCCConnection` constitutes the actual connection. To correctly implement a server, a derivation of the class `CKVCServer` is needed.

```
class CKVCTestServer: public CKVCServer{
public:
    CKVCTestServer();
    virtual ~CKVCTestServer();

    CKVCCConnection* OnClientConnect(SOCKET socket, sockaddr_in
                                     &sockAdr);
    int OnClientDisconnect(CKVCCConnection *pConnection,
                           TKVCDisconInfo info);
};
```

In this class, the method `OnClientConnect` must be overwritten. In this method, a `CKVCCConnection` object must be created and initialized.

```
CKVCCConnection* CKVCTestServer::OnClientConnect(SOCKET
socket,
sockaddr_in &sockAdr){
    CKVCTestConnection *pConnect = 0;
    ...
    pConnect = new CKVCTestConnection();
    if (pConnect != 0){
        pConnect->Init(this, socket, sockAdr);
    }
    ...
    return pConnect;
}
```

The method `OnClientDisconnect` can be overwritten. But it must be guaranteed that the method `CKVCServer::OnClientDisconnect` is called in this derivation.

```
int CKVCTestServer::OnClientDisconnect(CKVCCConnection *pConnection,
                                       TKVCDisconInfo info){
    ...
    return CKVCServer::OnClientDisconnect(pConnection, info);
}
```

In the derivation of the class `CKVCCConnection`, only the `Event` and `Change` method must be derived. The `Get` methods can be derived, but it must be guaranteed that the method of the base class is called before the data are used.

```
class CKVCTestConnection: public CKVCCConnection{
public:
    CKVCTestConnection();
    virtual ~CKVCTestConnection();

    virtual int OnOverrideChange (SINT16 val);
    virtual int OnWheelChange (SINT16 wheelAbsVal);
    virtual int OnKeypadEvent (TKVCEvent keyEvent, UINT8 keyNum);
};
```

```

virtual int OnJoystickEvent      (TKVCEvent event,
                                  TKVCJoystickData *pJData);
virtual int OnSpaceMouseEvent    (TKVCEvent event,
                                  TKVCSpaceMouseData *pSMDData);

virtual int OnAliveMsg           ();
virtual int OnDisconnect         ();
virtual int GetWheelVal          (TKVCHandWheelData &hwData);
virtual int GetOverrideVal       (SINT8 &overrideVal);
virtual int GetJoystickPos       (TKVCJoystickData &jData);
virtual int GetSpaceMousePos     (TKVCSpaceMouseData &smData);
virtual int GetLedState(UINT8 ledNum, UINT8 &state);
virtual int GetContrast          (UINT8 &contrast);
virtual int GetBrightness        (UINT8 &brightness);
virtual int GetVolume            (UINT8 &volume);
virtual int GetScreensaverTime   (UINT16 &screeTime);
virtual int GetScreensaverState  (UINT8 &state);
virtual int GetBacklightState    (UINT8 &state);
};

int CKVCTestConnection::OnOverrideChange (SINT16 val){
    cout << "OnOverrideChange: " << (int)val << endl << flush;
    return true;
}

int CKVCTestConnection::GetOverrideVal (SINT8 &overrideVal){
    CKVCConnection::GetOverrideVal(overrideVal);
    cout << "GetOverrideVal: " << (int)overrideVal << endl << flush;
    return true;
}

```

7.10 Remote Software ActiveSync

This software is used as a debug interface and to adjust and transmit data from and to a PC.

The remote software ActiveSync is a product by Microsoft and can be downloaded free of charge from the following download address:

<http://www.microsoft.com/windowsmobile/activesync/activesync42.msp>

7.10.1 Data connection via RS-232-C debug interface

The data connection from the KeTop to the PC is established as follows:

- 1) Remove the cover of the cable entrance area on the KeTop.
- 2) Plug in the Download Cable KeTop XD 040 (KeTop and PC)
- 3) Start the ActiveSync software on the PC
 - a) select 'File' -> 'Delete Partnership' ...
 - b) deactivate '() Allow serial cable or ... ' -> <OK>
 - c) activate '(x) Allow serial cable or ... ' -> <OK>
- 4) Start the ActiveSync-Software on the KeTop:
Start -> Programs -> Communication -> Active Sync
- 5) At the PC:
- Connect KeTop as a "Guest" (Set **Up a Partnership -> No**).

Now the data connection between the KeTop and the PC is established. In case of communication problems, check the following conditions:

- Max. time delay between step 3c) and step 4. = 30s.
- For further attempts repeat steps 3. to 5.
- The ActiveSync software must be started manually.
(Plugging in the connection cable does not start ActiveSync!)

The factory-set baudrate for the remote connection is 115 kBaud. In case of communication problems the baudrate can be reduced. The baudrate can be changed as follows:

- Start -> Programs -> Communication -> Remote Networking
- select "com1_115k"
- File -> Properties
- SP1 on COM1: -> Configure -> Port Settings
(...change Baud Rate...)
- Close all Windows with <OK>

(optional: Start -> Programs -> KeTop -> Registry Backup -> <OK>)

7.10.2 Data connection via USB client

The data connection from the KeTop to the PC is established as follows:

- 1) Remove the cover of the cable entrance area on the KeTop.
 - 2) Start the ActiveSync software on the PC
 - a) delete existing partnerships ('File' -> 'Delete Partnership')
 - b) activate USB connection ('(x) Allow USB connections <OK>')
 - 3) Connect USB cable (Mini-B) to KeTop and PC.
When the KeTop was recognized as USB device, the connection will be established automatically.
 - 4) At the PC:
 - Connect KeTop as a "Guest" (Set **Up a Partnership** -> **No**).
- The ActiveSync software at KeTop starts automatically when using the USB connection.

8 KeTop - Specific Operating Instructions

This chapter describes the KeTop-specific settings and the differences to standard Windows CE devices.

Information

- The date and the time are not stored in the KeTop and, if needed, must be set anew after turning off/on. The date and the time may be very important for the log data for example.

Information

- At settings that have not been made with the ConfigTool, the modifications must be saved as follows:

Start -> Programs -> KeTop -> Registry Backup
(or in the explorer with the command „\windows\RegistryBackup.exe “)

8.1 Setting of Date and Time

During start-up the KeTop shows automatically the window for setting date and time.

The real time clock is not puffered with a battery. So, if you use real time clock it must be set during each start up.



The automatically pop up of this window can be disabled by deactivating the checkbox "Restart Settime during next startup". In this case date and time get random values.

If the other checkbox 'Set the default time during startup' is activated, the KeTop uses default values. (date and time when the image was ceated.)

In both cases the settings must be saved in the registry.
("Start -> Programs -> KeTop -> Registry Backup").

8.2 KeTop Configuration Tool (ConfigTool)

The ConfigTool is used to calibrate the operating elements, to control the functionality of the operating elements and to set start-up functions.

To activate the tool, select the following item:

Start -> Programs -> KeTop -> KeTop Configuration Tool
(or by double-clicking on the file „Configuration_Tool.exe“ in the Windows directory).

Information

- *The appearance of the Config tool depends on the operating elements installed in KeTop (the menus for override potentiometer, joystick and handwheel are only displayed when the operating elements are installed in the device).*


After carrying out modifications on the configuration and quitting the program, you can save all modifications in the registry. A window with the following message and options appears:

Data has changed! Do you want to write the registry to the flash? Yes/No

With „No“, the settings will not be stored therefore. They will get lost when the KeTop is turned off.

„Yes“ saves the calibration in the flash. The settings are preserved after a restart of the device. The device is blocked during the saving procedure (takes approx. 10 s).


8.2.1 Calibration of Joystick

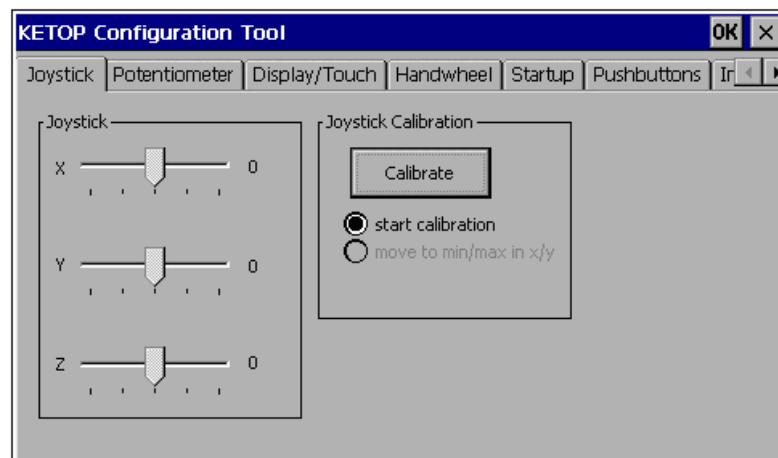

A number is displayed next to the slide bar. During calibration, this number specifies the current value of the ADC (value range: 0..1024) and only con-

trols the function. After calibration, the number specifies the current value of the joystick (value range: -15 .. 15 for each joystick axis). This value is also the value the KeTop API function *KtpGetJoystickPos* supplies to the application.


8.2.2 Calibration of Potentiometer

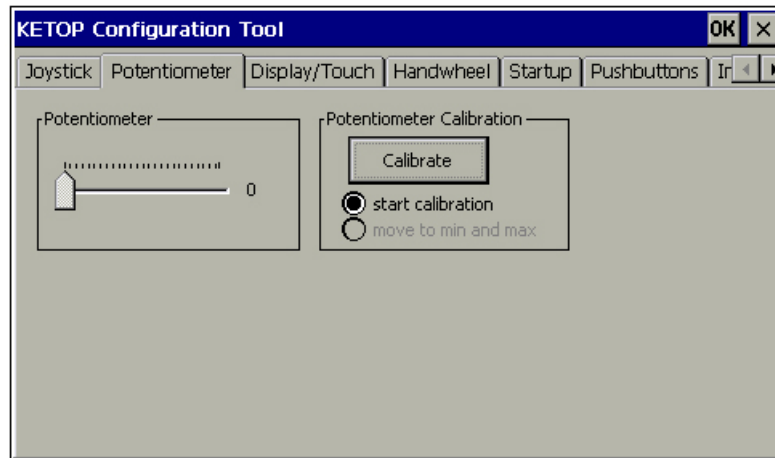

A number is displayed next to the slide bar. During calibration, this number specifies the current value of the ADC (value range: 0..1024) and only controls the function. After calibration, the number specifies the current value of the potentiometer (value range: 0 ...127). This value is also the value the KeTop API function *KtpGetOverridePoti* supplies to the application.


8.2.3 Display and Touch Screen Settings

In this window, the brightness for the display can be set.

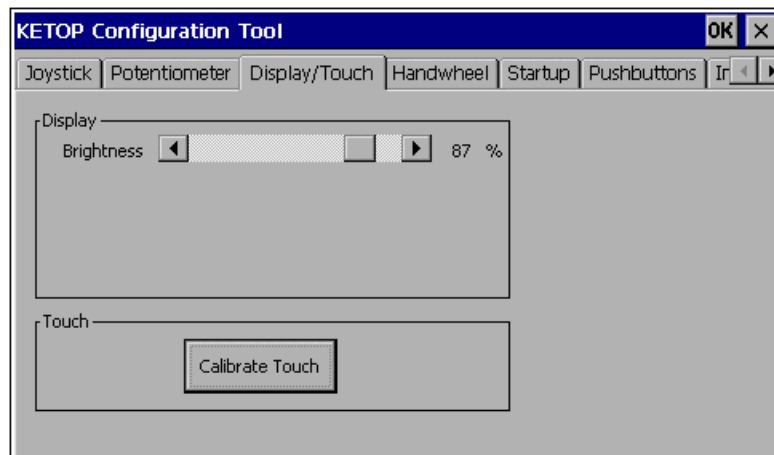

In this window you can also calibrate the touch screen.


8.2.4 Setting the Handwheel to Zero

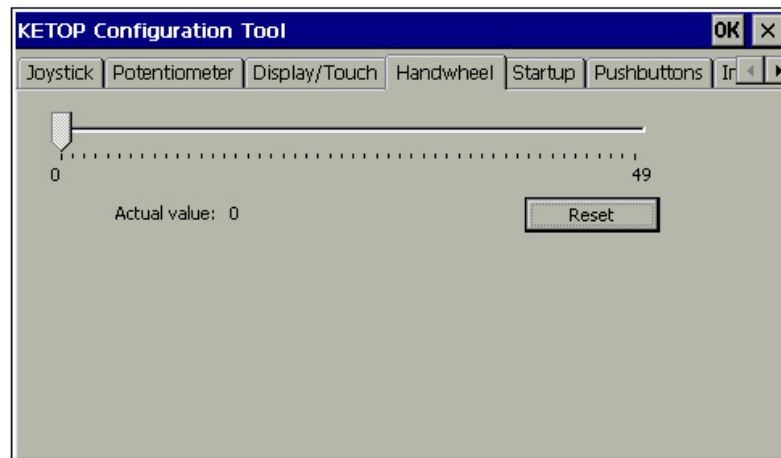

The handwheel outputs a 16-bit value which can be processed in the customer application as needed (e.g.: 0-65535, +-32767, ...). In the dialog box, the value from 0 to 65535 is displayed. When the device is turned on, the value of the handwheel will be set to 0. If the key „Set“ is pressed, the current value of the handwheel will be replaced by the start value.

8.2.5 Actions on next Startup

In this window, you can determine actions that are executed after a restart of the KeTop.

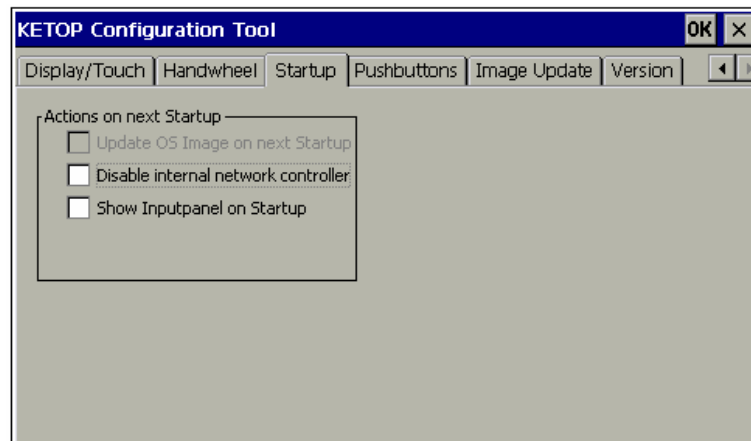

- *Update OS Image on next Startup (not available yet):*
If you select this item, an OS(Operating System) image will automatically be loaded from the BOOTP Server via the network next time the KeTop is started.


Information

In this case, the Ethernet connection must have been established, the BOOTP Server must be correctly configured and an OS image file must be available on the server.

- **Show Inputpanel on Startup:**
If you select this item, the softkeyboard will be launched at every startup.

8.2.6 Control of Buttons (Pushbuttons)

This toolbox enables a simple functional control of the buttons of the Ke-Top.

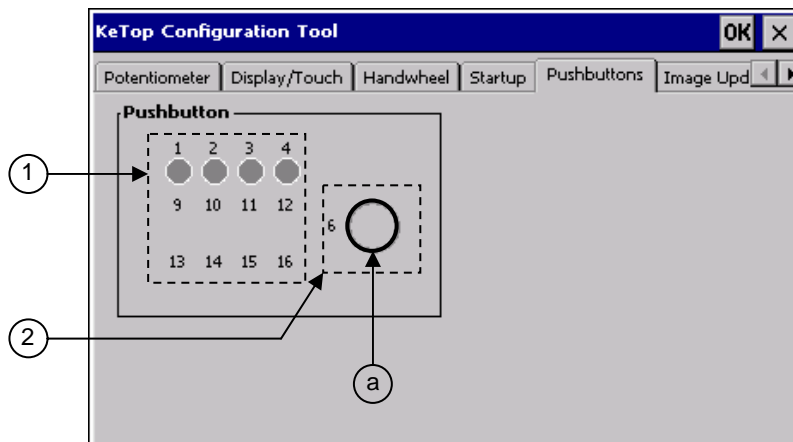

- 1 Symbols for the LEDs of the membrane keypad (if available)
(1 to 4: left keypad,
9 to 12: right keypad,
13 to 16: keypad below)
- 2 Symbols for operating elements
- a The black ring signals the actuation of an operating element

By clicking on one of the three symbols for operating elements (2), the corresponding LEDs of the operating elements can be switched on, off or to flashing. The first click switches the LED to flashing, the second click switches the LED on, and the third click switches the LED off again.

The same applies to the LEDs of the membrane keypad (1).

The actuation of an operating element is signaled by a black ring (a). This ring is grey if the operating element is not actuated.

8.2.7 Loading an Image File

This toolbox enables loading an image file into the KeTop.

Information

- *The image file may be copied to every directory excepting to directory \IPSM.*
- *Before each image update execute „Check file“ necessarily.*

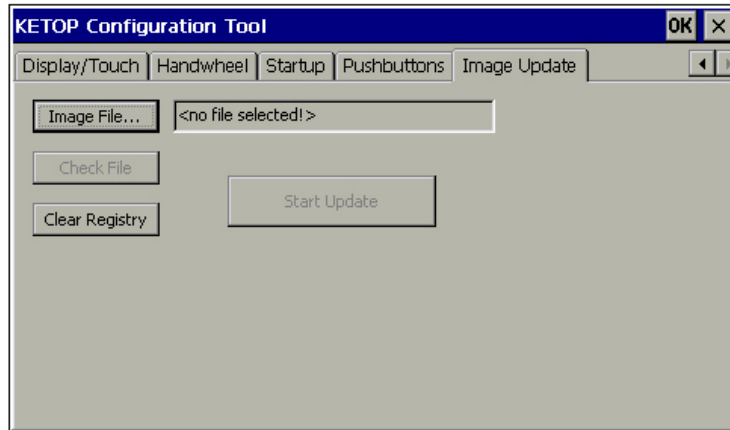


Image File

Clicking this button enables you to select a new WinCE image file in the file selection dialog.

Information

In the event of an image update, the registry will be deleted and the KeTop rebooted automatically. Following that, the KeTop reboots with the factory settings.

Check File

The selected file can be checked for validity. "Check File" will only be active if a valid image file has been selected.

Start Update


This button starts the update. The progress status is displayed in the bar below. "Start Update" will only be active if the selected image file has been successfully checked for validity (with "Check File").

Clear Registry

This item clears the registry and automatically reboots the KeTop. Following that, the KeTop reboots with the factory settings, and all settings (touch screen, joystick and override potentiometer, system control,...) must be stored anew.


8.2.8 Version Info

This window shows the actual version of the WinCE-SW image and of the ConfigTool and KetopAPI of the KeTop.

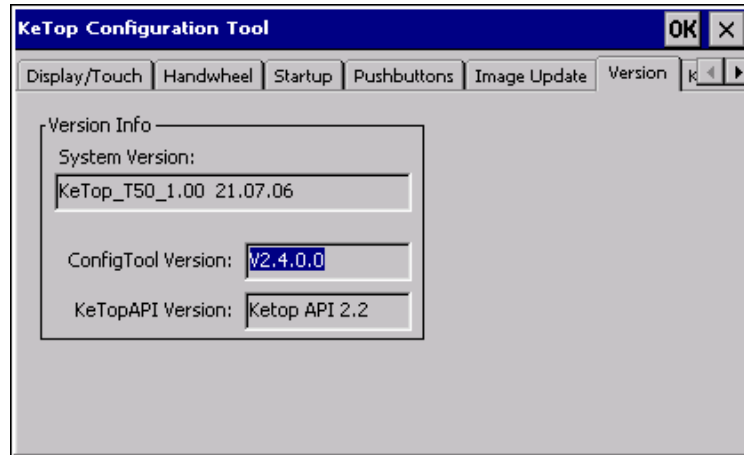

8.2.9 Checking the virtual key code of keys

This toolbox shows the virtual key code of a pressed or released key.

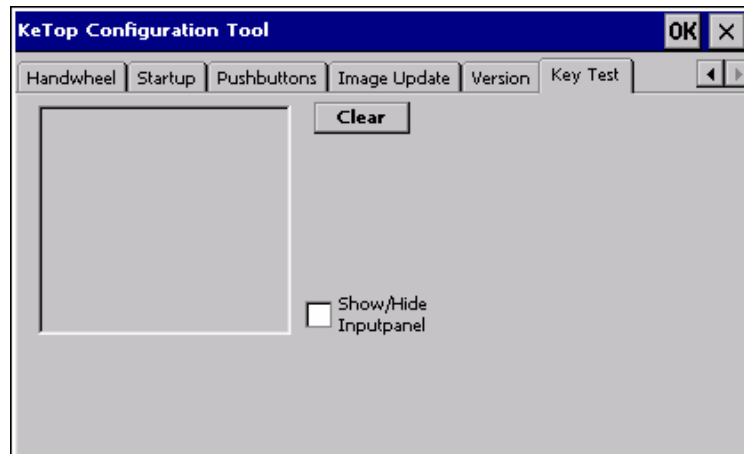

Key Test

Shows the attached virtual key code (HEX) and the event “pressed” of a pressed key.

Shows the attached virtual key code (HEX) and the event “released” of a released key.

8.3 Installation of Programs

Programs can be only installed in the IPSM (Intel Persistent Storage Manager) directory. Since only this directory is stored in the flash, data installed in another way will get lost after turning off the KeTop.

Installation data entered in the registry can be saved with the command „\Windows\RegistryBackup.exe“.

Information

- *System files, which are copied to the directory \windows while installation, do not remain durably stored. For this reason these files must be copied manually into the directory \IPSM\windows (if necessary, this directory must be created by the user). With a restart of Windows CE these files are copied automatically into the directory \windows. So, these files are again available for the operating system and are again present also after a restart.*

8.4 Saving Files

Files must be saved in the IPSM directory. The contents of other directories are not saved when the device is turned off.

8.5 Transferring Files

8.5.1 Transfer via external storage device (USB-Stick)

For further information on suitable storage devices please refer to the section "PC-card slot for PC-cards I, II, III" and/or "Compact Flash - Card Slot" in the chapter "Connection" or "USB-Stick".

- 1) Insert the external storage device into a suitable PC.
- 2) Copy the required files to the external storage device.
- 3) Insert the external storage device into the KeTop.
- 4) Copy the required files from "\storage card" or "\hard disk" to "\ipsm".

8.5.2 Transfer via network connection by SMB acces from PC to KeTop

This kind of SMB access is only possible with Windows XP Professional and some Versions of Windows 2000.

For general information see the ", section "Ethernet" in the chapter "Connection".

The KeTop must have a valid Ethernet address.

In case there is no DHCP-server in the network, the IP-address can be set via "Start → Settings → Control Panel → Network and Dial-up Connections → SMSC911X1... → IP Address..."

To save the IP-address go to "Start → Programs → KETOP → Registry Backup" and restart the KeTop.
(The Ethernet-connection can be checked with "Ping".)

The PC now has full access to the directory structure at the KeTop so that all required files can be copied from the PC to "\ipsm" at the KeTop.

8.5.3 Transfer via network connection by access from KeTop to the PC

For general information see the section "Ethernet" in the chapter "Connection".

The KeTop must have a valid Ethernet address.

In case there is no DHCP-server in the network, the IP-address can be set via "Start → Settings → Control Panel → Network and Dial-up Connections → SMSC911X1... → IP Address..."

To save the IP-address go to "Start → Programs → KETOP → Registry Backup" and restart the KeTop.
(The Ethernet-connection can be checked with "Ping".)

Then enter the IP-address of the KeTop in the address line of the Windows Explorer at the PC. (e.g.: \\192.168.30.107)

After start-up of the KeTop start the Windows Explorer at the KeTop. (Start → Programs → Windows Explorer)

The shared directory of the PC can now be addressed in the address line of the Windows Explorer at KeTop with "\\<pcname>\<share name>". (e.g.: \\tkg007\temp)

The directory at the PC must be shared and a user with the necessary rights to access must exist.

The files can now be copied from the PC to "\ipsm" at the KeTop.

8.5.4 Transfer via ActiveSync

Therefor see chap. *Remote Software ActiveSync*.

8.6 Changeover from KeTop T100

If you change over from a KeTop T100 to a KeTop T50VGA or KeTop T41, the following must be observed when setting the baud rate for the RS-422-A interface (Com5):

- The setting for the RTS line (`DBC.fRtsControl`) must be set from disabled to **enabled** for the KeTop T50VGA/T41 (the KeTop T100 had the setting disabled).
- The baud rate and RTS settings can be read and/or changed via the Windows-API functions `GetCommState` and `SetCommState`.

9 Options

This chapter describes the options the KeTop is available with.

9.1 Override Potentiometer

If available, the override potentiometer in the KeTop is evaluated by the software and can be read via the KeTop-API using a program.

The override potentiometer can be used for example for setting the number of spindle revolutions and the forward feed on machine tools.

- Resolution: 0 – 127, linear

9.2 Electronic Handwheel

If available, the electronic handwheel in the KeTop is evaluated by the software and can be read via the KeTop-API using a program.

50 pulses are counted per revolution. Turning the handwheel clockwise increments the count, turning the handwheel counter-clockwise decrements the count (0-65535, 16-bit value).

Main features

- 50 lock-in positions / revolution
- 1 pulse / lock-in position

Information

- *If the KeTop falls to ground, control the position of the handwheel knob. If necessary press down the knob until it snaps in.*

9.3 Illuminated Push-Button

If available, the illuminated push-buttons in the KeTop are evaluated by the software and can be read via the KeTop-API (see page 47) using a program.

The illuminated push-buttons are available as „momentary“ type or as „maintaining“ type.

9.4 Key Switch

If available, the key switch is evaluated by the software in the KeTop and can be read via the KeTop-API using a program.

The key switch is available with 3 positions.

9.5 Joystick

If available, the 3-axis joystick in the KeTop is evaluated by the software and can be read via the KeTop-API using a program.

To avoid that the joystick is damaged when the device falls to ground, a short joystick is used. The joystick enables moving robot axes for example.


- Value range: -15 to +15 per axis (31 increments)

10 Accessories

10.1 Wall bracket KeTop WB090 and KeTop WB095


The powder-coated black wall bracket is used for stationary operation or storage of the KeTop.

Two types of wall brackets are available:

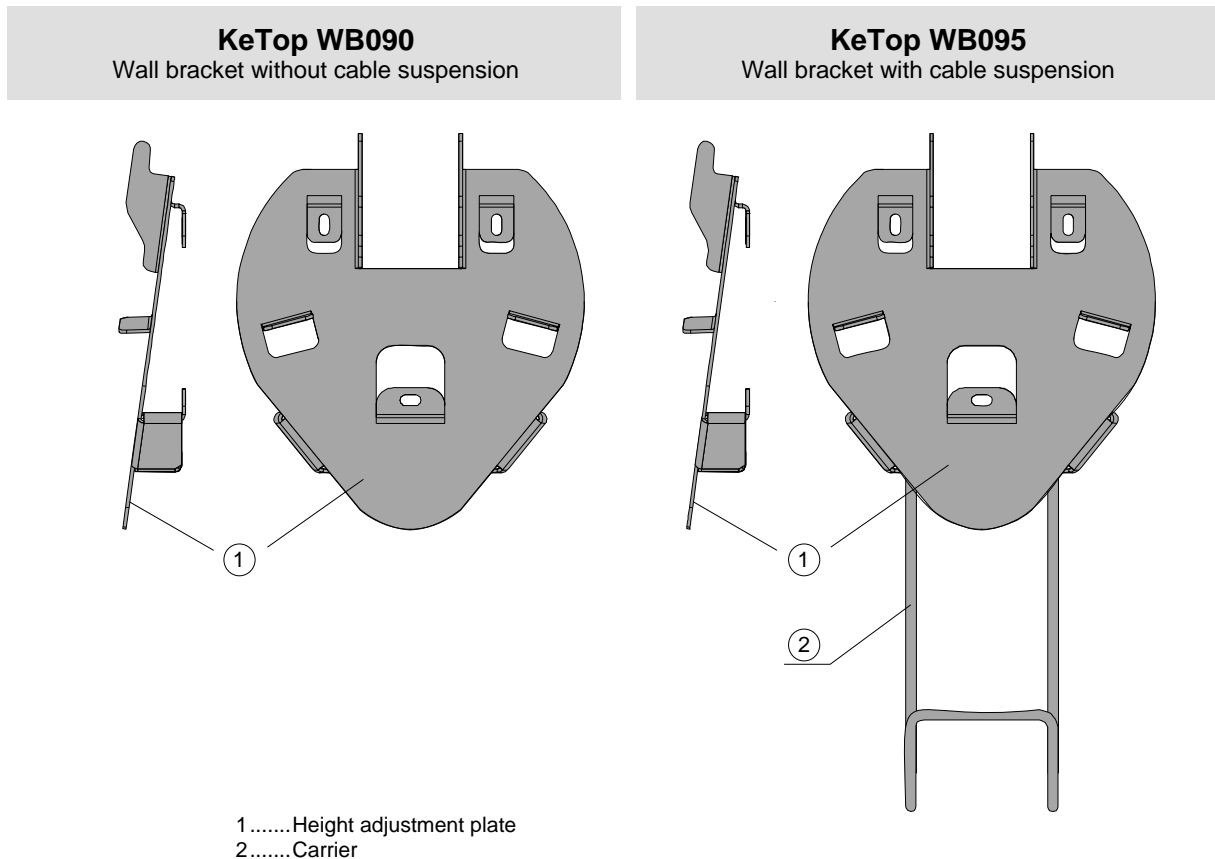


Wall bracket KeTop WB100 and KeTop WB110 with KeTop

10.1.1 Dimensions (mm)

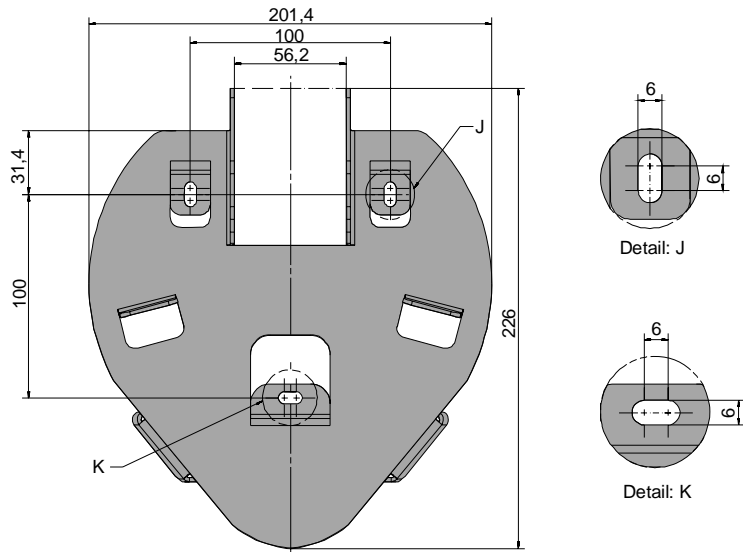

Wall bracket KeTop WB090, front view

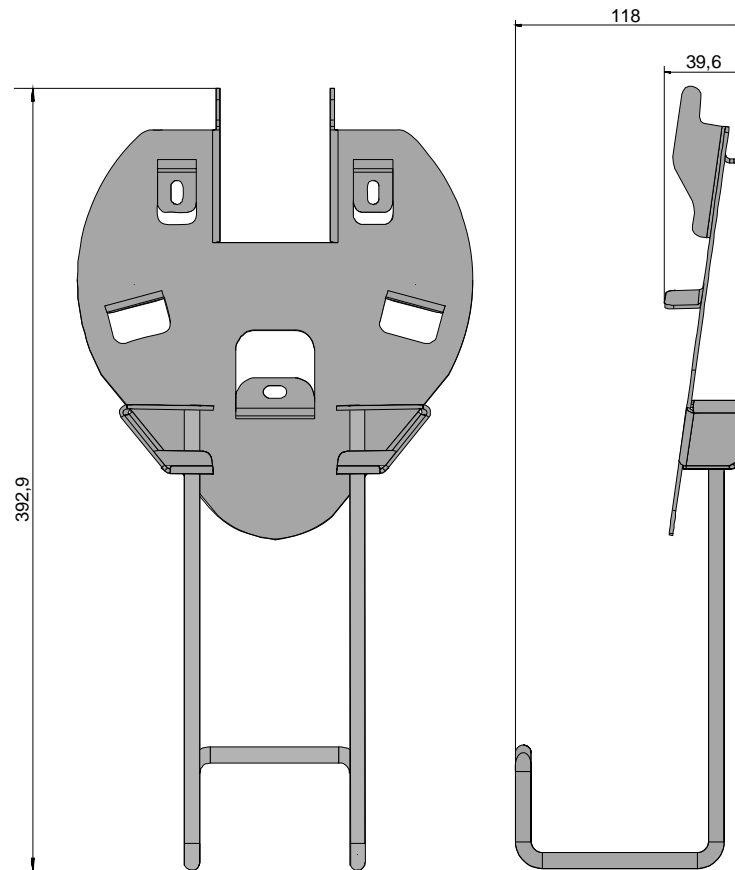


Wall bracket KeTop WB095, rear and side view

10.2 Wall Bracket with Height Adjustment plate KeTop WBxxx

The powder-coated black wall bracket is used for stationary operation or storage of the KeTop.

The carrier is adjustable in 8 positions over a height of 320 mm (12.6 in). Take care to hang up the carrier in all 4 points in the height adjustment plate. The cable suspension must be mounted on the carrier using the screws delivered with the device.


Two types of wall brackets are available:

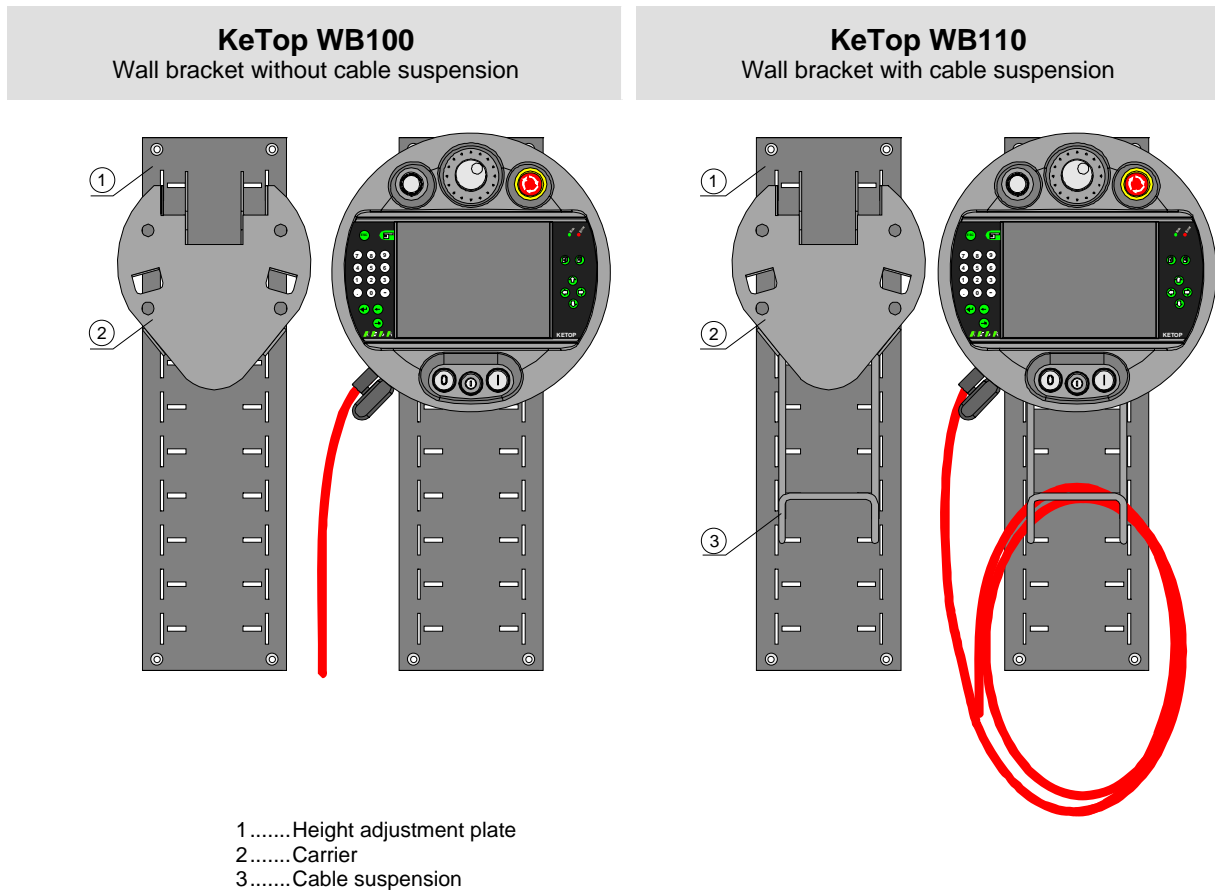

Wall bracket KeTop WB100 and KeTop WB110 with KeTop

10.2.1 Height adjustment plate

For mounting the height adjustment plate, use suitable screws (not part of delivery).

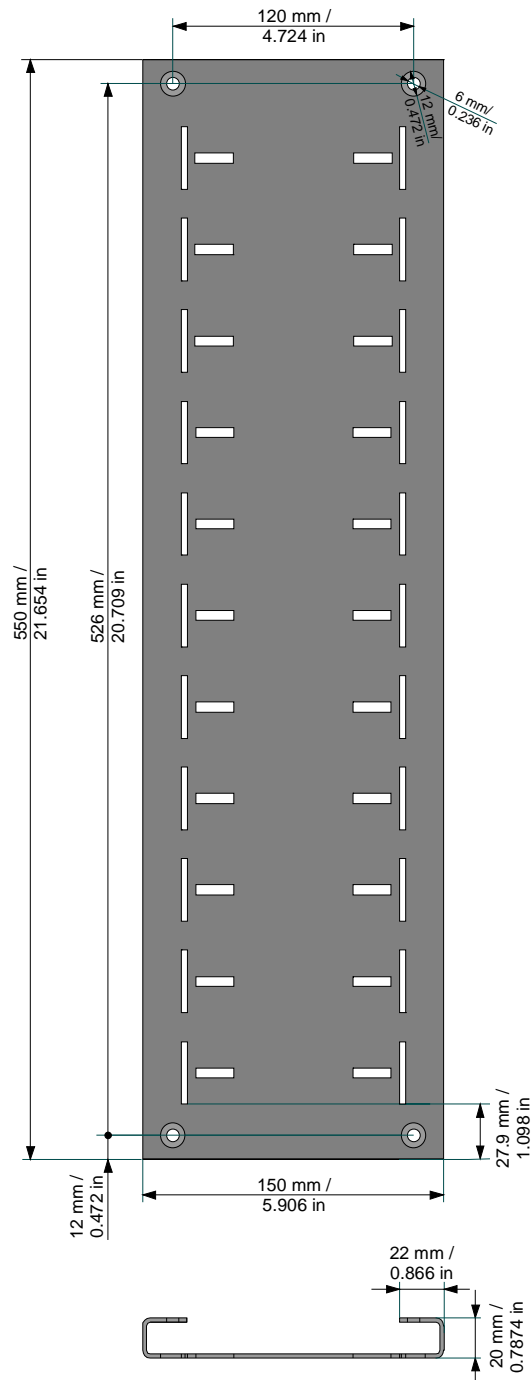


Height adjustment plate for wall bracket WB110

10.3JB 001 Junction Box

This chapter describes the junction box JB 001 which is used to connect a KeTop to a Kemro K2 PLC via Ethernet, CAN, RS-422-A and RS-232-C.


10.3.1 Device description

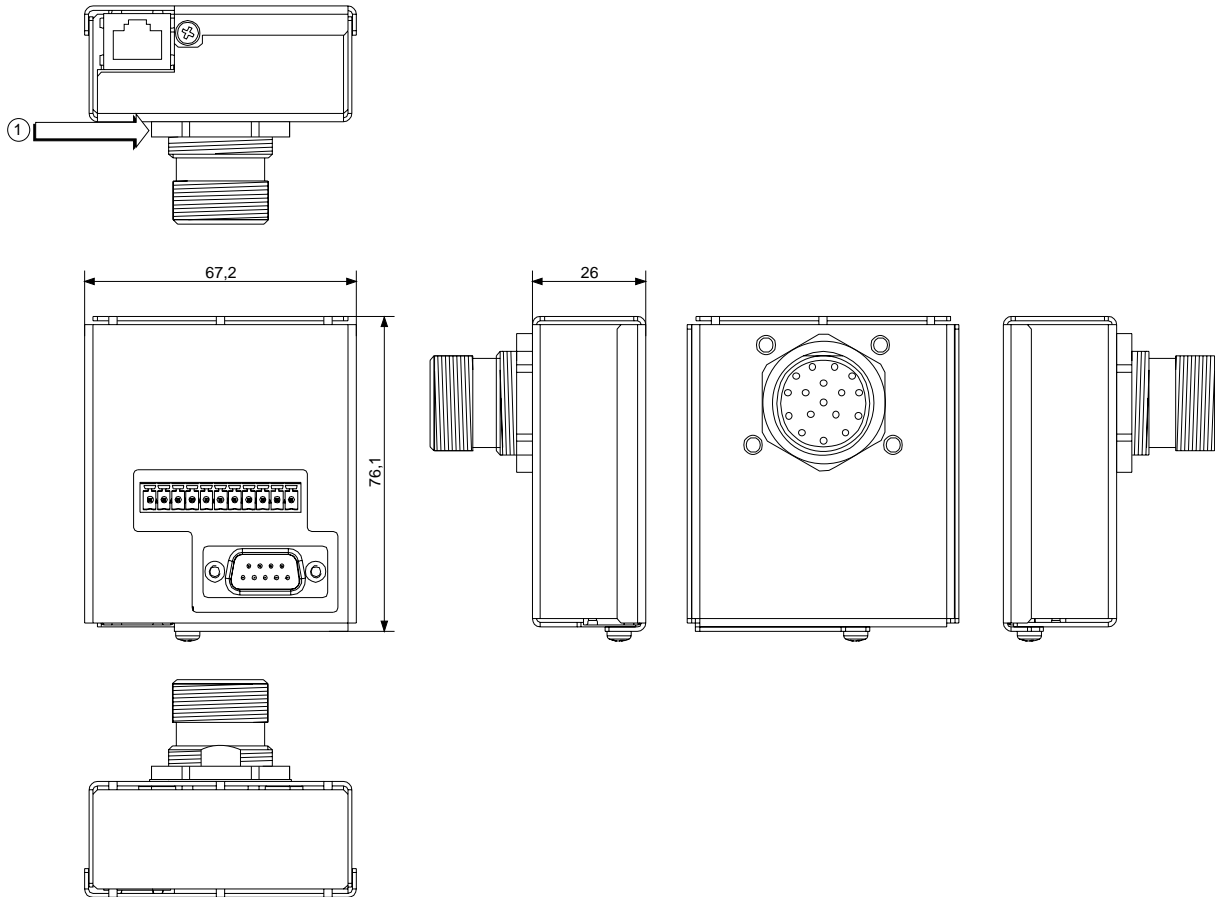

1Mounting nut

View of the junction box JB 001

10.3.2 Connection

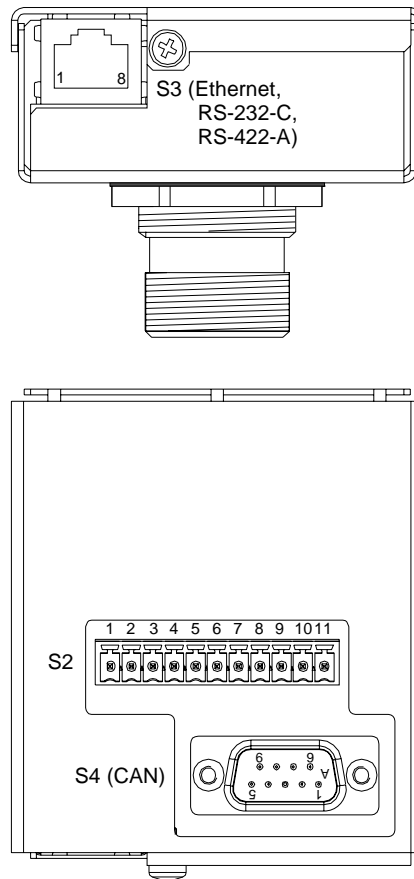

- K1..... 17-pin Coninverse female connector for the KeTop connection cable
 S2..... Terminal block for power supply, emergency stop switch and enabling switch
 (for this terminal block a plug will be needed, see below)
 S3..... RJ-45 female connector for Ethernet, RS-232-C or RS-422-A connection
 S4..... 9-pin DSUB male connector for CAN connection

Connectors of the junction box JB 001

10.3.2.1 Order data of the plug for the terminal block S2

For the terminal block S2 a separate plug is required. This plug with material number FMC 1,5/11-ST-3,5 can be orderd at "Phoenix".

10.3.3 Connection diagram

The connection diagram shows the connection of power supply, control lines (emergency stop switch and enabling switch) and data lines via the junction box.




WARNING!

- Danger to persons by electric shock!
 - Only supply the device with power from voltage sources having protective extra-low voltage (e.g. SELV or PELV acc, to IEC 61131-2)
 - Only connect voltages and circuits which are safely separated from dangerous voltages (e.g. by means of sufficient insulation) to connections, terminals or interfaces up to a rated voltage of 50 V.
-

Information

- Only one connector (S3-RJ45-Telplug for Ethernet or S4-DSSUB-plug for CAN) with active signals from the PLC is allowed to be connected. Otherwise conflicts between the CAN signals will occur.
- Due to the CAN-specific wiring on the SUB-D S4 connector, the connection of RS232-C or RS-422-A to this connector is not possible.

10.3.3.1 Ethernet

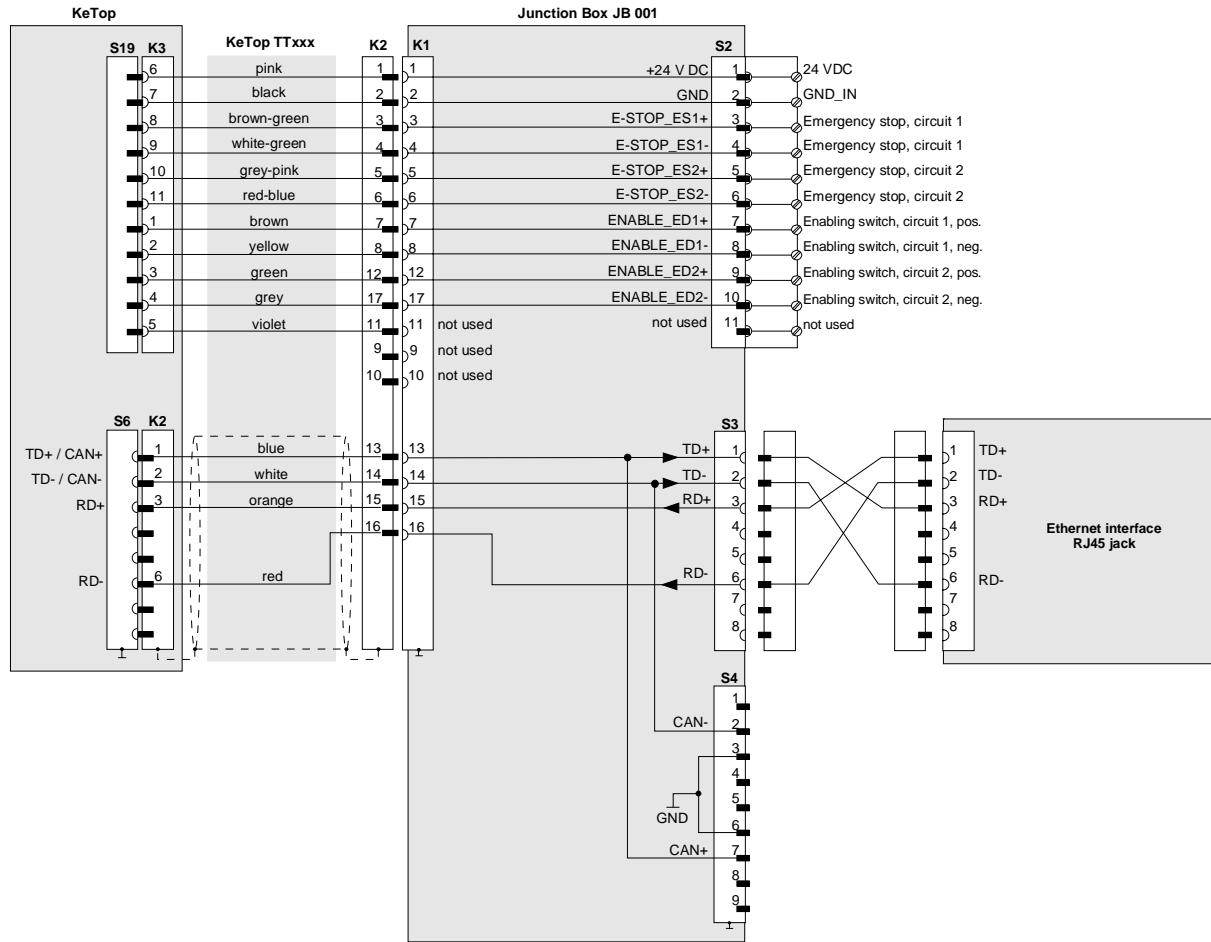


Connection diagram for Ethernet: KeTop via junction box JB 001

Notice


- Point-to-point connections between KeTop and PLC require a crossed cable.

10.3.3.2 CAN

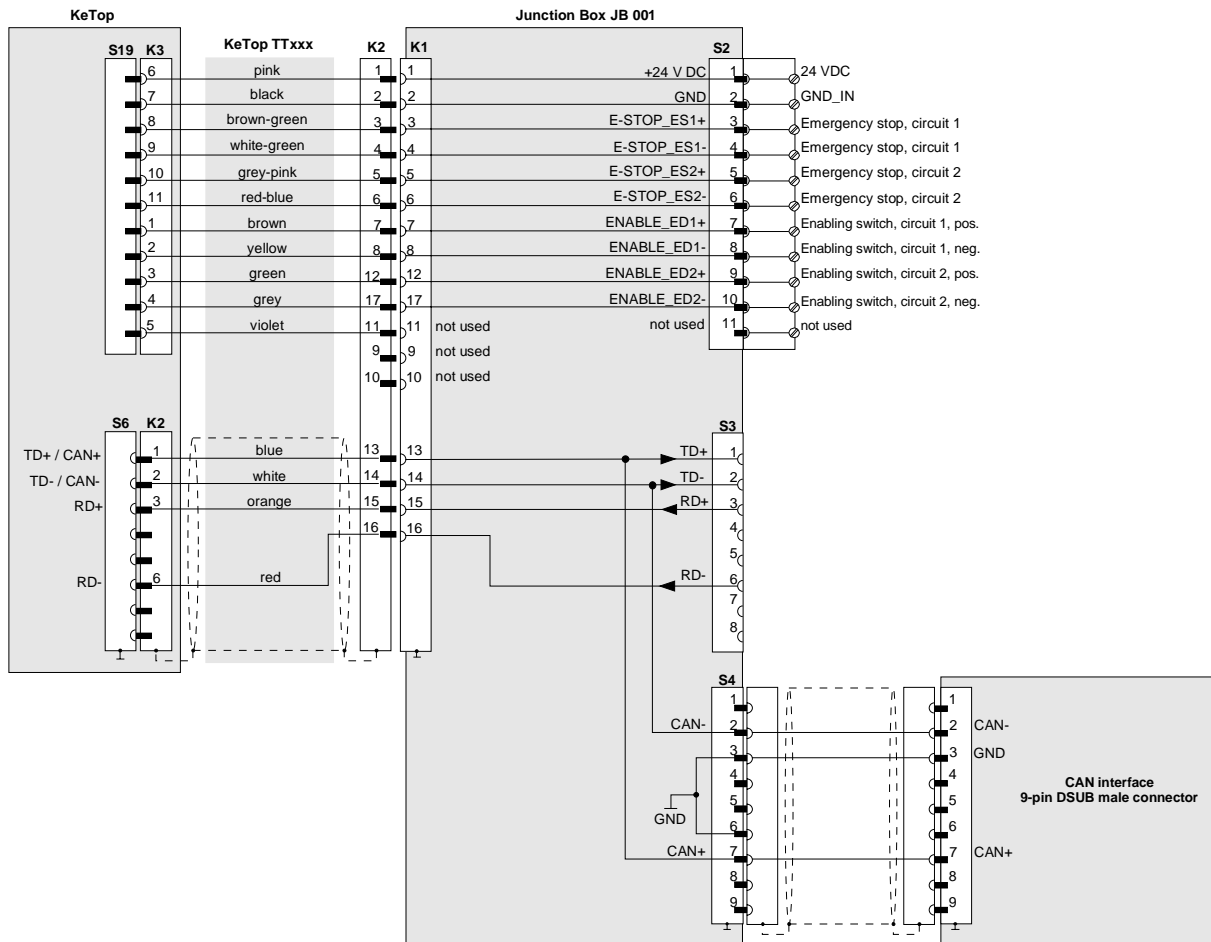


Connection diagram for CAN: KeTop via junction box JB 001

10.3.3.3 RS-232-C

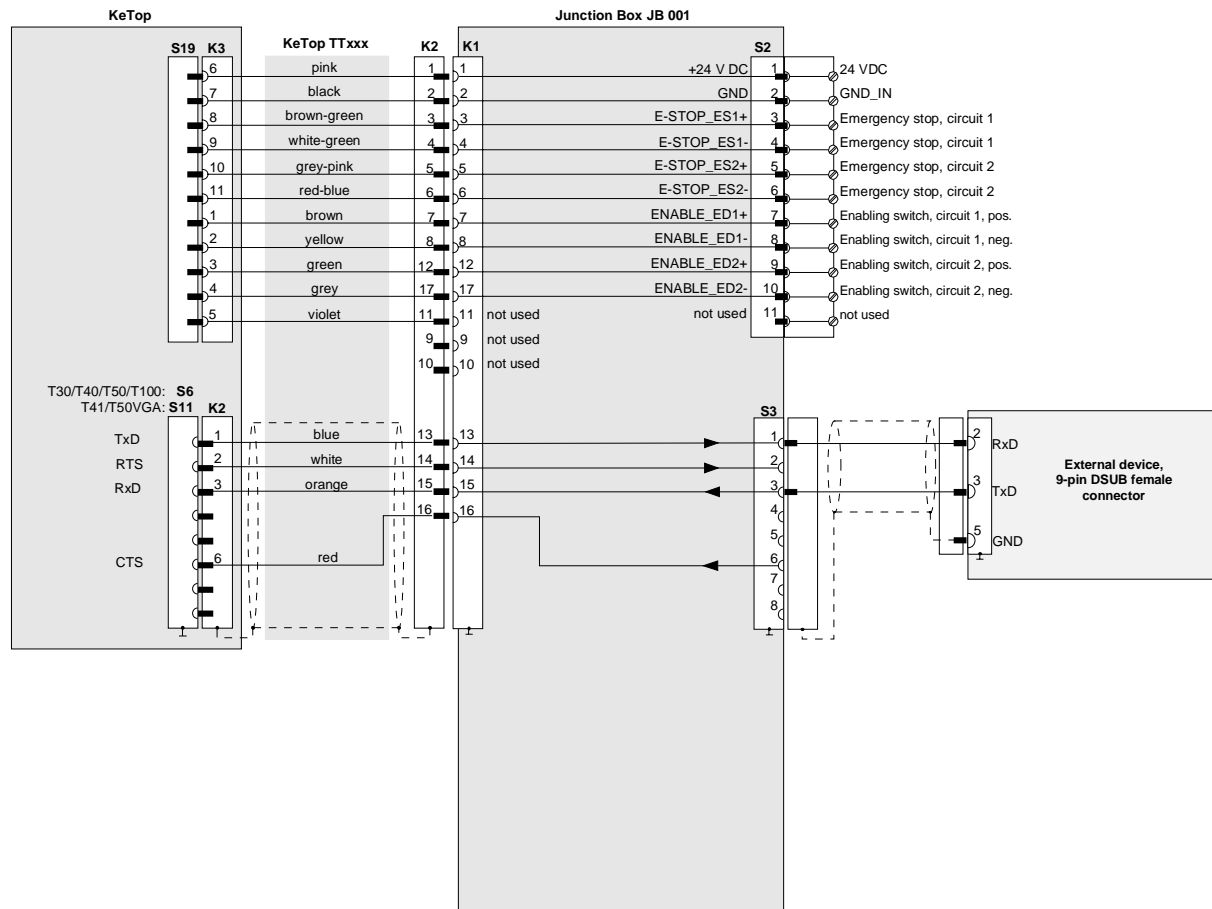


Connection diagram for RS-232-C: KeTop via junction box JB 001

10.3.3.4 RS-422-A

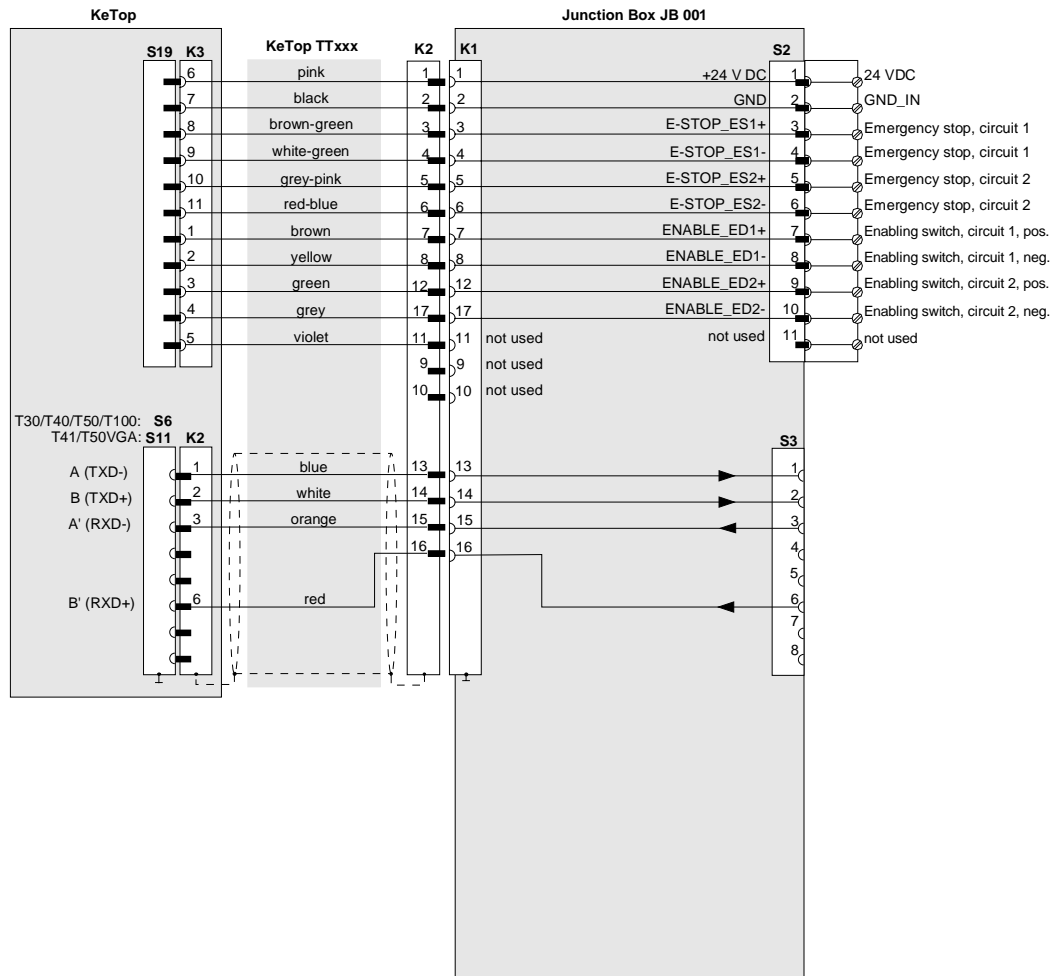

Connection diagram for RS-422-A: KeTop via junction box JB 001

10.3.5 Mounting Instructions

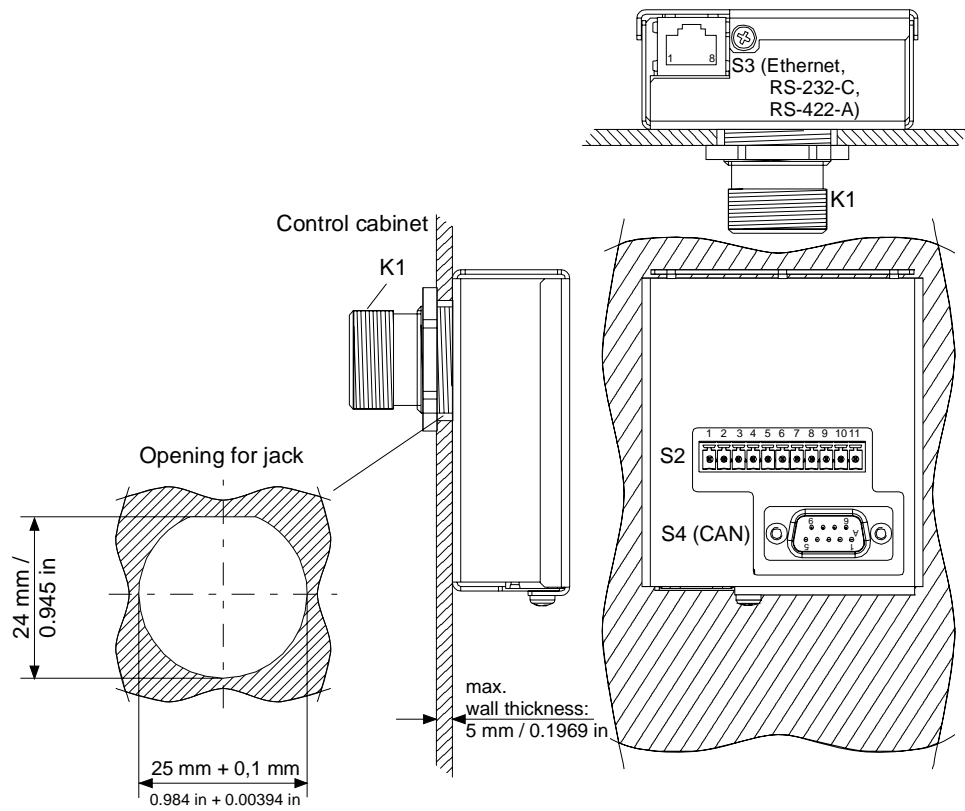

Dimensioned drawing for the opening for the S1 jack of the junction box

10.3.6 Technische data of Daten Junction Box JB 001

General data

Nominal supply voltage	24 V DC
Supply voltage range	18 V DC bis 32 V DC
Max. interruption time of the supply voltage	≤ 10 ms (lt. IEC 31131)
Power consumption	
	without KeTop: -
	with KeTop: see corresponding KeTop User Manual
Inrush current (KeTop)	see corresponding KeTop User Manual
Safety class	III in accordance with EN 61131-2 and EN 50178

Environmental conditions

Operating temperature	0 °C to 50 °C (32 °F to 122 °F)
Storage temperature	-20 °C to +70 °C (-4 °F to 158 °F)
Relative humidity (non-condensing)	5 % to 95 %
Vibration resistance (operation)	(IEC 60068-2-6) 5 ≤ f < 9Hz 7 mm 9 ≤ f ≤ 150Hz 2g
Shock resistance (operation)	15 g / 11 ms (IEC 60068-2-27)


Housing

Construction	Steel panel housing, blue zinc coated
	Withstands grease, oil, lubricants, alcohol, etc.
Flammability class:	UL94-V0
Dimensions:	
Width:	67,2 mm
Height:	76,1 mm
Depth:	26 mm
Protection degree:	IP65
Weight:	220 g

10.4 KeTop CB211 Connection Box

The KeTop CB211 connection box is used for integration of the KeTop in the machine/system. It is suitable for wall mounting and can also be mounted on a mounting rail through the use of the mounting rail assembly kit (KeTop DR200). The KeTop CB211 connection box has the following connections:

10.4.1 Construction

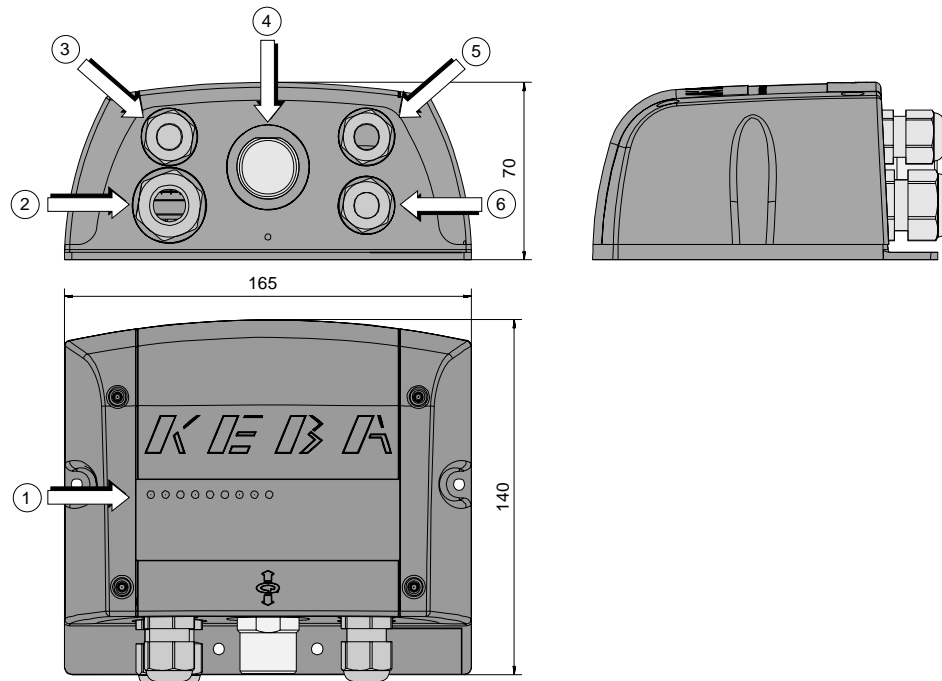

- 1.....Status and error LEDs
- 2.....PG gland (M20) for voltage supply, enabling switch and emergency stop
- 3.....PG gland (M16) for separate functional ground (status as supplied with dummy plugs)
- 4.....Coninvers female connector for KeTop T100, T50 and T40 - connection cable
- 5.....PG glands (M16)for data lines
- 6.....PG glands (M16) for data lines (status as supplied with dummy plugs)

View and device description of the Gateway box




WARNING!

Danger to persons by electric shock!

- Only supply the device with power from voltage sources having protective extra-low voltage (e.g. SELV or PELV acc, to IEC 61131-2)
- Only connect voltages and circuits which are safely separated from dangerous voltages (e.g. by means of sufficient insulation) to connections, terminals or interfaces up to a rated voltage of 50 V.

10.4.2 Interior view

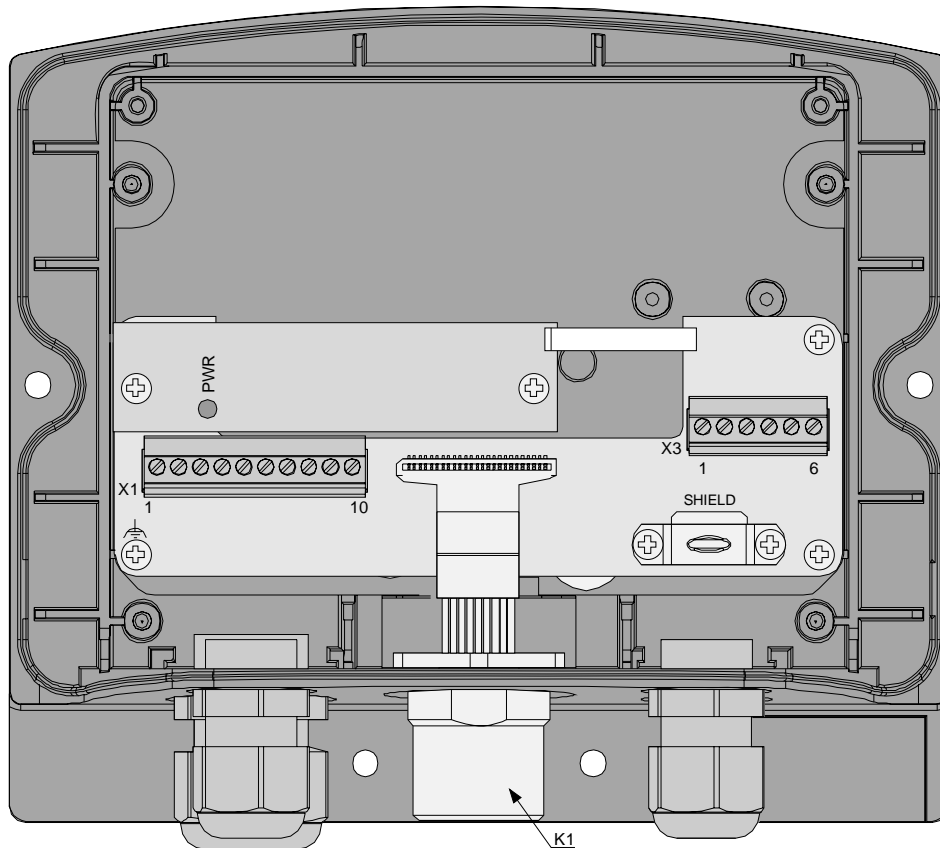

- K1..... 17-pin female connector (Coninvers) for KeTop connection cable
- X1..... Terminal block for power and control lines (enabling switch and emergency stop)
- X3..... Terminal block for data lines
- SHIELD Cable shield clamp with connection surface for cable shield of data lines (not used for strain-relief of the cable!)

Interior view of connection box

Details regarding connection of the KeTop CB211 connection box see sub chapters "Ethernet" and "RS-422-A", both are parts of the main chapter "Connection".

10.4.3 Technical data of the connection terminals

The following technical data apply to the X1 and X3 connector terminal blocks already available in the Junction box:

Connection capacity:		
rigid / flexible / wire gages	[mm ²]/[mm ²]/AWG	0.14-1.5 / 0.14-1.5 / 28-16
flexible with wire end ferrules without / with plastic sleeve	[mm ²]	0.25-1.5 / 0.25-0.5
Grid dimension:		3.81
Insulation length:	[mm ²]	7
Tightening torque:	[Nm]	0.22-0.25


PHOENIX order data:

Gateway-terminal block	PHOENIX Type	Part no.
X1	MCVR 1.5/6-ST-3.81	1827169
X3	MCVR 1.5/7-ST-3.81	1827172
X4, X4B	MCVR 1.5/10-ST-3.81	1827208

Notice

- Consider the connection capacity of the terminal blocks when selecting the connection cable.
- Use the following screwdriver to connect the wires to the terminal blocks:
Blade: 0.4 x 2.5 x 80 mm,
Length: 160 mm
- Multi-line connections (2 wires in one terminal) are not allowed. Use the X4B terminal block for continuing the field bus.

10.4.4 Drilling template for wall mounting

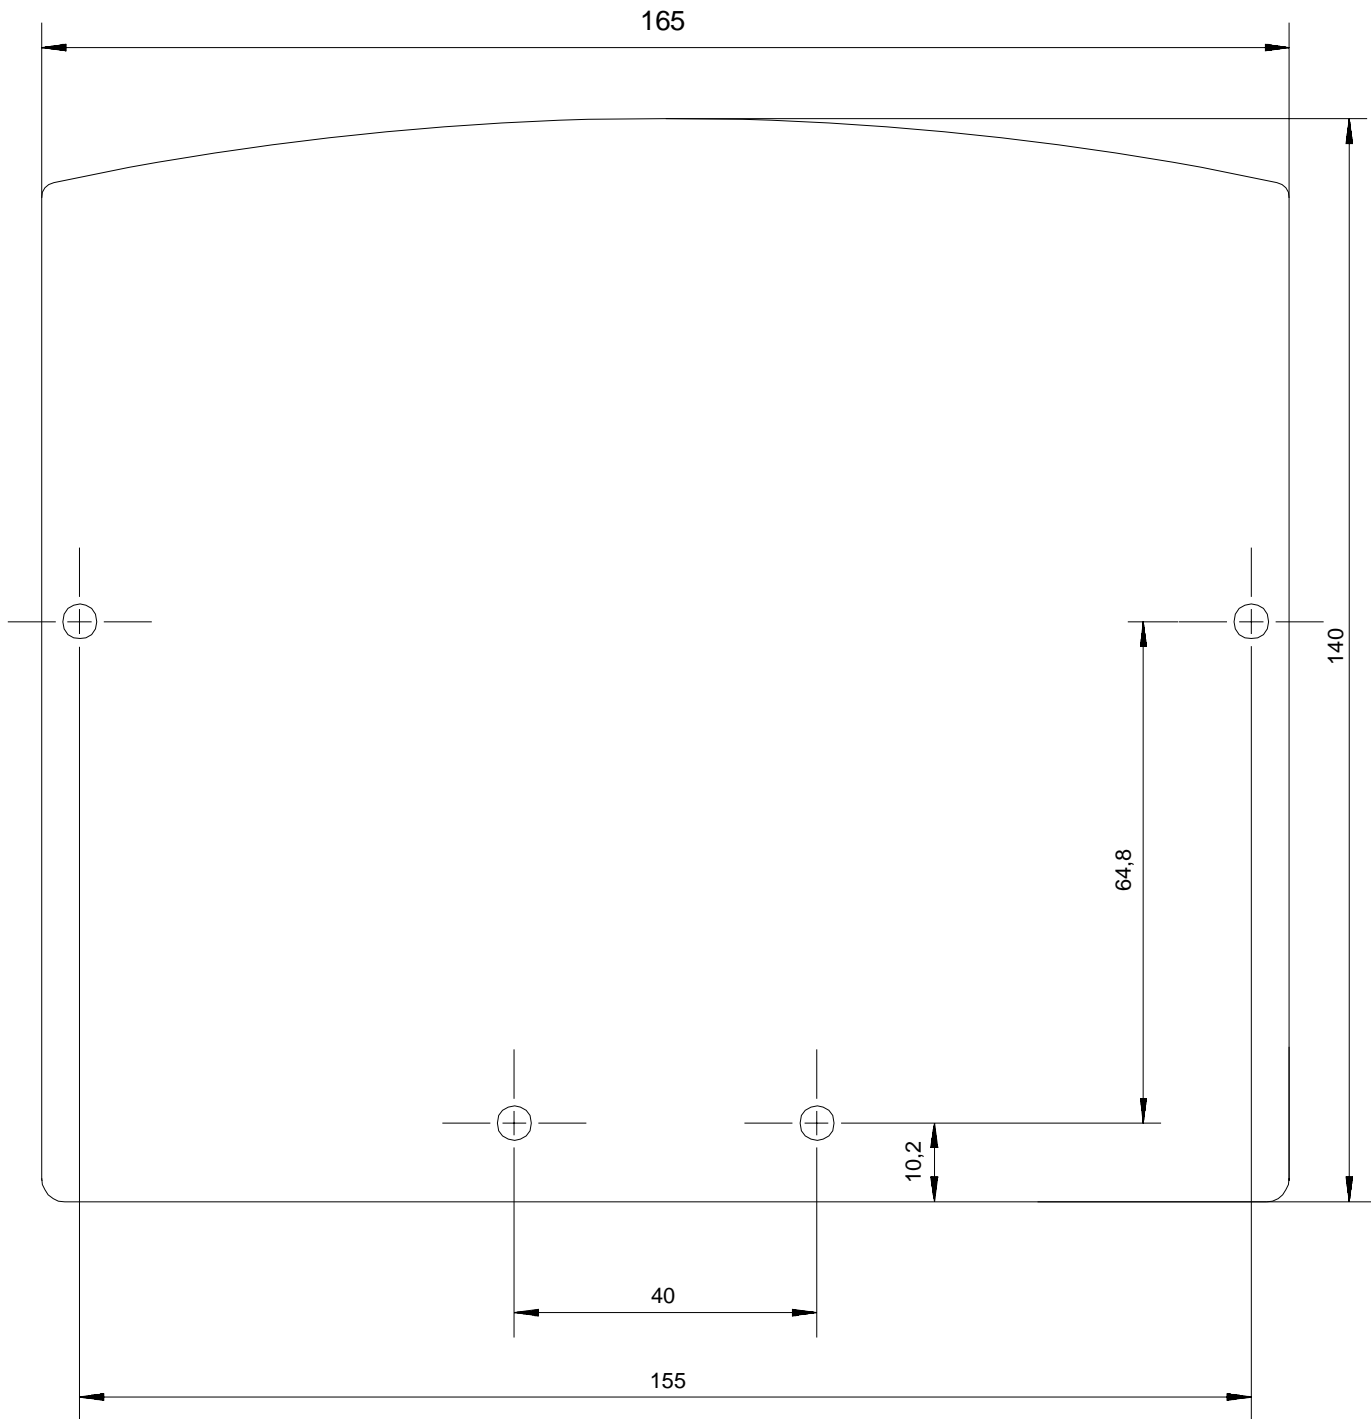


Drilling template for the Gateway box, scale 1:1

For wall mounting, we recommend the following screws and materials:

- Chipboard screw: $\varnothing 4 \times 40\text{mm}$
Head form: flat head
Max. head diameter: $\varnothing 9\text{mm}$
- Recommended rawlplug: $\varnothing 6 \times 30\text{mm}$


10.4.5 DIN Rail Holder Mounting Set KeTop DR200

The DIN rail holder KeTop DR200 is available as accessory and will be mounted on the rear side of a KeTop CB2xx gatewaybox. So the gatewaybox can be easily snapped onto a DIN rail.

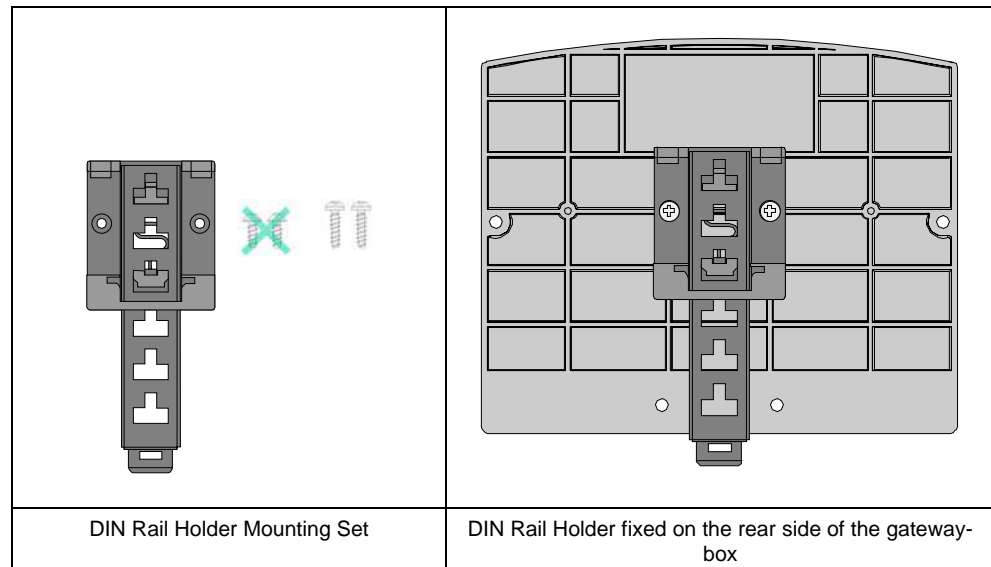


DIN Rail Holder Mounting Set for gatewaybox

10.4.6 Use of Connection Box

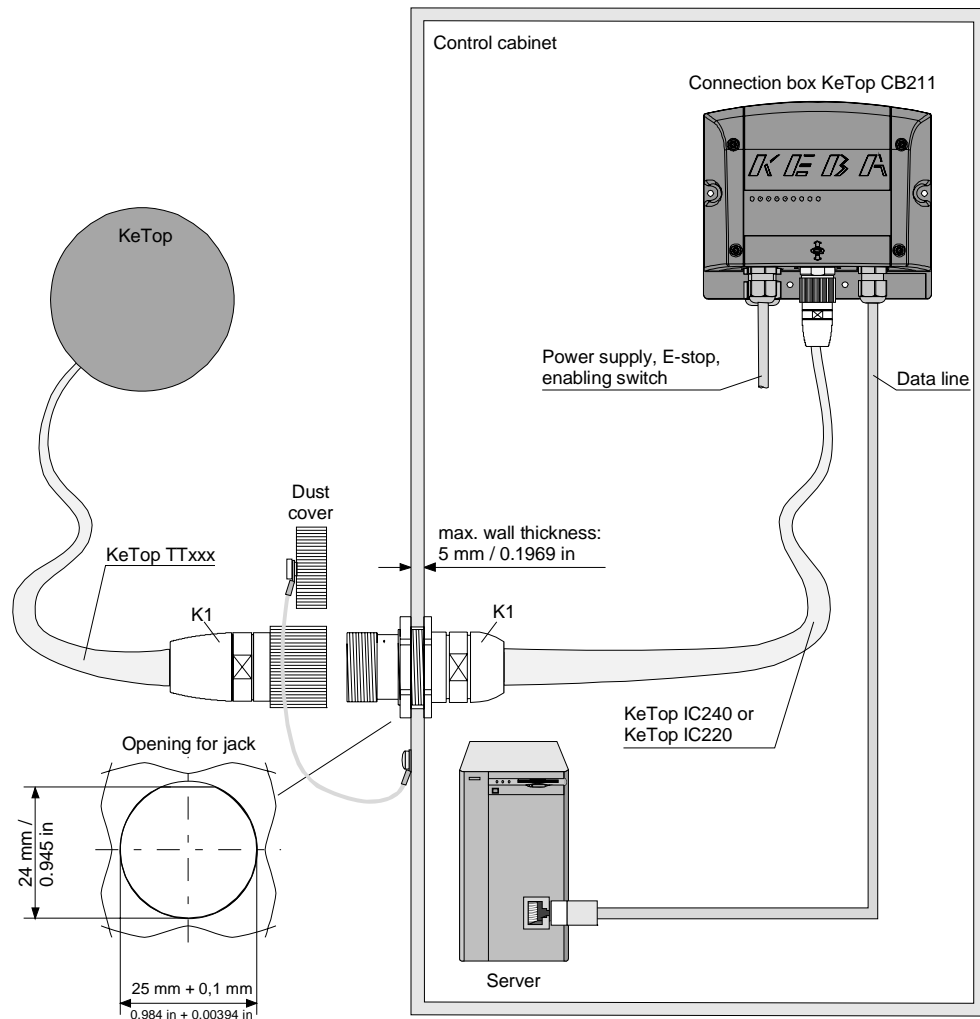

Connection box KeTop CB211 in control cabinet

10.4.7 Minimum Bending Radius of Cable

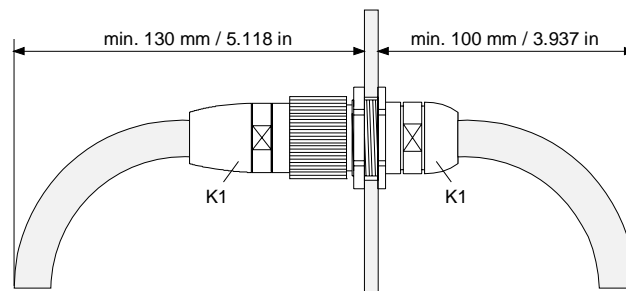

Required minimum distance outside and inside the control cabinet

10.4.8 Technical Data of Connection Box KeTop CB211

General data

Rated supply voltage:	24 V DC (voltage tolerance 19.2 V DC to 30 V DC according to EN 61131-2))
Maximum interruption time of supply voltage:	≤ 10 ms (lt. IEC 31131)
Power consumption:	
	with KeTop: 3.6 W (150 mA at 24 V DC)
	without KeTop: 10.8 W (450 mA at 24 VDC)
Inrush current:	max. 5.6 A (by implemented inrush current limiter)
Protective class:	Class III equipment (in accordance with EN 61131-2 and EN 50178)

Environmental conditions

Operating temperature:	0 °C to 50 °C (32 °F to 122 °F)
Storage temperature:	-20 °C to +70 °C (-4 °F to 158 °F)
Relative humidity (non-condensing):	5 % to 95 %
Vibration resistance (operation):	(IEC 60068-2-6)
	5 ≤ f < 9 Hz 7 mm
	9 ≤ f ≤ 150 Hz 2g (0.0044 pound)
Shock resistance (operation):	15 g (0.033 pound) / 11 ms (IEC 60068-2-27)

Housing

Construction	Double-walled ABS housing Withstands grease, oil, lubricants, alcohol, etc.
Flammability class:	UL94-V0
Dimensions:	
Width:	160 mm
Height:	140 mm
Depth:	70 mm
Protection degree:	IP65
Weight:	500 g (1.1 pound)
Display:	Status LEDs

Accessories

Intermediate cable	Connection box to connection cable
KeTop IC220:	2 m / 6.56 ft
KeTop IC240:	4 m / 13.12 ft
Download cable	
KeTop XD040:	4 m / 13.12 ft. For downloading software and for debugging via S2.
DIN Rail Holder Mounting Set	
KeTop DR200:	For mounting on the rearside of a KeTop CB2xx gatewaybox.


10.5 Connection Cable KeTop TTxxx

The standard KeTop handheld terminals are available with the following cables:

- KeTop TT025 (2,5 m)
- KeTop TT050 (5 m)
- KeTop TT100 (10 m)
- KeTop TT150 (15 m)
- KeTop TT200 (20 m)

The KeTop connection cable withstands water, cleaning agents (alcohol and tensides), oil, drilling oils, grease and lubricants.

Description of signal	K3, 11-pin female connector to S19 on the KeTop	K2, 8-pin RJ-45 jack (S6, RS-422-A)	Connection cable KeTop TTxxx, color of wires	K1, 17-pin male connector, pin No.:
24 VDC	6	-	pink	-> 1
GND_IN	7	-	black	-> 2
E-stop, circuit 1	8	-	brown-green	-> 3
E-stop, circuit 1	9	-	white-green	-> 4
E-stop, circuit 2	10	-	grey-pink	-> 5
E-stop, circuit 2	11	-	red-blue	-> 6
enabling switch, circuit 1, pos.	1	-	brown	-> 7
enabling switch, circuit 1, neg.	2	-	yellow	-> 8
enabling switch, circuit 2, pos.	3	-	green	-> 12
enabling switch, circuit 2, neg.	4	-	grey	-> 17
not used	n.c.	-	-	9
not used	n.c.	-	-	10
GND	5	-	violet	-> 11
TD+ CAN+	-	1	blue	-> 13
TD- CAN-	-	2	white	-> 14
RD+ SGND	-	3	orange	-> 15
RD- not used	-	6	red	-> 16

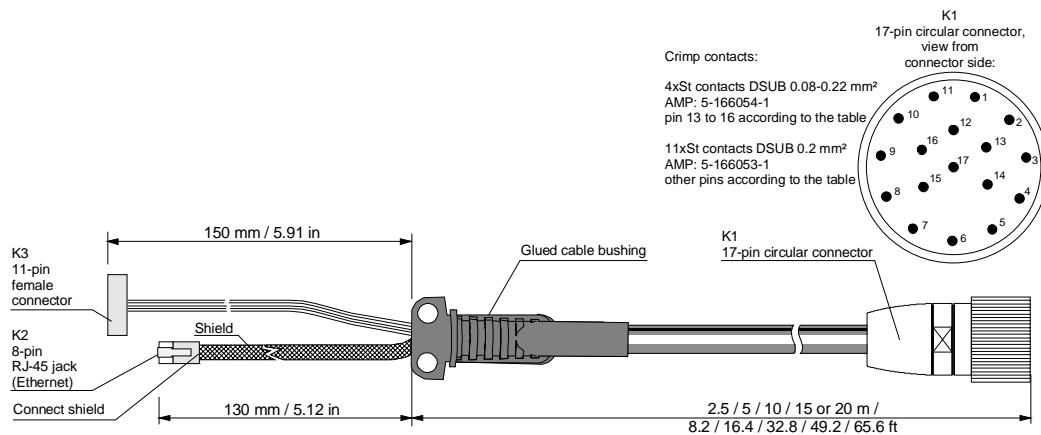

Connection cable KeTop TTxxx


10.6 Intermediate Cable KeTop IC2xx

The KeTop intermediate cable is used to connect the connection box and the Coninvers jack in the wall of the control cabinet. Cables with the following lengths are available:

- KeTop IC220 (2 m)
- KeTop IC240 (4 m)

Description of signal	K1, 17-pin female connector, pin No.:	Intermediate cable ICxxx, color of wires		K2, 17-pin male connector, pin No.:
Enabling switch, circuit 1, pos.	7	brown	<-	7
Enabling switch, circuit 1, neg.	8	yellow	<-	8
Enabling switch, circuit 2, pos.	12	green	<-	12
Enabling switch, circuit 2, neg.	17	grey	<-	17
Not used	10	n.c.		10
24 V DC (+/- 10%)	1	pink	<-	1
Not used	9	n.c.		9
Emergency stop, circuit 1	3	brown/green	<-	3
Emergency stop, circuit 1 GND	4	white/grey	<-	4
Emergency stop, circuit 2	5	grey/pink	<-	5
Emergency stop, circuit 2 GND	6	red/blue	<-	6
GND_IN	2	black	<-	2
TD+ (transmit)	13	blue	<-	13
TD- (transmit)	14	white	<-	14
RD+ (receive)	15	orange	<-	15
RD- (receive)	16	red	<-	16
GND	11	violet	<-	11

Shielded signals: TD+, TD-, RD+, RD-

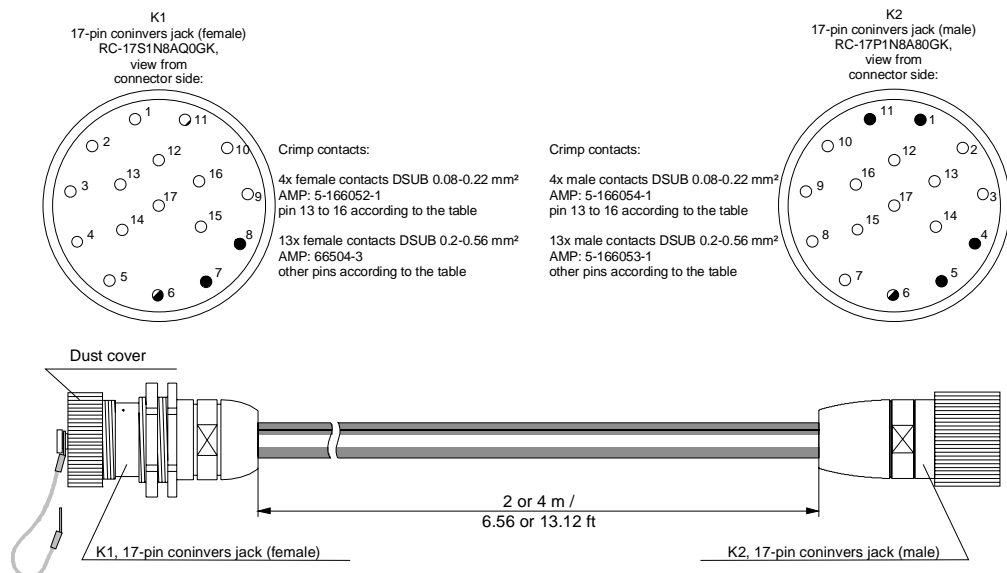

Intermediate cable KeTop IC2xx


10.7 Download Cable KeTop XD040

The download cable XD040 is available with a length of 4 m (13.12 ft) and plugged into the serial port connector in the cable entrance area of the KeTop or into the X6 of the KeTop CB23x Gatewaybox.

The cable is used for downloading software and for debugging.

Handheld Terminal KeTop xxxx		Gateway box KeTop CB23x		Download cable KeTop XD040			PC
Signals	Serial port connector	Signals	Serial port connector	S1 male connector	Description of signals	S2, 9-pin DSUB female connector	Signals (COMx)
-	1*	n.c.	1	1	< - >	1	(ActiveSync)
-	2*	n.c.	2	2	< - >	6	(ActiveSync)
TXD	3	TXD	3	3	< - >	2	RXD
CTS	4	n.c.	4	4**	< - >	-	-
RXD	5	RXD	5	5	< - >	3	TXD
RTS	6	n.c.	6	6	< - >	-	-
-	7*	n.c.	7	7	< - >	4	(ActiveSync)
n.c.	8	n.c.	8	8**	< - >	9	-
GND	9	GND	9	9	< - >	5	GND
GND	10	n.c.	10	10	< - >	-	not used
						7	not used
						8	not used


*)..... The pins 1, 2 and 7 of the serial port connector S2 are short circuited directly on the CPU board of the KeTop.
 If you produce the serial download cable yourself you will need these three wires in the cable for the ActiveSync signal.
 **) One pin has been removed from the male connector (prevents from incorrect plugging in).

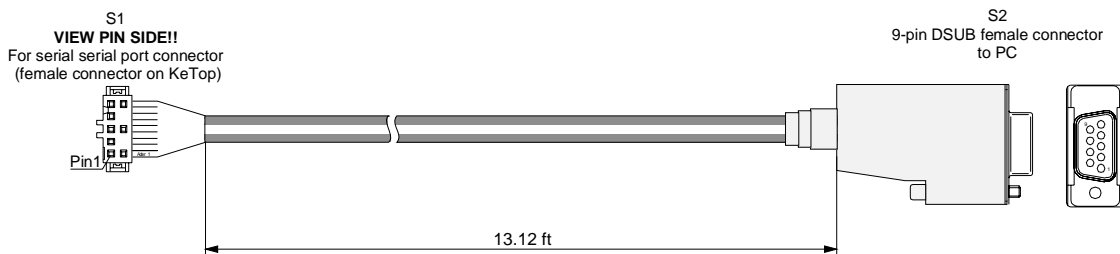

Download cable KeTop XD040

10.8 Back-up battery

A back-up battery is available as an accessory for the KeTop. It is supplied in a box with brief instructions and comprises the following:

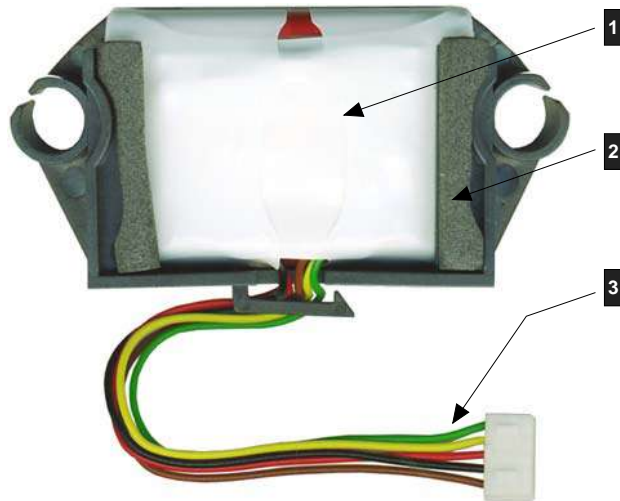

1 ... Back-up battery
2 ... Back-up battery holder
3 ... Connecting lead

Back-up battery with connecting lead (roughly original size)

10.8.1 General product description

Operation of the KeTop with a back-up battery allows the user to change to different machines (connection point or terminal box) with the KeTop, but without having to start the KeTop again every time.



WARNING!

- In order to rule out the risk of damage or personal injury due to operator error, the procedure described for use of the back-up battery must be taken into consideration when creating the application.

Information

The back-up battery is discharged on delivery and must be charged for five hours before being used for the first time.

10.8.2 Installing the back-up battery in the KeTop


Preconditions

- No connection to the mains power supply
- Connection slot of the KeTop open
- KeTop connecting lead plugged into the connection slot

Installation

Proceed as follows to install the back-up battery in the KeTop:

- 1) Insert the plug of the connecting lead into socket S28 BATTERY in the connection slot of the KeTop (the plug cannot be inserted incorrectly!).

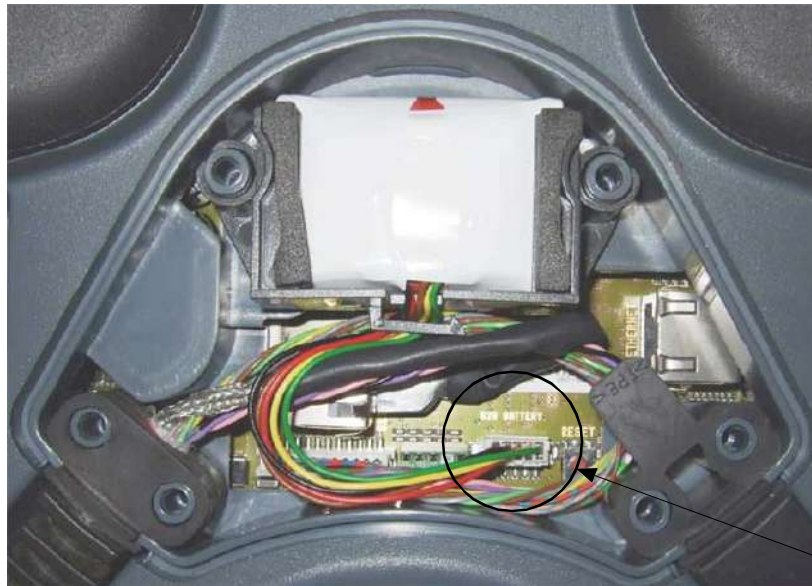

1 ... S28 BATTERY


Back-up battery installed in the connection slot

- 2) Insert the back-up battery into the connection slot as shown in the figure. The screw heads serve to locate the back-up battery holder.
- 3) Position the connecting lead of the back-up battery so that it cannot be pinched when the connection slot cover is fitted again.
- 4) Fit the connection slot cover, paying attention that no cables are pinched.

The back-up battery is now installed in the KeTop.

10.8.3 Run-up behaviour

The back-up battery is only active if it is already installed before the start of the KeTop. During the boot procedure, the back-up battery is detected and indicated by a status symbol in the taskbar under Windows CE.

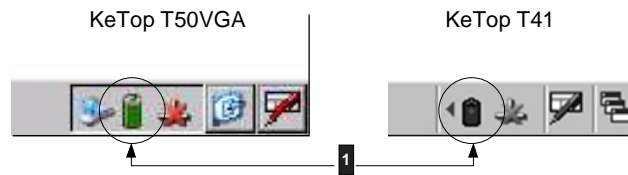







1 ... Status symbol for back-up battery

Status symbol for the back-up battery in the taskbar of the display

Information

The back-up battery will not be recognised by the device if it is connected while the KeTop is running.

The status symbol in the taskbar of the display can indicate the following statuses for the back-up battery:

Status symbol	Condition
	Battery completely charged / being charged
	Battery almost completely charged / being charged
	Battery more than half discharged / being charged
	Critical battery status (no further back-up possible) / being charged
	Very critical battery status (no further back-up possible) / being charged
	Battery was removed during operation (this symbol appears only if the back-up battery had not previously been initialised).

The KeTop switches to the back-up mode if the external power supply is disconnected. In back-up mode, the display is switched off and the touch-screen, the keyboard and the USB interface are deactivated. The CPU and the file system (*Flash and RAM*) remain active. When the KeTop is connected to the external power supply again, it switches back to the normal operating mode within 1 second.

10.8.4 Back-up cycle, battery capacity

A back-up cycle is limited to 15 minutes. On expiry of this time, the KeTop is switched off completely.

The back-up battery capacity is designed for 4 cycles without having to recharge the back-up battery in the meantime.

In order to prevent a deep discharge of the back-up battery, the KeTop is switched off before expiry of the back-up time if the back-up battery reaches a critical capacity level.

10.8.5 Safety notes

The back-up battery is a lithium ion battery for which the following safety notes apply:

ATTENTION!

- **Charge the back-up battery only via the KeTop**
- **Do not immerse lithium ion batteries in water:**
If the hermetic seal of the lithium ion battery is defective, the Li ion cell will react very violently with water.
- **Preferably use sand to extinguish burning Li ion batteries; do not use water!**
- **Li ion batteries are sensitive to mechanical shocks!**
They can ignite as a result of an internal short-circuit (e.g. caused by crushing) and in contact with air.
- **Do not:**
Heat, burn, short-circuit or dismantle Li ion batteries!

10.8.6 Disposal of the back-up battery

NOTICE

- **The back-up battery is special waste and must be disposed of in the prescribed manner.**
- **Although the back-up battery has a low voltage, it can give off enough electricity in the event of a short-circuit to ignite inflammable materials. It therefore must not be disposed of together with conductive materials (such as e.g. iron chips, oil-contaminated wire wool, etc.).**

10.8.7 Technical data

Initial charge of the battery up to full capacity	approx. 5 hours
Minimum number of charging cycles	500
Operating time of the back-up battery	15 minutes, it then switches off automatically
Change cycles in back-up battery mode: (changing of the KeTop to another terminal box)	at least 4x (with fully charged battery)

11 Transport Conditions

To avoid damaging the device during further or return transport, the following transport conditions must be fulfilled:

- Always use the original packaging for the transport.
- The environmental conditions for the device (see chapter „Technical Data“) must also be fulfilled during transport.

12 Disposal of the KeTop



-
- The symbol with the crossed-out garbage can points out that electrical and electronic devices including their accessories should not be disposed of in the household garbage.
 - Depending on their coding, the raw materials are recyclable. By disposing of such used devices correctly, you can ensure that they can be re-used, their raw materials recycled or put to another use, and you will be making an important contribution to the protection of our environment!
-

13 Technical Data

General data

Rated supply voltage:	24 V DC (voltage tolerance 19.2 V DC to 30 V DC according to EN 61131-2)
Maximum interruption time of supply voltage:	≤ 10 ms (EN 61131-2)
Power consumption:	9.6 W (400 mA at 24 V DC)
Inrush current:	max. 5.6 A (with limitation of current)
Safety class:	III in accordance with EN 61131-2 and EN 50178

Environmental conditions

Operating temperature:	0 °C to 50 °C (32 °F to 122 °F)
Storage temperature:	-20 °C to +70 °C (-4 °F to 158 °F)
Relative humidity (non-condensing):	5 % to 95 %
Vibration resistance (operation):	(IEC 60068-2-6) 10 Hz ≤ f < 57 Hz with 0.15 mm (0.0059 in) 9 Hz ≤ f < 150 Hz with 2 g (0.0044 pound)
Shock resistance (operation):	25 g / 11 ms (IEC 60068-2-27)

Housing

Construction	Double-walled ABS housing Withstands grease, oil, lubricants, alcohol, etc.
Flammability class	UL 94-V0
Dimensions:	
Diameter:	250 mm / 9.84 in
Total height incl. handle:	114 mm / 4.49 in
Protection degree:	IP65
Weight:	1250g / 2.8 pound (with E-Stop, with key switch, without handwheel, without override potentiometer and without cable)
Display	
Type:	Graphics-capable color TFT LC display
Size:	6,5" (132 x 98 mm)
Resolution:	VGA 640 x 480 pixels
Representation:	65536 colors
Background lighting:	2 CCFT cold cathode tubes, lifetime 50,000 hours at 25°C in continuous operation
Touch screen:	Analog-resistive
Keypad:	- Membrane keypad with tactile feedback - Keys laid out for thumb operation - Left / right-hand operation - Customer-specific keypad possible - maximum 64 keys - 4 status LEDs (maximum 12 LEDs)
Operating elements – standard:	Two 3-position enabling switches, twin circuit – external connection Emergency stop switch, twin circuit – external connection
Operating elements – optional:	
One location (middle) for:	Electronic handwheel – internal connection 3 axis joystick – internal connection
One location (left) for:	Override potentiometer – internal connection Illuminated push-button: momentary action – internal connection

Key switch: 2 or 3 positions: – internal connection

Processor and interfaces

Processor:	Intel PXA 270 / 416 MHz (XScale architecture)
Memory:	Standard: SDRAM: 32 MB, FLASH: 16 MB Maximum: SDRAM: 256 MB, FLASH: 128 MB
Interfaces:	RS-232-C or RS-422-A RS-232-C (debug interface in device) USB host / USB client
Operating system:	Windows CE 5.0

E-Stop ratings

rated voltage	24 V DC
min. current	10 mA (each contact)
max current	1000 mA (each contact)
utilization category	DC-13 (in accordance with IEC 60947-5-1)

Enabling device ratings

output type	Solid-state output
rated voltage	24 V DC (voltage tolerance 19.2 V DC to 30 V DC according to EN 61131-2)
rated current	500 mA (max.)
max current up to output cut-off	
circuit 1	1.5 A
circuit 2	0.8 A
max inductive load	
circuit 1	145mJ / 1.16 H @ 24 V DC, 500 mA (compareable with DC13 according to EN 60947-5-1)
circuit 2	145mJ / 1.16 H @ 24 V DC, 500 mA (compareable with DC13 according to EN 60947-5-1)
reverse polarity protection	
circuit 1	yes
circuit 2	yes
short circuit and overload protection	
circuit 1	yes (by integration in output-FET)
circuit 2	yes (by protective circuit)
operating cycle	
2 nd position	10 ⁵
3 rd position	5 x 10 ⁴
actuating force	
from 1 st position to 2 nd position	5 N typically
from 2 nd position to 3 rd position	20 N typically

Accessories

Wall bracket	For stationary operation or storage of the KeTop.
KeTop WB090:	Wall bracket without cable suspension.
KeTop WB095:	Wall bracket with cable suspension.
KeTop WB100:	Wall bracket with height adjustment and without cable suspension.
KeTop WB110:	Wall bracket with height adjustment and with cable suspension.
Connection cable	Resistant to twisting, bending and foot traffic, with 20-pin push pull

		connector or 17-pin circular connector
KeTop TT025:		2.5 m / 8.2 ft
KeTop TT050:		5 m / 16.4 ft
KeTop TT100:		10 m / 32.8 ft
KeTop TT150:		15 m / 49.2 ft
KeTop TT200:		20 m / 65.6 ft
Intermediate cable		Connection box to connection cable
KeTop IC220:		2 m / 6.56 ft
KeTop IC240:		4 m / 13.12 ft
Download cable		(not for KeTop T30)
KeTop XD040:		4 m / 13.12 ft. For downloading software and for debugging via S10 (KeTop) or via X6 (KeTop CB23x).
Connection / Gateway boxes		(KeTop CB23x not for KeTop T30)
KeTop CB211:		Connection box for separating the data and control lines.
KeTop CB230:		Gateway box for connecting to CAN via the RS-422-A interface.
KeTop CB232:		Gateway box for connecting to CANopen via the RS-422-A interface.
KeTop CB233:		Gateway box for connecting to DeviceNET via the RS-422-A interface.
KeTop CB234:		Gateway box for connecting to InterBus via the RS-422-A interface.
KeTop CB235:		Gateway box for connecting to PROFIBUS-DP via the RS-422-A.
KeTop CB236:		Gateway box for connecting to PROFIBUS-MPI via RS-422-A.
Start Kit		
KeTop SK001:		Manuals English/German on CD SDK for Windows CE Programming tool KeTop PS040
Back-up battery	KeTop EPA 001	Enables the change to different machines
Touch stylus + cord	KeTop ETP 001	Touch stylus for operation the touch screen and cord for fastening the touch stylus to the KeTop

14 CE Conformity, Directives and Standards

14.1 European Union Directives

It is a fundamental goal of the European Union to create an internal market within Europe and, linked to this, the dismantling of trade barriers.

In order to achieve this goal, the European Treaties guarantee “four freedoms”:

- Free trade in goods
- Right of establishment
- Free exchange of goods and services
- Free movement of capital

Free trade in goods means that quantitative import restrictions on goods are prohibited between the member states.

Goods that are hazardous to the safety of people or the environment are excluded. Such products can be disallowed by member states in their sovereign territory.

In order that free trade may also be guaranteed for these products, the national safety regulations of the member states are harmonised by means of European Union Directives.

These Directives exist for a range of product classes, such as machinery, medical products and toys. However, Directives have also been compiled for further common product safety aspects, such as protection from electricity and explosion, and electromagnetic compatibility.

The Directives are aimed at the member states, whose task is to convert them into national law. The Directives therefore have legal character.

CE marking certifies that the manufacturer fulfils all obligations in relation to the product on the basis of the EC Directives.

The CE mark is the “passport” within the EC and is defined on behalf of the supervisory authorities.

Additionally independent, accredited notified bodies can be commissioned to carry out an EC type-examination and draw up a certificate.

It is not, however, a safety mark or mark of conformity, which can only be awarded by independent testing agencies.

Both the Electromagnetic Compatibility Directive (EMC 89/336/EC) and the Machinery Directive (MD 98/37/EC) are applicable to the handheld terminals.

14.2 Machinery Safety

Additional measures must be taken wherever faults arising in the machinery may cause personal injury or significant material damage. These measures must also guarantee a safe operating condition for the whole system in the event of a fault.

Although the handheld terminal is not, strictly speaking, a machine, it does, however, perform important tasks to guarantee the safety functions of a machinery to which it is attached.

The handheld unit has, for example, the "Emergency Stop" safety function and an enabling device for use in special operating modes. It is, as a result, a "Safety Component" in the sense of the Machinery Directive.

Safety components, or parts whose failure or faulty operation put the safety of people within the hazard area of the machine in danger, fall expressly within the range of application of the Machinery Directive.

The fundamental requirements that the Machinery Directive places on the manufacturer are as follows:

- To carry out a hazard and risk analysis
- To comply with the integration of safety principles
- To compile and keep a technical construction file
- To provide solutions in accordance with the latest state of the art
- To recognise conformity by means of harmonised Standards
- To apply CE marking

The same basic requirements apply to safety components. In their particular case, it must be proven that failure or malfunction are not possible, or that malfunction does not lead to a hazardous situation.

14.2.1 "Hazard and Risk Analysis"

The manufacturer of a machine is required to analyse its machine throughout its operating life and in all modes of operation, and to document all hazards that may possibly arise.

The next step is to formulate a goal for protection against each identified hazard and subsequently to define one or more protective measures to achieve the protection goal.

Further details about the procedure for carrying out the hazard and risk analysis and lists of commonly occurring hazards can be found in the following Standards:

- EN 292-1 and EN 292-2 “General Design Principles for Machinery“
- EN 1050 “Guidelines for the Risk Analysis of Machinery“

14.2.2 “Principles for the Integration of Safety”

In Appendix I, Chapter 1.1.2 of the Machinery Directive 98/37/EC there is a clear procedure and sequence for the selection of protective measures:

14.2.2.1 Eliminating or minimising the hazards

This takes place at the design stage of the machine.
These measures include, for example:

- A reduction in the use of energy (power, revolutions, voltages etc.) as far as this is possible
- The avoidance of unnecessary sharp points or edges
- The avoidance of human errors by means of the ergonomic and logical design of operating devices
- The avoidance of hazardous materials and commodities

14.2.2.2 Taking protective measures against hazards that cannot be eliminated

These measures include, for example:

- Guards, railings, housings
- Protective devices (light barrier for hazard elimination)
- Protective control equipment (enabling devices, two-hand controls, speed monitoring etc.)

14.2.2.3 User information about residual hazards

This last of the three options is used if residual hazards remain after the first two options have been applied. These measures include, for example:

- Warning notices
- Training and organisational measures
- The use of personal protective equipment

14.2.3 “Technical Construction File”

The technical construction file contains all the documents that are required to prove the safety of the machinery / safety component. These are, for example:

- A complete drawing of the machinery or safety component including control circuit diagrams
- Hazard and risk analysis

- Calculations
- Research and test results
- A list of the basic safety requirements of the Machinery Directive applicable to the machine and a description of the solutions
- Applied Standards
- Operating instructions
- A list of the quality assurance measures in the procedure

The technical construction file must be retained for a minimum of 10 years after the supply of the last product, and must be presented within a period of a few days in the event of a claim for damages.

14.2.4 “State of the Art”

This means technical possibilities at a certain point of time that are based on certain scientific and technical knowledge. The state of the art also means something that is commercially viable, that is it can be realised by the majority in the industrial sector concerned.

The state of the art is defined as the state of development of advanced procedures, equipment or operating methods, that makes the practical applicability of the measure appear assured overall in respect of the targeted goals (e.g. the goals of protection of work, protection of the environment, safety of third parties and operating efficiency: namely to achieve a generally high level overall in relation to the aspects under consideration).

The state of the art can develop further irrespective of the Standards.

14.2.5 “Recognition of Conformity by means of Harmonised Standards”

The European Directives mainly contain general requirements for the safety of products; however they do not contain details of how to carry them out.

The European Standards Institutes are responsible for this. They provide implementation proposals for real safety problems or specific product classes. Standards that are assumed to meet and correctly interpret the requirements of the Directives are known as “Harmonised Standards”. Most of the available Standards, however, are not harmonised.

By applying and implementing harmonised Standards, a manufacturer can claim conformity for the respective product. However, the Standards, in contrast to the Directives, are not legally binding. This means that the manufacturer may also take into consideration other solutions that are not described in the Standards; but these solutions must attain at least the same safety level as the relevant Standards and satisfy the requirements of the appropriate Directives.

14.2.6 Selection of Safety Categories in accordance with EN 954-1

The Machinery Directive demands that a fault in control circuit logic, or interference or damage thereto, shall not lead to a hazardous situation.

This general approach is substantiated in EN 954-1 "Safety of Machinery, Safety Related Parts of Control Systems", which defines safety categories (B, 1, 2, 3, 4) for control parts that are relevant to safety.

These categories apply irrespective of the technology employed, for example to electrical, electro-mechanical or pneumatical systems.

The categories place qualitative requirements on the probability of failure, the detection of faults and the performance of the controller in the event of a fault.

The manufacturer of the machine selects the category dependent on the actual hazard potential, which is determined from the hazard and risk analysis.

For hazards that can cause irreversible injury or death, safety category 3 or 4 is usually required as a minimum. These categories require single fault safety, which usually applies to multiple circuit technology in conventional manner. It is also important in this context that individual faults are detected in time to avoid a build up of faults, which may finally lead to loss of safety. Faults that must be detected on electrical and electronic systems, for example, are: cross circuits, cut-outs and sticking contacts.

Special certified safety control devices are often used to detect faults in the individual safety circuits. The safety category quoted for these devices is only attained, however, if also the whole machine circuit under review lies within the scope of the respective safety category. The safety categories must always be considered in relation to a complete safety function and not as applied to individual components or parts.

The proof of attainment of a safety category can take place with the aid of an FMEA (Failure Mode and Effects Analysis), in which all the faults that could possibly arise are simulated, either theoretically or in practice, and it is demonstrated that the requirements of the category are fulfilled.

14.2.7 Application of Handheld Terminals in Special Operating Modes

For the manual control of machines in special operating modes, where safety depends on the timely reaction of the operating staff, it is absolutely essential that the operator can overlook the operating area.

The handheld terminal has the advantage that the operator can get very close to the control panel.

At the same time, the danger of misuse increases with mobility since, in remote locations where it is not possible to observe the operating area,

machine movements can also be set in motion with the handheld terminal, knowingly or unknowingly.

The machine operator, therefore, has to find the right compromise between necessary flexibility and a reasonable limitation of the working range when selecting the corresponding cable length for the handheld terminal's.

It is not possible for the working range of radio-operated handheld terminal's to be limited by means of the cable; therefore additional technical solutions are required for these handheld terminal's.

If the machine or equipment is operated with the handheld terminal, care must be taken at this time to ensure that operation can only be controlled by the handheld terminal and cannot be operated from any other point on the equipment.


The hazard zone may only be entered by the person who is operating the handheld terminal. If it should be necessary for more than one person to work in the hazard zone at the same time, each person present requires an enabling device and machinery movement may only be allowed after all the enabling devices have been activated.

14.2.8 Information about the Emergency Stop Button


In theory, a perfectly designed machine should not require an emergency stop button, since the Machinery Directive demands that a machine must be safe throughout its lifetime and in all operating modes.

In practice, however, one is aware that unforeseen situations arise, in spite of all precautions. In order to enable fast shutdown of the machine in these cases, or to avert danger, an emergency stop button is provided on most machines.

As can be seen from the following illustration, a machine is permanently in the hazard state from the viewpoint of the emergency stop button, for as long as this is not activated.

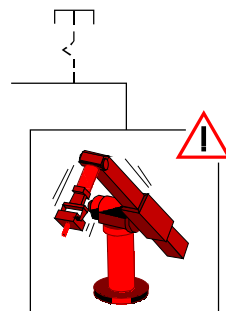

Neutral position (not activated)

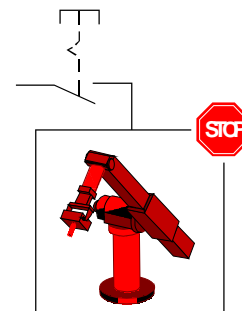

Emergency stop button pressed

Emergency stop button functions

The emergency stop button may not, therefore, serve as the primary safety device but is provided exclusively to cover any residual risks.

Instead of this and depending on the mode of operation, other methods should be employed as the primary safety device, for example guards, light barriers and two-hand control devices or enabling switches.

When the emergency stop button is activated, the entire machine or all of the machines that are switched together in a plant must be lead to a safe state e.g. by stopping and switching off the power to the endangering drive mechanisms (stop categories 0 or 1 in accordance with EN 60204-1).

The release of the emergency stop button must not cause any uncontrolled restart of the machine.

Irrespective of whether a handheld terminal has an emergency stop button or not, permanently installed, universally identifiable and easily accessible emergency stop buttons must be provided at selected points around the machine in every case.

14.2.9 Application of Emergency Stop Button and Stop Button on the Handheld Terminal

The Machinery Directive does not specify any detailed requirements in respect to the colouring of the operating elements for emergency stop. The requirement states: "The device must have clearly identifiable, clearly visible and quickly accessible controls".

Emergency stop buttons are usually identified by red/yellow. The specific design should have a signalling function whose effect is that any person, and especially untrained people, can quickly recognise the control as the device to eliminate a hazard in the case of an emergency.

One imperative requirement for equipment identified in this way is, therefore, that it must be possible to trigger a safe state at any time and in any operating mode, without further knowledge of the machine (see also EN ISO 13850).

It is not acceptable for an emergency stop button to be enabled temporarily, since this can lead to faulty operation and life threatening loss of time in panic situations.

If one considers handheld terminals in relation to these requirements it is evident that a differentiation must be made as to whether an emergency stop button on the handheld terminal may be used or not, depending on specific criteria and applications.

14.2.9.1 Permanently installed handheld terminals: Emergency stop button

Permanently installed handheld terminals are provided with a cable by means of which the handheld terminal is connected to the designated machine. The handheld terminal is usually connected to or disconnected from

the machine with the machine switched off. This takes place during the installation or deinstallation process. The handheld terminal's are not designed to be connected or disconnected whilst the machine is operating.

On many simple machines the handheld terminal is also the only operating option, so that, without the handheld terminal, the machine cannot be put into operation at all. Nonetheless, if the connector is unplugged from the machine during operation the emergency stop circuit is broken and the emergency stop function of the machine is activated, causing the machine to stop.

If a handheld terminal is uninstalled from a machine and is not reinstalled immediately, the equipment must be locked out in order to avoid confusion with a functioning handheld terminal. The machine can only be put back into operation again after a new handheld terminal has been installed.

This procedure must be described in the operating instructions for the machine and is the responsibility of the operator.

Due to the fact that plugging and unplugging takes place only rarely and that the machine is out of operation when unplugged, the risk of an accident as the result of a non-operational emergency stop button is considered to be very low and the use of red/yellow identification is therefore permissible.

The red/yellow emergency stop button must be connected into the emergency stop circuit of the machine in any case and must cause the power supply to the machine or set of machines in a plant to be switched off (stop category 0 or 1 in accordance with EN 60204-1).

14.2.9.2 Radio controlled handheld terminals: Stop button

Wireless handheld terminal's present a different case. These devices are not normally assigned to a specific machine but can be frequently logged on and off whilst the machine is in operation and can also be switched between different machines. For this reason the stop button is not always operational and the operating status is not clear to everyone.

Therefore, for stop functions in wireless controllers, EN 60204-1:1997 "Safety of Machinery. Electrical Equipment of Machines" (Chapter 9.2.7.3), demands:

"The operating means to initiate this stop function shall not be marked or labelled as an emergency stop device, even though the stop function initiated on the machine can be an emergency stop function."

For this reason, for radio controlled handheld terminal's KEBA uses a stop button that features all the mechanical characteristics of a normal emergency stop button but is of a neutral grey colour.

In contrast to the red/yellow emergency stop button there is no need to switch the stop output signals of the radio receiver into the machine's normal emergency stop circuit. It can also be used to stop individual safety zones of a machine or plant, where functions such as "Safe operational stop" can be triggered. This means that the drive components are safely maintained in controlled shutdown by means of active, powered drives (stop category 2 in accordance with EN 60204-1). This can prevent the loss of reference data and facilitates fast restart of the machines.

The trained handheld terminal or machine operator is aware of the function assigned to the button and knows the current operating mode in each case as well as the current assignment of the machine. For this reason the colouring is not disadvantageous to the machine operator.

The safety gain is that, in the case of inactive or unassigned equipment, no danger of confusion is presented to third parties in respect of functional emergency stop buttons.

14.2.9.3 Temporary plug-in handheld terminals: Stop button

Some cabled equipment is provided with a quick-release connector (e.g. bayonet) that makes it possible to plug in and unplug the handheld terminal quickly and ergonomically whilst the machine is in operation. Such handheld terminal's are provided for frequent alternation of operation between one or more machines and are needed there on a temporary basis, for commissioning or setting up purposes.

By means of several measures, such as bridging connectors or relay circuits, the emergency stop circuits of the machine are bridged when the handheld terminal is unplugged so that the machine can also continue to run in normal operation without the handheld terminal. Start-up and operation of the machine can then take place using an independent operating device.

These handheld terminals share the same problems as the radio terminals, since due to frequent plugging and unplugging it cannot be ruled out that disconnected handheld terminal's with ineffective stop buttons may be left lying or hanging temporarily in a machine shop or factory in the neighbourhood of working machines and may be mistaken for functional units in an emergency situation.

This special case is not clearly treated in the corresponding Standards. However, in the Product Standards for presses (EN 692:2004, EN 693:2001, EN 12622:2001, and EN 13736:2003) one finds the following clear statement:

"Any disconnectable control station shall not incorporate an emergency stop button if the press can be operated while this controls station is disconnected."

Further Product Standards are currently under review.

In several discussions with external notified bodies and technical committees it was also determined that temporary, plug-in handheld terminals should be treated as radio handheld terminal's.

The approach to constructively eliminate hazards by using clear colour coding, in preference to any organisational measures, also corresponds to the "Principles for the Integration of Safety" of the Machinery Directive and is therefore legally binding.

For this reason, temporary plug-in handheld terminals may likewise only be equipped with a grey stop button.

Since handheld terminals made by several other manufacturers are on the market with a grey stop button and have been certified by nominated test centres, the state of the art requirement is also met.

14.2.10 Information about Enabling Devices

Many machines have both a normal and special operating modes.


The machine fulfils its primary mission in normal (automatic) operation. In this mode of operation, safety is guaranteed by closed, guards and/or with protective devices.

A machine's special operating modes serve to maintain normal operation. In doing so, safety must be guaranteed in a way that is different to normal operation, since hazardous areas of the machine can now be entered and targeted machine movements have to be possible.

The enabling device plays a primary role here.

This application requires the enabling device to eliminate the hazards that are to be controlled in a timely manner, before any personal injury occurs. Additional safety measures may be necessary for this purpose, such as safely reducing the speed of drive mechanisms.

In contrast to the emergency stop button respectively the stop button, a machine in special operating mode with an enabling button is in a safe state as long as this enabling button is not activated (see illustration).

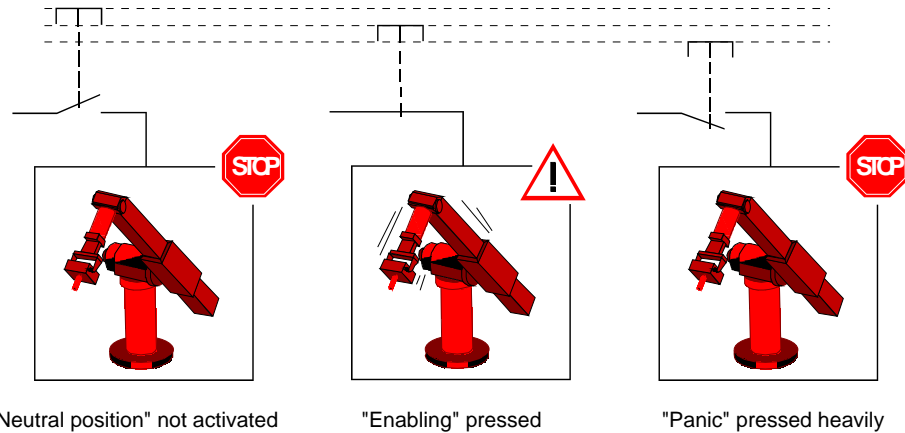

Enabling functions

The enabling function is also described in EN 60204-1:1997 and corresponds to the state of the art.

The panic position on 3 stage enabling switches was introduced because limbs often become cramped when a person is in a state of shock and as a result is not able to release the enabling switch. For this reason, firmly pushing down on the enabling switch also leads to switch off.

The controller must be designed in such a way that machine movement is not initiated directly when the enabling device is activated but only as a result of the additional activation of a control button. This may be via the handheld terminal's membrane keyboard or graphical software buttons on the touch screen.

An optionally available joystick can also be used to trigger the machine movement signal.

According to EN 60204, only stop categories 0 or 1 are allowed for the enabling function, i.e. stopping the machine with the enabling device must always be combined with switching off the power supply to the drive mechanisms.

In order to prevent incorrect, permanent activation of the enabling switch by mechanical fixing devices, it is recommended to limit the maximum duration of an accepted enablement. This must be achieved by means of a controller located downstream to the handheld terminal.

An enabling device is not a replacement for a two-hand control device, which is specified for some machines (e.g. presses) and must therefore not be confused.

In contrast to the enabling device, the two-hand control device forces the endangered limbs of the operator into a safe position whilst the machine is in motion.

14.3 Electromagnetic Compatibility

The European Union obligates its member states to harmonise their statutory provisions in respect of electromagnetic compatibility by means of Directive 89/336/EC (will be replaced by the new Directive 2004/108/EC from 20.7.2007). In the following text this Directive is abbreviated to the EMC Directive.

All electrical and electronic device that is put into circulation in Europe must, therefore, conform to the fundamental safety requirements of the EMC Directive. According to this Directive, electromagnetic compatibility is the ability of a device, plant or system to work satisfactorily in the electromagnetic environment, without itself causing electromagnetic interference that would be unacceptable to all devices, plant and systems present in this environment.

In addition to the legal requirements described above, the reliable functioning of an electrical device is also a fundamental quality characteristic of such a device.

As well as basic information concerning electromagnetic compatibility, the following pages describe the implementation of the EMC requirements in respect of the KeTop product range of handheld terminal devices.

14.3.1 The electromagnetic environment – interference sources, interference sinks and coupling paths

There are a number of artificial and also natural sources of interference in the electromagnetic environment that can affect electrical and electronic device.

The most well-known natural interference phenomenon is atmospheric discharge (lightning discharge).

Artificial sources of interference are, on the one hand, intentional, such as mobile radio, amateur radio, TV and radio transmitters, and, on the other hand, unintentional, such as microwave ovens, arc welding, ignition systems, high voltage device, electric motors, electronic device and also electrostatic discharge.

14.3.1.1 Atmospheric discharge (lightning)

Atmospheric discharge can take place directly or indirectly on power and communication lines. The consequence of such an impact if there is insufficient protection is the destruction of the electrical device.

Atmospheric discharge is simulated in accordance with the international test standard IEC 61000-4-5 (EN 61000-4-5 for Europe) – *Electromagnetic compatibility (EMC). Testing and measurement techniques. Surge immunity test.*

The relevant international product standard for control systems, IEC61131-2 (EN61131-2 for Europe), divides the areas of application into zones. Higher or lower levels of interference can be expected depending on the zone in question. All Kemro-K2 control systems and also the products of the KeTop range are suitable for application in Zone B.

The product standard requires the testing of surge immunity in accordance with IEC 61000-4-5.

14.3.1.2 Electrostatic discharge (ESD)

Materials can be charged by contact followed by subsequent separation. This effect only arises when at least one of the two materials is a non-conductor. As a result, discharge may take place if a charged conductor, or one that is charged by the influence of an electronic field, comes near a metallic object.

After charging, the possible voltages between the charged bodies can reach over 10 kV.

The most frequent occurrence of electrostatic discharge takes place between people and metallic objects. Since one is practically unnoticed of discharges below 3500 V and yet electronic components are destroyed by low voltages, ESD damage to electronic components often goes unnoticed.

The international Standard IEC 61000-4-2 (EN 61000-4-2 for Europe) is used to simulate the measurement of electrostatic discharge. The international product standard IEC 61131-2 (EN 61131-2 in Europe) for programmable controls demands testing to IEC 61000-4-2 and also defines the severity level.

14.3.1.3 Technical systems as interference sources

Technical systems can act as sources of interference. In doing so, the interference may be intentional or unintentional. Electromechanical energy is often also used for material processing.

Periodically occurring interference:

- Ignition impulses of combustion engines
- Sparking of commutator motors
- Electromagnetic fields of induction furnaces, arc welding device, microwave device etc.
- Pulse currents from frequency converters and switching power supplies
- Electromagnetic fields of radio and telecommunications device

Randomly occurring interference:

- Ignition impulses of fluorescent lamps
- Switching procedures on inductive electrical circuits
- Contact bounces when closing or opening make-and-break contacts
- Voltage fluctuations on heavy load switching procedures

There is a series of test standards for the above listed sources of interference, intentionally or unintentionally caused by technical systems, which simulate this interference:

- IEC 61000-4-3 High Frequency Electromagnetic Field Immunity Test
- IEC 61000-4-4 Electrical Fast Transient / Burst Immunity Test
- IEC 61000-4-6 Test of Immunity to Conducted Disturbances, Induced by High Frequency Fields
- IEC 61000-4-8 Power Frequency Magnetic Field Immunity Test
- IEC 61000-4-11 Voltage Dips, Short Interruptions and Voltage Variations Immunity Test

All the international Standards listed here are also available as European Standards. The Product Standard IEC 61131-2 demands testing to these Standards and also defines the severity level.

14.3.1.4 Technical systems as interference sinks

In the case of functional interference, EMC problems first arise at interference sinks. The following interference sinks can be identified dependent on the degree of immunity to electromagnetic influences:

Immunity	Interference sinks
max	Transformers
	Circuit breakers, contactors
	Relays
	Power transistors
	Transistor circuits
min	Integrated switching circuits

Control systems without integrated switching circuits are unthinkable and would therefore not be sufficiently immune without suitable EMC measures.

14.3.1.5 Coupling paths

The transfer of interference signals from an interference source to an interference sink can take place via various coupling paths.

Coupling paths very often consist of two or more parallel lines running closely together. The coupling is a field coupling that takes place at low frequencies either via the electrical field (capacitive coupling) or via the magnetic field (inductive coupling).

At high frequencies and with corresponding expansion of the parallel running lines one speaks about an electromagnetic coupling due to close linking of both field types.

Direct coupling can occur when electrical circuits from the interference source and electrical circuits from the interference sink have common line components.

If there is a large distance between an interference source and an interference sink then one speaks of a radiation coupling.

14.3.2 EMC measures

In principle, all devices should be designed in such a way as to function reliably in the planned environment and in doing so should not interfere with other systems. All products of the Kemro product range (K2 control systems and KeTop) meet these requirements and it is not necessary to use any of the EMC measures described below when the specified additional units, cables and wiring are used.

However, additional EMC measures may be necessary for various reasons.

The following text is designed to help the user to correctly implement any additional EMC measures.

14.3.2.1 Shielding

Electromagnetic emission problems and immunity problems often occur in products at the same time. Likewise, EMC measures are mostly effective in the case of both emission problems and immunity problems.

Shielding fulfils two main tasks. On the one hand, the penetration of electromagnetic fields into sensitive electronic parts is prevented and, on the other hand, the radiation of electromagnetic fields is also prevented.

A complete EMC shield consists of a shielded housing, which protects the sensitive electronics and prevents them from transmitting interference, and cable shields that shield the sensitive interface signals and prevent the device from transmitting interference via its interfaces.

The cable shield basically connects two shielded housings together and must therefore be connected directly to the shielded housings of the sensitive electronics (connection points).

Particular attention should be paid to the connection between the cable shield and the shielded housings of the device. In order that the shield ef-

fect is maintained even at higher frequencies, care must be taken to ensure that the cable shield connects to the largest possible surface area and thereby acts as a continuation of the device's shielded housing. Pig tail connections are not suitable.

It may be necessary to earth cable shields and shielded housings for safety reasons but this is not an effective EMC measure.

14.3.2.2 Interference suppressors, filter components

Filtering is always necessary when unshielded signal and power supply lines are brought into shielded areas. Alongside the wanted signals, these lines often also carry interference signals that must not enter into shielded areas. Filters should therefore guarantee the interference immunity of the device but should also prevent the emission of interference from the device via unshielded lines.

Unshielded lines are usually used when the wanted signals that are carried are of a very low frequency. The normally high frequency interference signals are separated from the wanted signals by means of frequency selective filtering with the aid of low-pass filtering.

Low-pass filters must be sized in such a way that the lower frequency wanted signals can pass through and the higher frequency interference signals are filtered.

Multi-stage filters are often necessary for filtering. Nearly all filter combinations contain Y-capacitors, i.e. capacitors that are connected to the filter housing for the dissipation of interference currents. In order for these filters to function correctly, the housing must be connected to a stable reference potential.

Since the interference signals must not enter into the shielded area, the potential of the shielded housing must also be the reference potential for the filter circuits.


Filter circuits or filter components must therefore be placed precisely where the lines enter the shielded area. If the filters are placed inside or outside the shield wall, this can lead to a field coupling between the filtered and unfiltered lines.

The connection to the reference potential must be as low impedance as possible and therefore it is necessary for there to be contact over a large surface area between the filter housing, which is usually metallic, and the shield wall of the device. Pig tails may not be used to make such a contact.

Line filters

Typical line filters have a metal housing that has to be connected to the earth wire (PE) for safety reasons and consist of a current-compensated choke (see illustration) consisting of Y-capacitors, which are connected to

the metal housing on one side, and X-capacitors (connected between the phases or between phase and neutral).

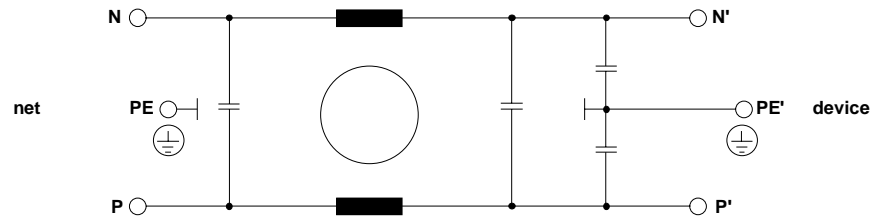


Line filter

The desired filter effect is basically governed by the correct contact between the filter housing and the shielded housing of the device. The line filters must therefore be placed directly at the inlet to the shielded housing of the device and a very good connection must be made between the metal housing of the filter and the shielded housing of the device.


If placement at the inlet is not possible for reasons of space, partly shielded connection lines must be used. In doing so the following procedure is to be followed:

If the filter is placed inside the shielded housing of the device, the line cable must be shielded from the inlet through to the line filter and the cable shield contacted on both ends. This prevents the propagation of interference on the line cable inside the device. It also prevents any electromagnetic fields that may be present inside the device from penetrating the line cable.

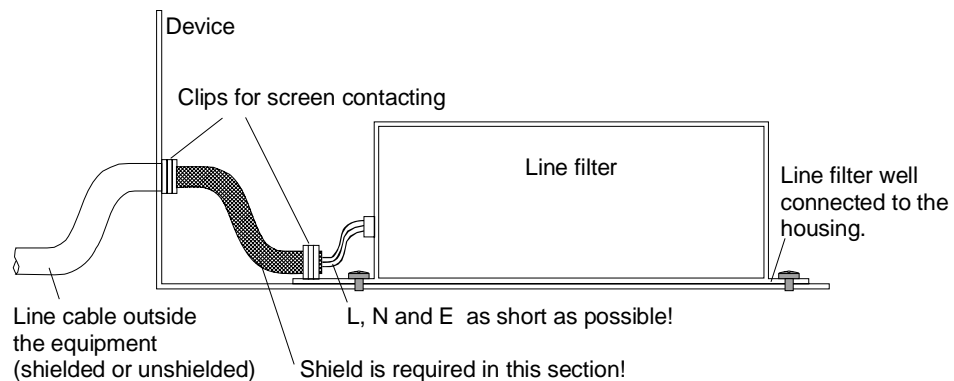

Correct connection of a compact line filter

If the line filter is placed outside the shielded housing, the device connection line must be shielded from the line filter through to the shielded housing of the device and the cable shield must be contacted on both ends. This prevents interference produced by the device from being transmitted externally where it could penetrate other systems. It also prevents the penetration of interference signals back into connection wires that have already been filtered.

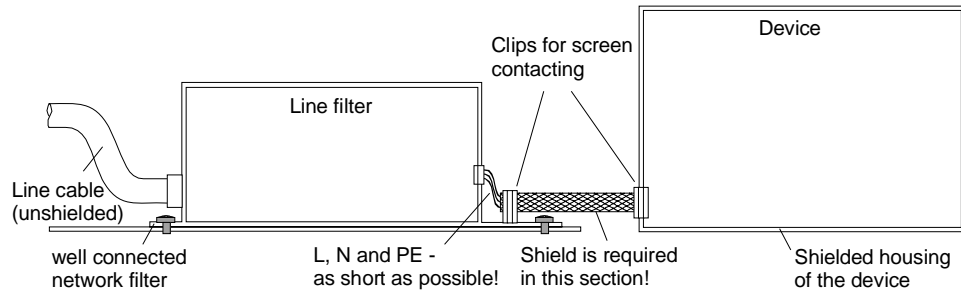


Correct connection of a compact line filter

When connecting line filters, attention should first be paid to the frequency ranges to be filtered. If frequencies in the MHz range are also to be filtered, such a line filter should have a metal housing. Line filters with plastic housings are normally not suitable for this purpose.

Current-compensating chokes


Device manufacturers sometimes specify the use of current-compensating chokes or the installation of ferrite loops in the power supply line. Many examples of this can be found in motor lines that are fed by frequency inverters.

Such chokes (see the following illustrations) suppress common-mode interference currents (I_s) and allow the operating currents (I_B) to pass unhindered. It should be noted that the operating currents in the core produce self-cancelling magnetic fields so that the operating current does not saturate the ferrite cores. Such throttles must also be placed at the inlet to the shielded housing of the device.

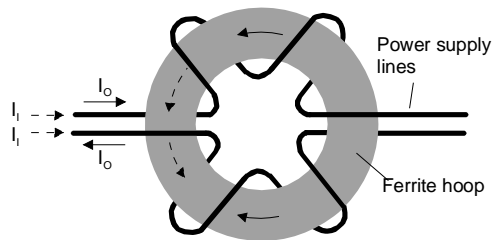

I_i ... Interference current
 I_o ... Operating current

Current flow of a current-compensating choke

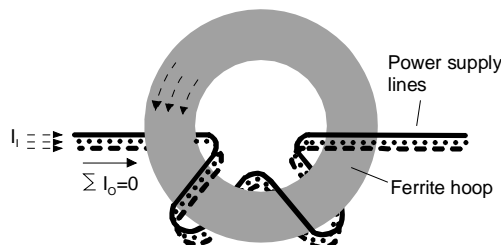


I_i ... Interference current
 I_o ... Operating current

Current flow of a current-compensating choke

Ferrites

Ferrites operating via data lines work in a similar way to current-compensating chokes. The wanted signals (see illustration) can pass unhindered and the interference signals are damped. A fundamental difference from current-compensating chokes is that in the case of ferrites the application range takes place at higher frequencies and therefore the material losses are responsible for the damping and the interference is not reflected, as in the case of inductance, but is converted into heat.

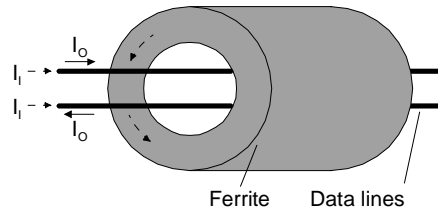

I_i ... Interference current
 I_o ... Operating current

Current flow for ferrites

14.3.2.3 Prevention of couplings

Coupling between interference sensitive signals (e.g. analogue signals) and the lines that carry the interference signals (e.g. motor lines) can be reduced by laying cables separately.

14.3.3 EMC measures on KeTop

The KeTop is designed for industrial applications. Considerable electromagnetic and electrostatic interference can occur in this environment. For this reason special emphasis was placed on interference immunity and data security in the design of the device. The EMC design implemented and described below considers all the above named sources of interference and the possible coupling paths.

- All shielding and filter measures (filtered power supply) in the KeTop are carried out directly on the printed circuit board.
- The special design of the KeTop cable guarantees interference immunity even for greater connection lengths, i.e. the data lines (communication signals) are shielded and so they are separated from the control lines (power supply, enabling button, emergency off, key-operated switch etc.) inside the KeTop cable.
- Power supply lines in the control cabinet are usually unshielded. They are therefore laid outside the KeTop cable shield in order to prevent a coupling with the sensitive data lines.
- The unshielded control and power supply lines are either filtered on entry into the shielded housing of the KeTop or separated from the electronics in such a way that any interference signals carried by these lines cannot affect the internal electronics of the KeTop.
- It is not necessary to lay the KeTop cable separately.

14.3.3.1 Shield connections

The cable shield of the KeTop cable can be considered to be an extension of the KeTop shielded housing (=printed circuit board) to the shielded housing of the communication partner (e.g.: PLC). From this it can be deduced that the shielded connections from the cable shield to the device shields make a fundamental contribution to the interference immunity of the KeTop. It is not necessary to wire shielded connections to earth.


The shielding connection in the KeTop is made via the RJ-45 connector in the connection slot.

Connecting the KeTop via the connection box (e.g. CB211) guarantees safe shielding protection right through to the communication partner. It is therefore urgently recommended to use a suitable KEBA connection box.

All connection cables available from KEBA (KeTop TTxxx, KeTop ICxxx, KeTop XD040 and KeTop CD040) guarantee correct shielding connection.


For self-made cables the following conditions must be met for shielding data lines:

- On every connector design (DSUB or RJ-45) the cable shield must be connected to as large a surface area of the connector housing as possible.

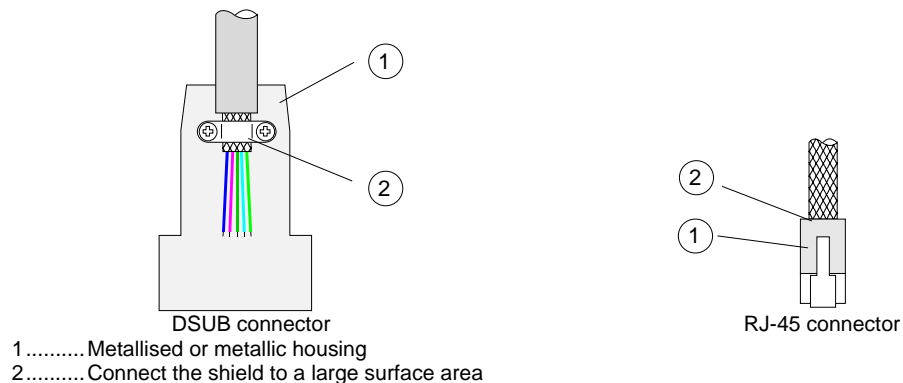

Correct shield connection for DSUB and RJ-45 connectors

- The use of pig tails for contacting the cable shield via plug pins is unsuitable. The inductivity of such pig tails represents high impedance resistance for higher frequency interference; this means an apparent break in the cable shield. Interference is then no longer diverted and works directly on the inner lines.

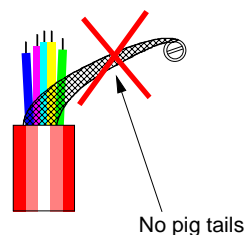


Insufficient contacting of a cable shield

14.3.3.2 Shielding inside the control cabinet


In many cases a range of interference sources, such as servo drive modules, transformers, contactors and relays, is present in the control cabinet. It is therefore necessary to run the cable shield from the connector housing (control cabinet) to the control (continuous connection from the handheld terminal to the control).

When using the appropriate connection box and a shielded cable for the data line from the connection box to the control, the continuous, high frequency compatible connection of the shield from the KeTop to the control is guaranteed.

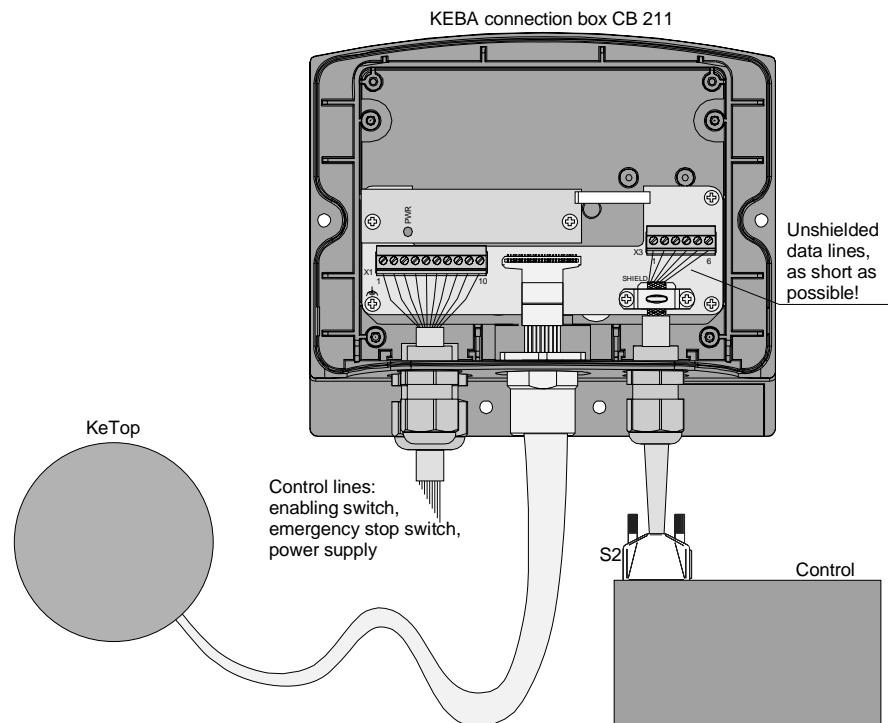


Example of a correct shield connection in a KEBA connection box

If for some reason a connection box cannot be used, the continuous connection of the shielding on less critical interface types such as RS-232-C takes place by contacting the connector housing with the control cabinet and inside the control cabinet by contacting the shielding with the control cabinet (using shielding clips). The smaller the distance between the contacting of the connector housing on the control cabinet to the cable clip in the control cabinet, the better the shield damping.

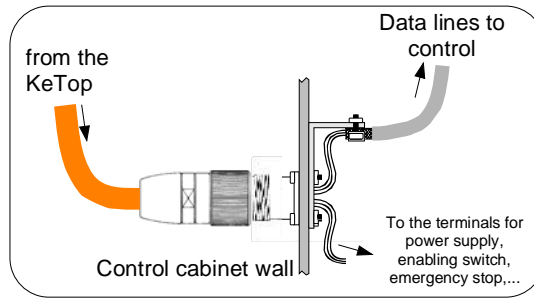

The interference immunity of the device with the connection type presented above is also decisively influenced by the satisfactory separation of the control signals and the data line signals. The better the separation of the two signal types and the shorter the shielding connection, the higher will be the interference immunity of the complete system.

If the Ethernet is used as the communications interface (KeTop T100 and KeTop T50VGA only) one of the two connection cables provided for the purpose of connecting to a control system must be used (IC020 or IC040). Both cables carry the Ethernet signals to a suitable connector (RJ-45) and thereby produce a continuous shielding connection and also the required characteristic impedance of the cable.

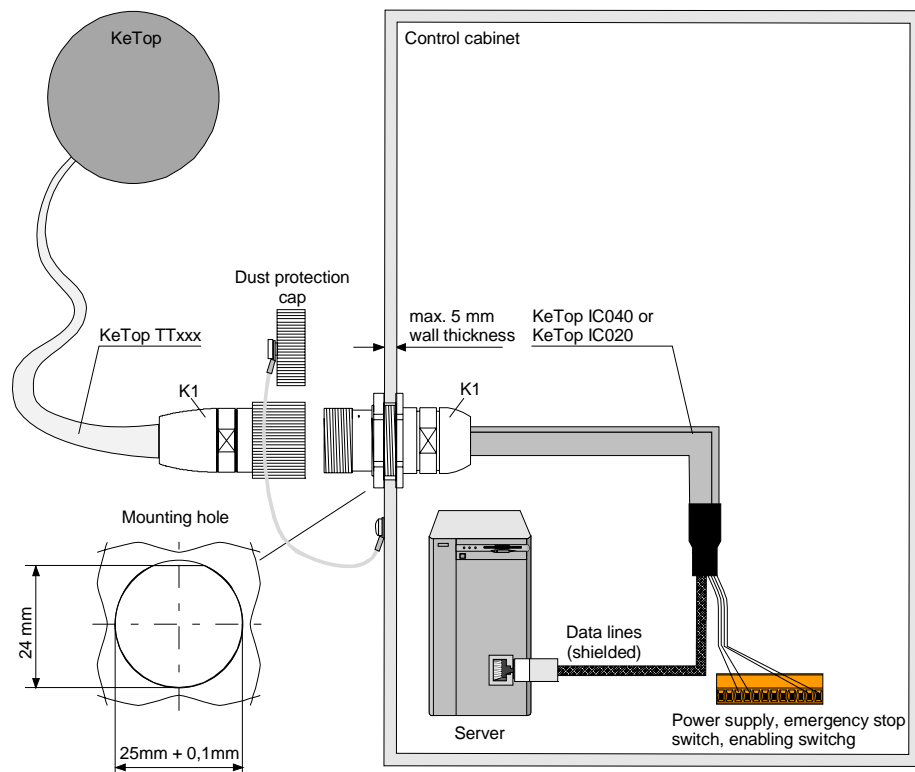

Connection cable IC020 or IC040 in the control cabinet

14.4 List of the appropriate EC directives and applied standards

14.4.1 EC directives

98/37/EC 2004/108/EC	Directive for the safety of machinery with the application 98/79/EC EMC directive
-------------------------	--

14.4.2 Standards

For examination of the conformity of the KeTop regarding the directives the following legally not bounded european standards has been used:

14.4.2.1 Examination of the conformity regarding the directive of machinery

EN ISO 13850:2006	Safety of machinery - emergency stop equipment, functional aspects, principles for design
EN 954-1:1996	Safety of machinery - Safety-related parts of control systems - Part 1: General principles for design
EN 60204-1:1997, chap.9, 10	Electrical equipment of machines, general requirements

14.4.2.2 Examination of the conformity regarding the directive of EMC

EN 61131-2:2003 chap. 8, 9	Programmable Controllers Part 2: Equipment requirements and test
-------------------------------	---

So the accordance to following standards is also given:

EN 61000-6-2:2001	Electromagnetic compatibility (EMC): Generic standards - Emission standard for industrial environments
EN 61000-6-4:2001	Electromagnetic compatibility (EMC): Generic standards - Immunity for industrial environments

14.4.2.3 Other standards

For the design of the safety concept some parts of the following legally not bounded european standards has been used.

14.4.2.4 General procedure and safety principles

EN ISO 12100-1:2003	Safety of machinery - Basic concepts, general principles for design - Part 1: Basic terminology, methodology
EN ISO 12100-2:2003	Safety of machinery - Basic concepts, general principles for design - Part 2: Technical principles

Enabling switch

EN 954-1:1996 (ISO 13849-1:1999)	Safety of machinery - Safety-related parts of control systems - Part 1: General principles for design
EN 60204-1:1997	Safety of machinery - Electrical equipment of machines - Part 1: General requirements
ISO 10218-1:2006	Manipulating Industrial Robots - Safety

Stop switch and emergency stop switch

EN ISO 13850:2006	Safety of machinery; emergency stop equipment, functional aspects; principles for design
EN 60204-1:1997 chap. 9, 10	Safety of machinery - Electrical equipment of machines - Part 1: General requirements

Ergonomics

EN 614-1: 2006	Safety of machinery - Ergonomic design principles - Part 1: Terminology and general principles
EN 894-1:1997	Safety of machinery - Ergonomics requirements for the design of displays and control actuators-Part 1: General principles for human interactions with displays
EN 894-2:1997	Safety of machinery - Ergonomics requirements for the design of displays and control actuators - Part 2: Displays
EN 894-3: 2000	Safety of machinery - Ergonomics requirements for the design of displays and control actuators - Part 3: Control actuators

Stability and impermeability of casing

EN 60529:1991	Protection degree of casing
EN 61131-2:2003 chap. 12	Programmable controllers - Part 2: Equipment requirements and tests

Electrical safeness and fire protection

EN 61131-2:2003 chap. 11	Programmable controllers - Part 2: Equipment requirements and tests
EN 50178:1997	Electronic equipment for use in power installations

Environmental Conditions

EN 61131-2:2003 chap. 4	Programmable controllers - Part 2: Equipment requirements and tests
EN 50178:1997	Electronic equipment for use in power installations

UL examination for robotic applications

UL 1740, 1998	Industrial Robots and Robotic Equipment (TETZ2, TETZ8)
---------------	--

UL examination for industrial control equipment

UL 508, 17th edition	Industrial Control Equipment (NRAQ, NRAQ7)
----------------------	--

15 Conformity and Type Examination

15.1 EU Conformity Declaration



EC Declaration of Conformity



KEBA AG
Gewerbepark Urfahr
4041 Linz
AUSTRIA

Document No.: 68993/CE/1

We declare that the following products

Name of product: **KeTop T50**
KeTop C50

Variants: **all variants**

are in conformity with the essential requirements of the following European Council Directives:

- **EC-Directive relating to machinery 98/37/EC and its amendment 98/79/EC**
- **EC-Directive relating to electromagnetic compatibility 2004/108/EC**

Conformity to the directive 98/37/EC and its amendment 98/79/EC is assured by the compliance with the applicable parts of the following harmonized european standards for the emergency stop switch respectively stop switch (if available) as well as the enabling device:

- **EN ISO 12100-1:2003**
- **EN ISO 12100-2:2003**
- **EN ISO 13850:2006**
- **EN 954-1:1996/AC1997**
- **EN 60204-1:1997**

A type certificate with the No. 1069 was issued by the certification body NSBIV AG SIBE Switzerland, Inselquai 8, 6005 Luzern, Switzerland.

Conformity to the directive 2004/108/EC is assured by the compliance with the applicable parts of the following harmonized european standard:

- **EN 61131-2:2003**

Important notes:

The emergency stop switch respectively stop switch (if available) and enabling switches are part of the safety control circuits of a machine. Therefore the fundamental safety requirements in accordance with Appendix 1 of the Directive for machines can only be met with all safety control circuits.

Any modification on the product(s), that is performed without KEBA's consent will render this declaration invalid.

This declaration certifies the conformity with the directives mentioned, but does not imply any warranty of the features of the product(s).

The safety instructions contained in the documentation supplied with the product(s) must implicitly be followed!

Linz, 21.09.2007

Dipl.-Ing. Gerhard Ensinger
Head of Development Center

KeTopT50C50-engl.doc

15.2 ROHS Conformity Declaration

KEBA**ROHS Konformitätserklärung**

KEBA AG
 Gewerbepark Urfahr
 A- 4041 Linz

Wir bestätigen, dass die nachfolgend bezeichneten Produkte der **Richtlinie 2002/95/EG** der Europäischen Union zur Beschränkung und Verwendung bestimmter gefährlicher Stoffe in elektronischen Geräten (ROHS) entsprechen.

Artikelname: **KeTop T41**
KeTop T50 VGA

Dabei handelt es sich namentlich um folgende Substanzen:

Blei (Pb)
 Cadmium (Cd)
 Hexavalentes Chrom (Cr^{VI+})
 Polybromierte Biphenyle (PBB)
 Polybromierte Diphenylether (PBDE)
 Quecksilber (Hg)

Wichtiger Hinweis: Bei einer nicht mit Keba abgestimmten Änderung des (der) Produkt(e)s verliert diese Erklärung ihre Gültigkeit.

ROHS Conformity Declaration

We hereby confirm that the undermentioned products are conform to the **Directive 2002/95/EC** of the European Union on the restriction of the use of certain hazardous substances in electrical and electronic equipment (ROHS).

Name of product: **KeTop T41**
KeTop T50 VGA

Following substances namely are involved.

Lead (Pb)
 Cadmium (Cd)
 Hexavalentes chromium (Cr^{VI+})
 Polybrominated biphenyls (PBB)
 Polybrominated diphenylethers (PBDE)
 Mercury (Hg)

Important note: Any modification on the product(s), that is performed without KEBA's consent will render this declaration invalid.

Linz, 23.11.2007

Gerhard Ensinger
 Gerhard Ensinger
 director

Claudia Graiger
 Claudia Graiger
 Projectmanager ROHS

15.3 Type-Examination Certificate



S SCHWEIZERISCHER ZERTIFIZIERUNGSDIENST
 CE SERVICE SUISSE DE CERTIFICATION
 S SERVIZIO SVIZZERO DI CERTIFICAZIONE
 S SWISS CERTIFICATION SERVICE

SCESP 046

Certifying Body
SIBE Schweiz



Accredited Certification Authority SIBE Schweiz in accordance with EN 45011
 Designated European Conformity Assessment Body (Notified Body), EC-Identification Nr.: 1247

Type-Examination Certificate No. 1068

Product	Command Device Handheld terminal with 3-Position Enabling Switch
Brand	KEBA
Type	KeTop T50 KeTop C50 all variants
Safety specifications	meets the safety category 3 according to EN 954-1 The safety functions of the special operating mode control device and the STOP button or the EMERGENCY STOP button meet the safety category 3 in accordance with EN 954-1 and also the requirements of EN 60204-1 as long the remarks in the operating manual are obeyed.
Manufacturer's address	Keba AG Gewerbepark Urfahr A-4041 Linz
Applicant's address	Keba AG Gewerbepark Urfahr A-4041 Linz
Valid until	29 December 2009

The examined construction design complies with the European Commission relevant provisions of 22 June 1998 for adjustment of member country legal guidelines for machines (98/37/EC) and the 27 August 1998 modifications thereof (98/79/EC).

The validity of this certificate is based as well on all attachments named herein and the general provisions outlined on the reverse side.

Date of issue
 1 September 2006

Certification Authority:
 NSBIV AG
 Certification Authority SIBE Schweiz
 P.O. Box 3918
 CH-6002 Lucerne, Switzerland

Safety Engineer

 M. Luzzatto

Head of Certification Authority

 P. Keller

General Provisions

This type-examination certificate is valid only for the products specified by brand and type on the front side of this certificate. In order to certify compliance with the Machinery Directive (98/37/EC), each product must be identified in accordance with the requirements of the Machinery Directive and its revisions.

Manufacturers and suppliers are obliged to place on the market only those products that are specified by brand and type on the front of this certificate and which fully comply with the certified sample of the type-examination regarding design and construction of all safety-related components.

A prerequisite for the evaluation of the product specified on the front side is that design and manufacturing techniques meet the state of the art.

Concerning accompanying operating instructions, their content and languages, we refer to the provisions of the Machinery Guideline.

If organizational measures are to be implemented to secure safety, they must be agreed on in advance with the buyer and user of the product. Also they must be documented appropriately (operating and maintenance instructions).

In accordance with EN 45011 the manufacturer is obliged to immediately report to the certifying body and to remedy all deficiencies of the product specified on the front side.

Furthermore, the examination is based on the Machinery Directive and their requirements concerning areas of application, putting into circulation, free circulation of goods, certification procedures, CE marking and final provisions.

During the period of validity of this certificate this type-examination certificate may be referred to in written and electronic advertisements. The exact wording is binding: "In compliance with the SIBE Schweiz Type-Examination Certificate No. ...".

An application to extend the certificate validity can be submitted if the product and the related application conditions still comply with the safety requirements.

The type-examination certificate loses its validity if the product being sold does not fully comply with all safety-related components of the certified sample (i. e. modifications have been made) or if the operating instructions and conformity declarations are not delivered with the product in both the original language as well as in the language of the user.

The type-examination certificate can be declared invalid at any time by the Certification Body SIBE Schweiz, if new legal regulations or new experiences or findings indicate that safety is not sufficiently ensured (fundamental deviation from the state of the art).

SIBE Schweiz / Z9721eVers02