



TABLE OF CONTENTS

Chapter 1: Getting Started

Introduction	1-2
The Purpose of this Manual.....	1-2
Supplemental Manuals	1-2
Technical Support	1-2
Conventions Used.....	1-3
Key Topics for Each Chapter.....	1-3
Agency Approvals	1-4
Quick Start Steps	1-5
Step 1 – Unpack and Inspect.....	1-5
Step 2 – Become Familiar with Available Communication Ports.....	1-6
Step 3 – Install C-more Micro Panel	1-8
Enclosure Clearances	1-9
Step 4 – Install the Programming Software and Develop a Project	1-11
Step 5 – Connect C-more Micro to Computer	1-12
Step 6 – Provide Power to the C-more Micro Panel.....	1-14
Step 7 – Accessing the C-more Micro Panel Setup Screens	1-16
Step 8 – Choose C-more Micro Panel to PLC Protocol & Cables	1-17
Step 9 – Connect C-more Micro Panel to PLC.....	1-19

Chapter 2: Specifications

Available Models.....	2-2
EA3-S3ML-RN and EA3-S3ML-R Specifications	2-3
EA3-S3ML and EA3-T4CL Specifications	2-6
EA3-T6CL, EA3-T8CL and EA3-T10CL Specifications.....	2-9
EA3-S3ML-RN, EA3-S3ML-R, EA3-S3ML Panel Dimensions	2-12
EA3-T4CL Panel Dimensions.....	2-13
EA3-T6CL Panel Dimensions.....	2-14

EA3-T8CL Panel Dimensions.....	2-15
EA3-T10CL Panel Dimensions.....	2-16
Communications Ports	2-17

Chapter 3: Accessories

Accessories	3-2
C-more Micro Programming Software	3-3
EA-ECOM Ethernet Communication Module.....	3-6
D-SUB 15-pin 90-degree Communication Port Adapter	3-7
D-SUB 15-pin to Terminal Block Adapters.....	3-8
Clear Screen Overlay	3-9

Chapter 4: Installation & Wiring

Safety Guidelines	4-2
Plan for Safety	4-2
Introduction	4-3
Panel Cutout Dimensions	4-4
Enclosure Clearances	4-5
Enclosure Clearances	4-6
Wiring Guidelines	4-7
Providing Power to the C-more Micro Panel	4-7

Chapter 5: System Setup Screens

Introduction.....	5-2
Information	5-2
Setting	5-2
Test Menu.....	5-2
Accessing the System Setup Screens	5-3
System Setup Screens Flowchart	5-4
Setup Menu	5-5
Information Menu	5-6
Setting Menu	5-7
Setting – Brightness.....	5-7

Setting – Touch/Key Beep	5-8
Setting – Calibration.....	5-9
Setting – Clear User Memory	5-10
Setting – Reset to Factory Default.....	5-10
Setting – Hourglass	5-11
Setting – Rotation	5-12
Setting – Emulation.....	5-12
Setting – Ethernet	5-13
Test Menu	5-14
Test Menu - Serial Port1 - Loop Back Test	5-15
Test Menu - Serial Port2 - Loop Back Test	5-16
Test Menu – PLC Enquiry Test.....	5-17
Test Menu – Buzzer Test	5-17
Test Menu - Touch Panel Test	5-18
Test Menu - Display Test	5-18
Exit	5-19

Chapter 6: PLC Communications

Introduction.....	6-2
Available PLC Protocols	6-3
Maximum Connected PLC Nodes	6-4
C-more Micro Communication Ports	6-5
Cables from <i>AutomationDirect</i> – Wiring Diagrams	6-9
User Constructed Cables – Wiring Diagrams	6-17
RS-422A Multi-Drop Wiring Diagram Example	6-28
RS-485A Multi-Drop Wiring Diagram Example	6-30

Chapter 7: Maintenance

Maintenance	7-2
Project Backup	7-2
Check Operating Environment	7-2
Check Operating Voltage	7-2
Check Transmit and Receive Indicators.....	7-3
Check Physical Conditions.....	7-3
Run Tests under the System Setup Screens.....	7-4

Table of Contents

Check Settings under the System Setup Screens	7-5
Cleaning the Display Screen.....	7-5
Check Project Functionality	7-6
Checks from the C-more Micro Programming Software	7-6
Notes:	7-7

Chapter 8: Troubleshooting

Troubleshooting	8-2
C-more Micro Panel does not Power up.....	8-2
Display is Blank	8-2
Display is Dim	8-3
No User Program	8-3
Lost Firmware – ‘Update Mode’ Screen Displayed	8-4
Updating Firmware	8-4
No Communications between Panel and PC (Personal Computer).....	8-5
No Communications between Panel and PLC	8-7
Panel & PLC Error Codes.....	8-8
C-more Micro Panel Runtime Errors	8-9
Panel Errors	8-9
Reset to Factory Default	8-10
Electrical Noise Problems.....	8-10

Chapter 9: Replacement Parts

Replacement Parts	9-2
Customizing the Function Keys Insert Label	9-4

Appendix A: Panel & PLC Error Code Tables

Introduction	A-2
C-more Micro Panel Error Code Table	A-3
Modbus Protocols Error Code P499 Explanation	A-4
AutomationDirect CLICK	A-4
AutomationDirect DirectLOGIC - Modbus (Koyo).....	A-4
Modicon Modbus RTU	A-4
Entivity Modbus RTU.....	A-4
Productivity Error Code P499 Explanation	A-5

Do-more / BRX Error Code P499 Explanation.....	A-6
<i>DirectLOGIC</i> Error Code P499 Explanation	A-7
<i>DirectLOGIC</i> – K-Sequence PLC Error Code Table.....	A-7
<i>DirectLOGIC</i> – <i>DirectNET</i> PLC Error Codes.....	A-7
Allen-Bradley Error Code P499 Explanation	A-8
Allen-Bradley DF1 Protocol – PLC Error Code Tables.....	A-9
Allen-Bradley DH485 Protocol – PLC Error Code Tables	A-11
GE Error Code P499 Explanation	A-13
GE SNPX Protocol – PLC Error Code Tables	A-14
Mitsubishi FX Protocol – PLC Error Codes.....	A-23
Mitsubishi Q / QnA Series – PLC Error Codes	A-23
Omron Error Code P499 Explanation	A-25
Omron Host Link Protocol – PLC Error Code Table	A-26
Omron FINS Protocol – PLC Error Code Table	A-27
Siemens Error Code P499 Explanation	A-30
Siemens PPI Protocol – PLC Error Code Table.....	A-31

Appendix B: **C-more** Micro Panel Runtime Errors

Introduction.....	B-2
Panel Errors.....	B-2

VICPAS
HMI Parts Center