

4.0 Base Station Simple Configuration Documentation

V1.2

DALIAN SERTAG TECHNOLOGY CO., LTD

Historic Version

| Version | Date | Describe | Framer | Reviewer |
|---------|------------|----------------------------|--------|----------|
| 1.0 | 2023/12/13 | Program founder | | |
| 1.1 | 2023/12/14 | Document editing | | |
| 1.2 | 2023/12/18 | Document editing Translate | | |



Contents

| | |
|-----------------------------------|---|
| 1. Summary..... | 3 |
| 2. Operation Describe | 3 |
| 3. AP Station Configuration | 5 |
| 4. Summarize | 7 |



1. Summary

Simple configuration instructions: The AP is directly connected to the PC and shared through the Internet using the eStation.Agent, bring base stations online.

Preparation tools:


- 1) A computer, wired network card and wireless network card.
- 2) A base station and POE power.
- 3) Device connection diagram.




2. Operation Describe

Internet connection sharing settings.


- 1) Open the control panel - click Network and Internet.

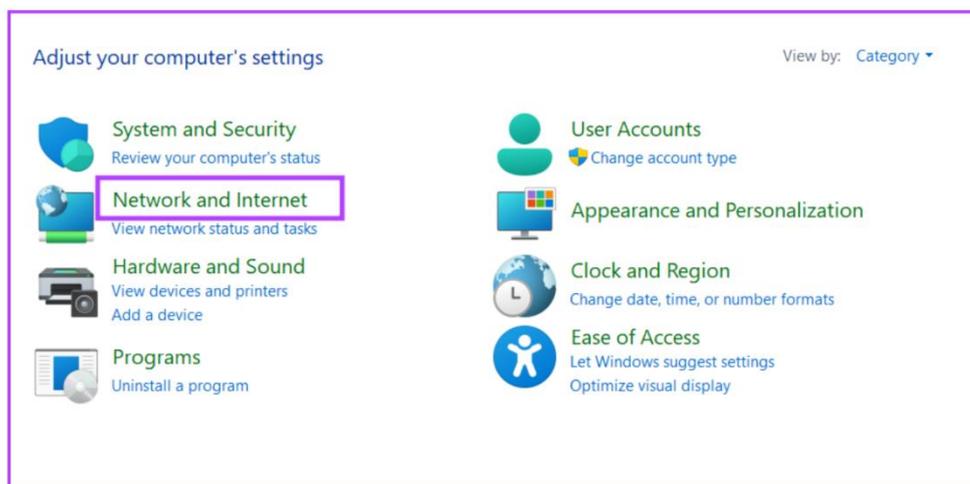

2) Click on Network and Sharing Center.

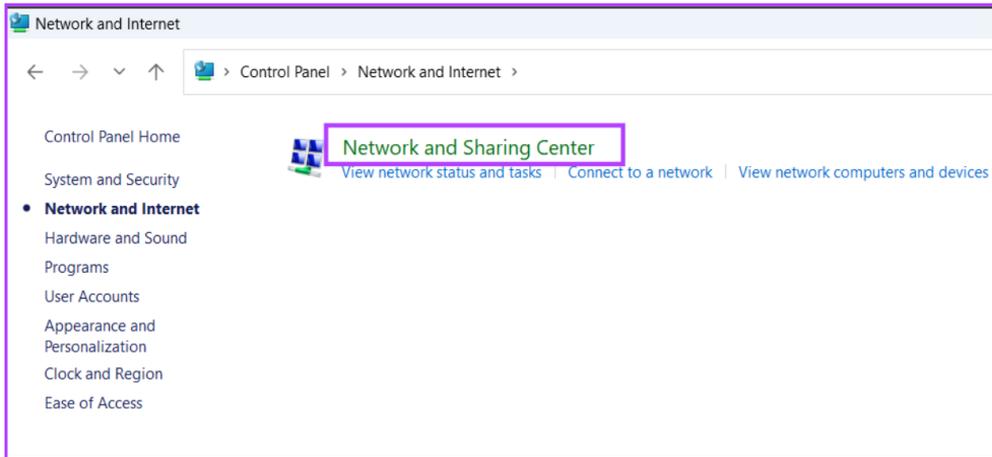


3) Click on Change adapter settings.

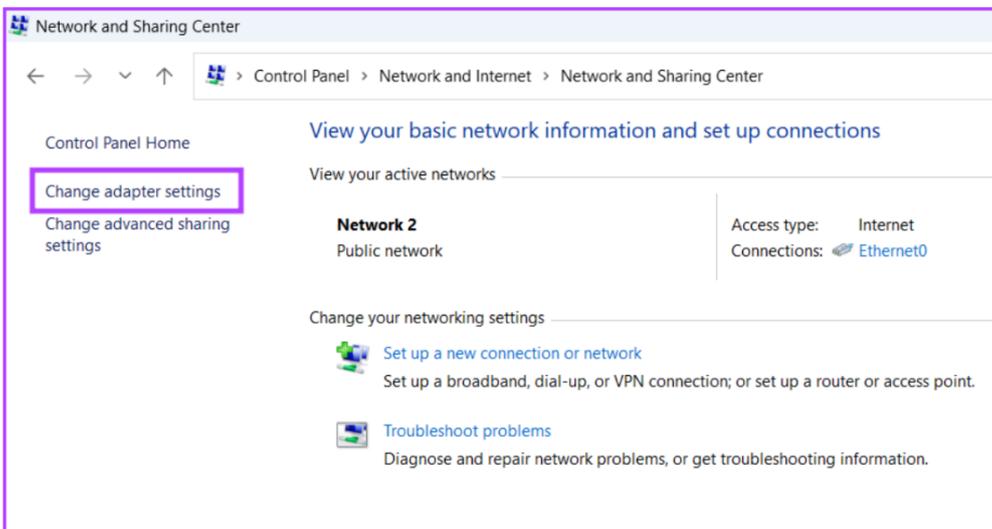


Note: Ethernet 2 is connected to the AP station4.0.

4) Right-click WLAN-Properties.

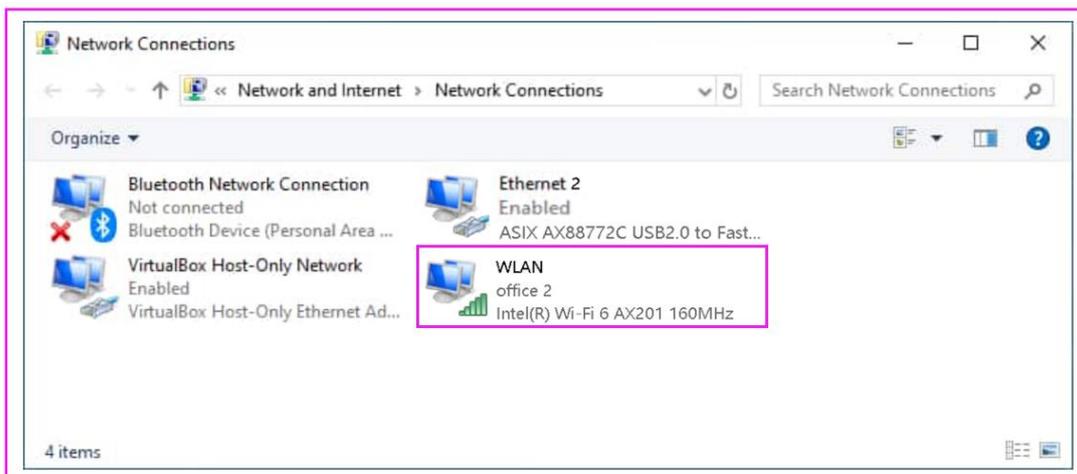

5) Select Sharing - Allow other network users to connect through this computer's


Internet connection - Home networking connection - Ethernet 2 (AP station 4.0) -
Allow other network users to control or disable the shared Internet connection – OK

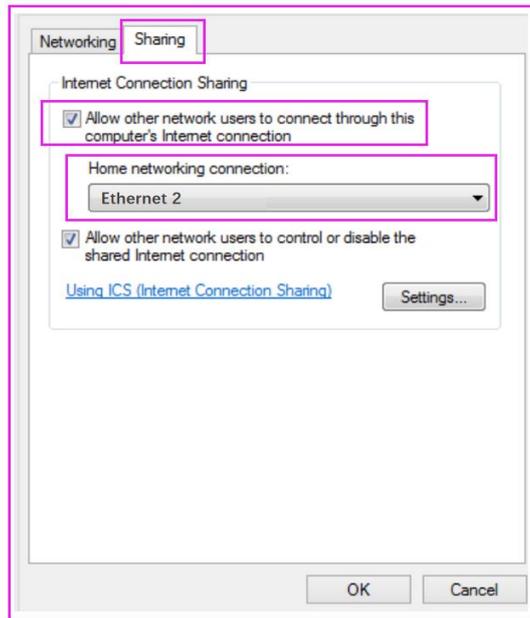

3. AP Station Configuration

AP station direct PC, start eStation.Agent to configure.
eStation.Agent usage steps:

1) Page settings - eRetail3.1 server information:

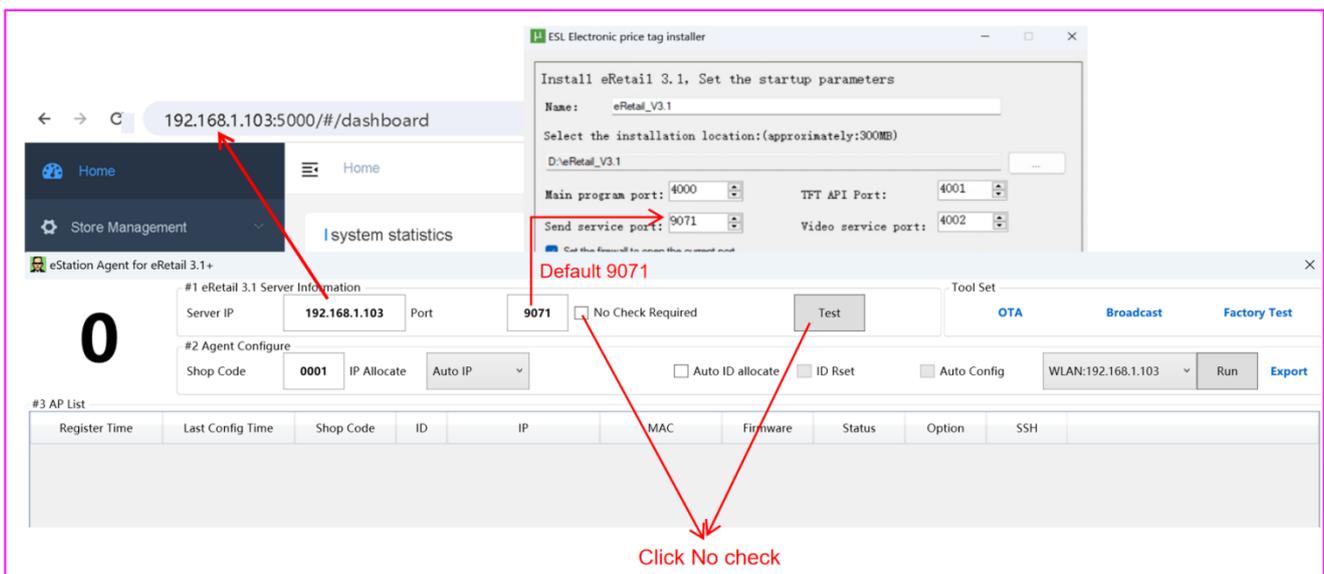

2) Page settings - Configuration content:

Auto IP: DHCP, automatically obtain network information.

Auto IP in area: Randomly assign an IP to the AP station within the specified area.

Manual IP: Assign fixed IP to AP station.

3) Page settings-Get base station:

Select the AP station to connect to the computer network card

4) Configure the base station:

| Register Time | Last Config Time | Shop Code | ID | IP | MAC | Firmware | Status | Option | SSH |
|-------------------|-------------------|-----------|----|--------------------|-------------------|-----------|--------|--------|---------|
| 23-12-18 15:58:29 | 23-12-12 02:11:35 | 0001 | 01 | 192.168.1.102:9072 | 02:81:05:4A:D0:2F | 1.0.115.0 | OK | View | Connect |

5) Click Option - View. ID and Network Information can be changed. Click OK to complete the configuration.

| Server Information | |
|----------------------|-------------------|
| Server IP | 192.168.1.103 |
| | 9071 |
| Client Information | |
| Shop Code | 0001 |
| ID | 01 |
| Network Information | |
| IP | 192.168.1.102 |
| MAC | 02:81:05:4A:D0:2F |
| Subnet Mask | |
| Default Gateway | |
| Preferred DNS server | |
| Alternate DNS server | |
| Cancel | OK |

4. Summarize

The PC must have two network cards, for AP station and WIFI. Just need to change the Internet connection sharing settings of WIFI. **Firewall settings need to be turned off.**