




## H6S 中英文爆炸图 ( H6S spare parts list ) 89200

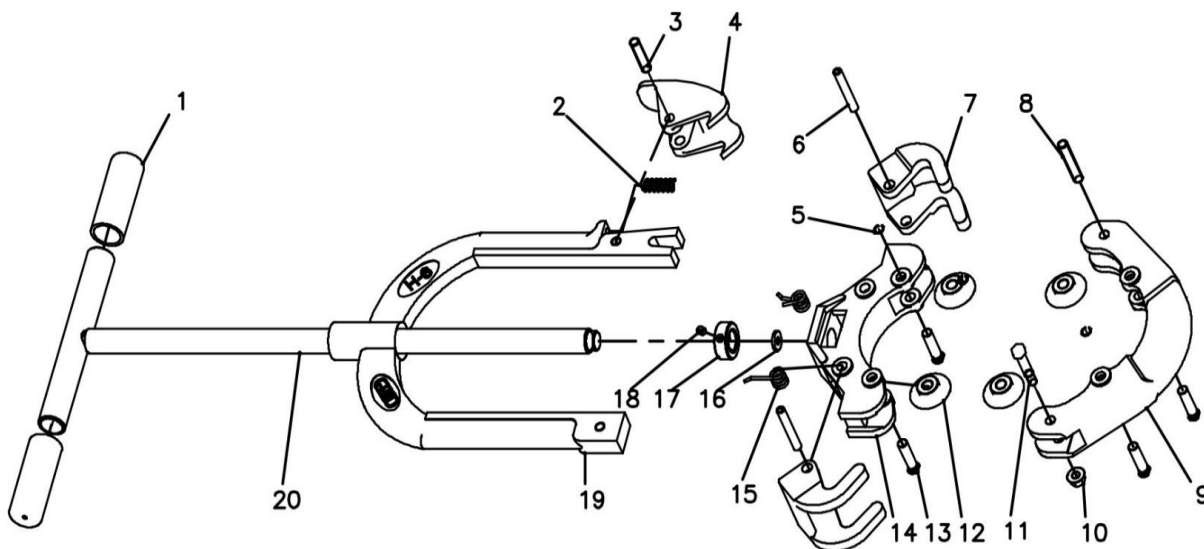

S/N	Ref. No.	品名	Description
1	89222	把手套 ( 2 )	handle grips ( 2 )
2	89119	弹簧	latch spring
3	89123	卡爪销	latch pin
4	89215	卡爪	jaw
5	89221	刀轮销定位卡簧 ( 4 )	ring ( 4 )
6	03027	弹性圆柱销8*55 ( 2 )	guide pin 8*55 ( 2 )
7	89216	卡管爪 ( 2 )	guide ( 2 )
8	89124	固定滚轮刀架销	lower yoke pin
9	89212	固定滚轮刀架	lower yoke
10	01879	锁紧螺母M8	locknut M8
11	01230	六角绞制孔用螺栓M8*45	hinge bolt M8*45
12	89223	割刀片 ( 4 )	cutter wheel ( 4 )
13	89220	刀轮销 ( 4 )	wheel pin ( 4 )
14	89213	移动滚轮刀架	crosshead
15	89218	扭簧	guide spring
16	89219	垫	thrust wader
17	89217	螺母	crosshead locknut
18	01610	开槽锥端紧定螺钉M8*8 ( 2 )	set screws M8*8 ( 2 )
19	89211	割刀架	upper yoke
20	89214	手柄焊接件	screw handle

