




H8S 中英文爆炸图 (H8S spare parts list) 89300

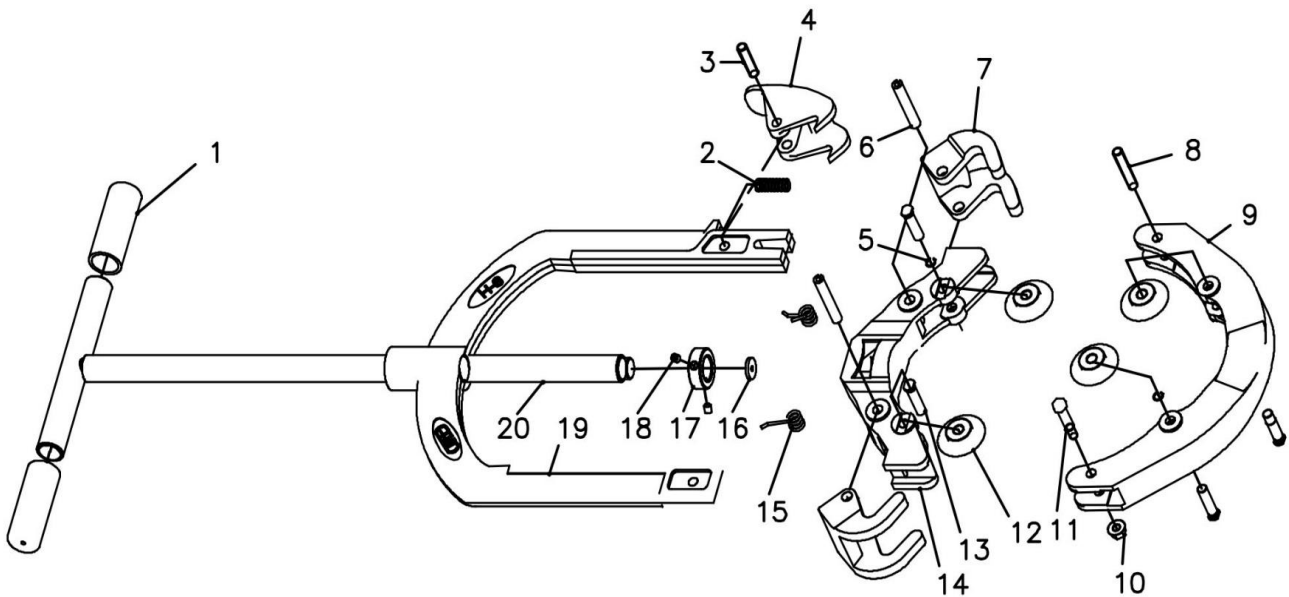

S/N	Ref. No.	品名	Description
1	89222	把手套 (2)	handle grips (2)
2	89119	弹簧	latch spring
3	89123	卡爪销	latch pin
4	89322	卡爪	jaw
5	89221	刀轮销定位卡簧 (4)	ring (4)
6	03027	弹性圆柱销8*55 (2)	guide pin 8*55 (2)
7	89321	卡管爪 (2)	guide (2)
8	89124	固定滚轮刀架销	lower yoke pin
9	89312	固定滚轮刀架	lower yoke
10	01879	锁紧螺母M8	locknut M8
11	01230	六角绞制孔用螺栓M8*45	hinge bolt M8*45
12	89317	割刀片 (4)	cutter wheel (4)
13	89220	刀轮销 (4)	wheel pin (4)
14	89313	移动滚轮刀架	crosshead
15	89218	扭簧	guide spring
16	89316	垫	thrust washer
17	89315	螺母	crosshead locknut
18	01610	开槽锥端紧定螺钉M8*8 (2)	set screws M8*8 (2)
19	89311	割刀架	upper yoke
20	89314	手柄焊接件	screw handle

