




## H4S 中英文爆炸图 ( H4S spare parts list )

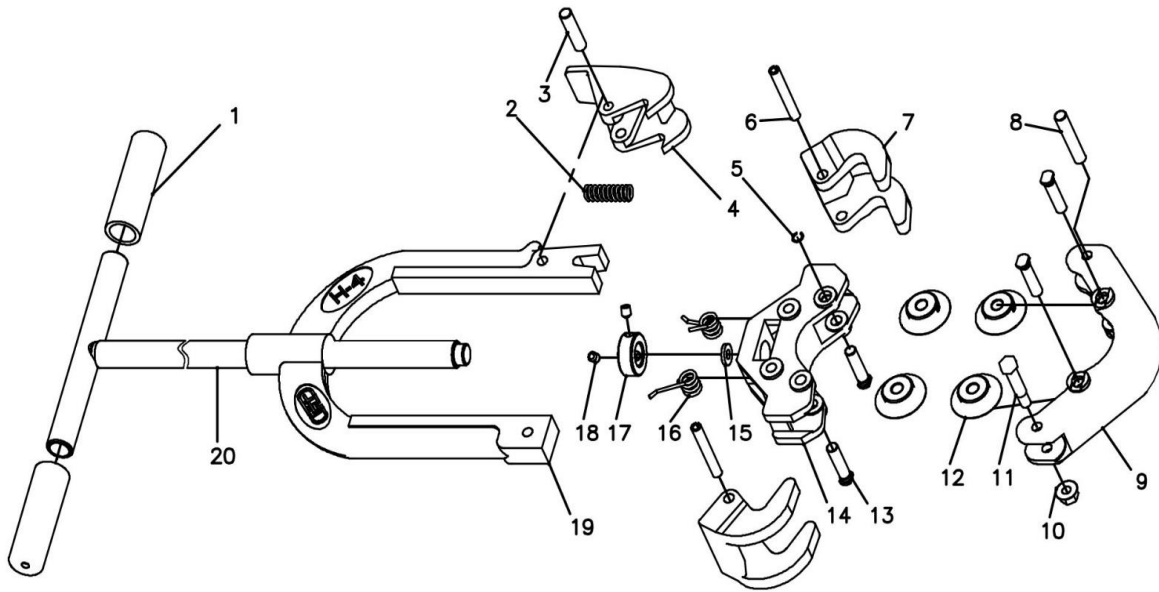

S/N	Ref. No.	品名	Description
1	89125	把手套 ( 2 )	handle grips ( 2 )
2	89119	弹簧	latch spring
3	89123	卡爪销	latch pin
4	89115	卡爪	jaw
5	89122	刀轮销定位卡簧 ( 4 )	ring ( 4 )
6	03027	弹性圆柱销8*55 ( 2 )	guide pin 8*55 ( 2 )
7	89116	卡管爪 ( 2 )	guide ( 2 )
8	89124	固定滚轮刀架销	lower yoke pin
9	89112	固定滚轮刀架	lower yoke
10	01879	锁紧螺母M8	locknut M8
11	01230	六角绞制孔用螺栓 M8*45	hinge bolt M8*45
12	89126	4"割刀片 ( 4 )	cutter wheel ( 4 )
13	89121	刀轮销 ( 4 )	wheel pin ( 4 )
14	89113	移动滚轮刀架	crosshead
15	89120	垫	thrust washer
16	89118	扭簧	guide spring
17	89117	螺母	crosshead locknut
18	01610	开槽锥端紧定螺钉 M8*8 ( 2 )	set screws M8*8 ( 2 )
19	89111	割刀架	upper yoke
20	89114	手柄焊接件	screw handle

