




HL-12R 中英文爆炸图 (HL-12R spare parts list)

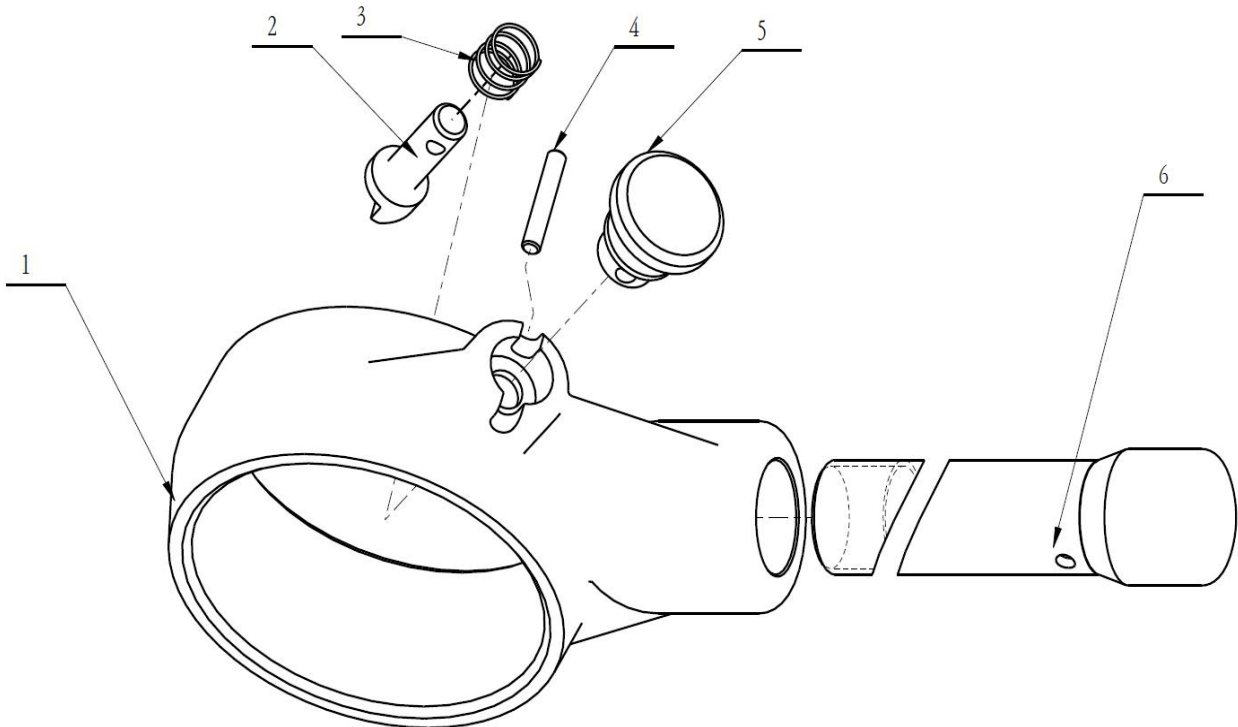

S/N	Ref.No.	品名	Description
1	40801007	棘轮体	Ratchet body
2	40402048	止动销	Pawl
3	40501024	弹簧	Spring
4	40402047	销	Roll pin
5	40402049	换向环	Knob
6	30109051	手柄	Handle
	30112038	棘轮壳总成 (不带手柄)	Ratchet Assembly (including 1.2.3.4.5)
	30111022	1/2" 铰板体组件 (BSPT)	Die head 1/2" (w/ Alloy BSPT dies)
	30111023	3/4" 铰板体组件 (BSPT)	Die head 3/4" (w/ Alloy BSPT dies)
	30111024	1" 铰板体组件 (BSPT)	Die head 1" (w/ Alloy BSPT dies)
	30111025	1 1/4" 铰板体组件 (BSPT)	Die head 1 1/4" (w/ Alloy BSPT dies)
	30111026	1 1/2" 铰板体组件 (BSPT)	Die head 1 1/2" (w/ Alloy BSPT dies)
	30111027	2" 铰板体组件 (BSPT)	Die head 2" (w/ Alloy BSPT dies)
	30111010	1/2" 铰板体组件 (NPT)	Die head 1/2" (w/ Alloy NPT dies)
	30111011	3/4" 铰板体组件 (NPT)	Die head 3/4" (w/ Alloy NPT dies)
	30111012	1" 铰板体组件 (NPT)	Die head 1" (w/ Alloy NPT dies)
	30111013	1 1/4" 铰板体组件 (NPT)	Die head 1 1/4" (w/ Alloy NPT dies)
	30111014	1 1/2" 铰板体组件 (NPT)	Die head 1 1/2" (w/ Alloy NPT dies)
	30111015	2" 铰板体组件 (NPT)	Die head 2" (w/ Alloy NPT dies)

