

ILLUSTRATED PARTS LIST


零部件分解图

KUBOTA

MODEL D1105-E2B-RSYH-1
型号

DIESEL ENGINE

柴油发动机

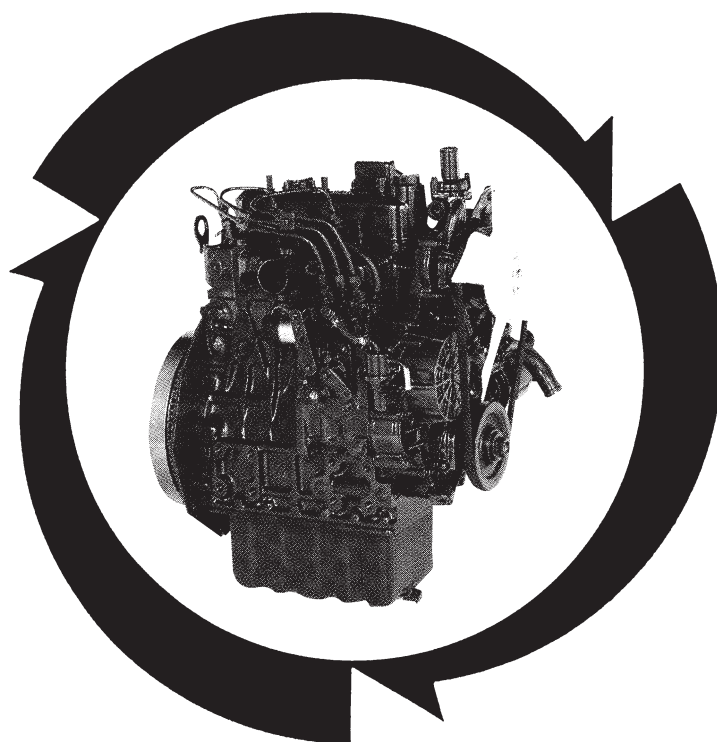

Kubota

97898-75880
JUL. 2008
7月

NOTICE

注意事项

This Parts List is for the following purposes.

使用本零件分解图时，请注意以下事项：

1. When ordering parts, check with this Parts List to confirm the part number and the name of parts.
订购零件时，请使用本分解图检查确认零件的数量和名称。
2. When making repairs, refer to the illustrations in this Parts List.
需要修理时，请参照本分解图中的插图。
3. This Parts List is subject to change without notice.
本分解图如有更改，恕不另行通知。


MODEL 型号	CODE No. 编号
D1105-E2B-RSYH-1	1G324-14000

使用说明 INSTRUCTION

①
0102 活塞/曲柄轴
PISTON/CRANKSHAFT

②
[B]

⑩ → S.No. ; A: ≤15000, B: 14000 to 15000

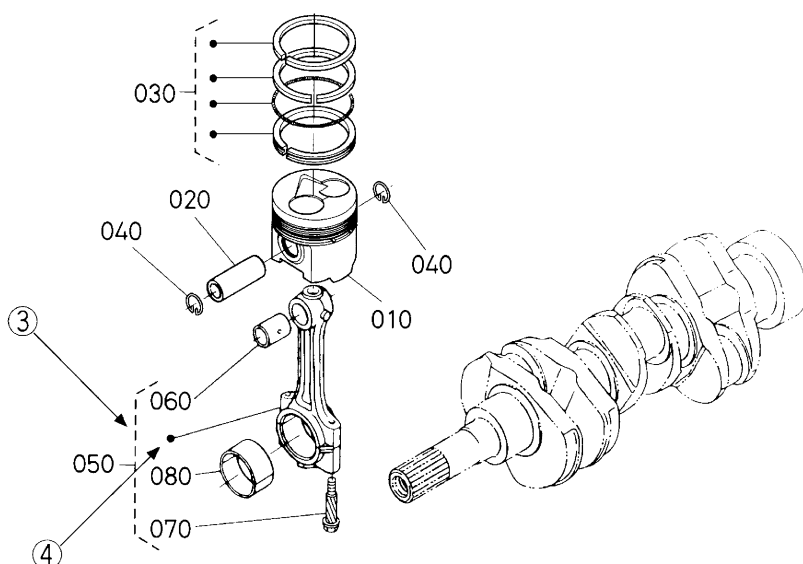

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量 QTY/S.No.		互换性 I.C.	备注 REMARKS
				A	B		
010	15800-0000-0	活塞	PISTON	1 <=15000	1 <=15000	↔	[例-1] [Example-1]
010	15800-0000-2	活塞	PISTON	1 >=15001	1 >=15001	↔	
020	15800-1000-0	活塞销	PIN,PISTON	1 <=15000	1 <=15000	↔	[例-2] [Example-2]
020	15800-1000-2	活塞销	PIN,PISTON	1 >=15001	1 >=15001	↔	
030	15800-2000-0	活塞环组件	ASSY PISTON RING	1 <=15000	1 <=15000	↔	[例-3] [Example-3]
030	15830-2000-0	活塞环组件	ASSY PISTON RING	1 >=15001	1 >=15001	↔	

A:XXXX, B:XXXX

- ① 图号代表与每一组名称相对应的数字。
- ② 说明书指出了姊妹样式的型号和目标。在说明中提到了在这本书中介绍姊妹样式的页数。
(介绍姊妹样式)
- ③ 组件供一个装配用的组件可以通过一组虚线识别。
- ④ 点 (point)表示部件不单独出售。
装配 (参考数 050) 包括需要订购的部件。
- ⑤ 序号 (REF.No.)参考数字是指在图解说明中特定的部件由特定的数字代表。在图解中一个部件的代号可以通过参考
部件目录上的相同的参考数字而识别出来。
- ⑥ 型号名称基本型号的名称在这一栏目中指出。其它可适用的型号在“备注”栏目 ⑨ 中显示。
- ⑦ 系列号 (S.No.)表示一组系列的编号, 在编号中运用了设计上的变化。

发动机序列号

7 J 0001
7 K A001

后 4 位为数字或字母 (A ~ Z) 与数字 (从 0001 到最大 Z999) 的组合。

第 5 位 ... 字母 (制造月份)。

月份	1	2	3	4	5	6	7	8	9	10	11	12
	A,B	C,D	E,F	G,H	J,K	L,M	N,P	Q,R	S,T	U,V	W,X	Y,Z

第 6 位 ... 数字或字母 (制造年份)。

年份	1998	1999	2000	01	02	03	04	05	06	07	08	09	10	11
	W	X	Y	1	2	3	4	5	6	7	8	9	A	B

- ⑧ 互换性表示由于设计上的变化部件的可互换性。
例 -1 ← 表示一个新部件可以替换一个老部件, 而不是相反。
15800-0000-0 可以应用于第一编号组至 15000。
15800-0000-2 可以应用在第一编号组及以上。
例 -2 ≠ 表示新老部件之间不可以替换。
15800-1000-0 可以应用与第一编号组至 15000。
15800-1000-2 可以用在 15001 及以上。
例 -3 ↔ 表示新老部件之间都可以替换。
15800-2000-0 和 15830-2000-0 都可以应用在第一组编号及以上。
- ⑨ 备注 1在此栏目中, 输入其它可适用的型号名称、尺寸以及其它特殊项目。
下列符号和缩写在本书中通篇使用。
29 * 12.00-15 轮胎尺寸
sq.m m² sq.mm mm²
cu.m m³ cu.mm mm³
D 直径 L 长度
- ⑩ 备注 2下列表示方法用于对各组的注释。
机器的系列编号如下所示。
< = 15000 系列编号小于 15000。
> = 15001 系列编号大于 15001。
14000 至 15000 系列编号为 14000 至 15000 之间
对某些型号, 上述表示方法也可用于备注 1 ⑨。

- ① Fig. No. Represents No. corresponding to each group name.
- ② Specifications The types and destinations of sister models are indicated. These indications are given to tell their relevant pages in this book.
(for sister models)
- ③ Components The components of an assembly are identified by a bracket of dotted lines.
- ④ Point Indicates that the parts is not sold independently.
The assembly (Ref.No.050) containing the part needs to be ordered.
- ⑤ REF. No. Reference numbers are assigned to parts in the illustration.The code number of a part in the illustration can be identified by referring to the same reference number in the parts list.
- ⑥ Model name The name of the basic model is indicated in this column. Other applicable models are indicated on the “REMARKS” column ⑨.
- ⑦ S. No. Indicates a group of serial numbers to which a design change is applied.
(serial No.)

Engine Serial No.

7 J 0001

7 K A001

Lower 4 digits in Numerals or Alphabetical letter (A to Z) and Numerals (start 0001 to max Z999).

5th digit Alphabetical letter (Month of manufacture).

Month	1	2	3	4	5	6	7	8	9	10	11	12
	A,B	C,D	E,F	G,H	J,K	L,M	N,P	Q,R	S,T	U,V	W,X	Y,Z

6th digit Numerals or Alphabetical letter (Year of manufacture).

Year	1998	1999	2000	01	02	03	04	05	06	07	08	09	10	11
	W	X	Y	1	2	3	4	5	6	7	8	9	A	B

- ⑧ I. C. Indicates the interchangeability of parts due to design change.
(interchangeability)

Example-1 ← indicates that a new part can replace an old part, but not vice versa.
15800-0000-0 is applicable to the first serial number to S. No. 15000.
15800-0000-2 is applicable to the first serial number and above.
- Example-2 ≠ indicates that the new and old parts are not interchangeable.
15800-1000-0 is applicable to the first serial number to S. No. 15000.
15800-1000-2 is applicable to S. No. 15001 and above.
- Example-3 ↔ indicates that the new and old parts are interchangeable. Both 15800-2000-0 and 15830-2000-0 are applicable to the first serial number and above.
- ⑨ REMARKS 1 In this column, enter other applicable model names, dimensions and other special items.
- ⑩ REMARKS 2 The following expressions are used in NOTE for each group.
Machines' serial numbers are indicated as follows.
<=15000 Serial number below 15000.
>=15001 Serial number above 15001.
14000 to 15000 Serial number 14000 to 15000.
For some models, the above expressions may also be used REMARKS 1 ⑨.

目 录

[D1105-E2B-RSYH-1]

0001	曲轴箱	1
0002	机油盘	2
0003	油缸头	3
0004	齿轮箱	4
0005	顶盖	5
0006	机油滤清器	6
0007	油量计	7
0100	主轴承箱	8
0101	凸轮轴和中间齿轮轴	9
0102	活塞和曲柄轴	10
0103	飞轮	12
0105	燃油凸轮轴和调速器轴	13
0180	怠速限制装置	14
0201	制动电磁阀	15
0202	喷射泵	16
0204	调速器	17
0205	调速板	18
0206	喷嘴座和电热塞	19
0207	喷嘴座（零件）	20
0300	燃油滤清器	21
0302	燃油泵（电磁式）	22
0305	盖	23
0306	油水分离器（零件）	24
0402	交流发电机和皮带轮	25
0403	交流发电机（零件）	26
0404	起动机	27
0405	起动机（零件）	28
0406	机油开关和塞	29
0500	进出水法兰和节温器	30
0501	水泵	31
0503	水管	32
0504	风扇	33
0600	气门和摇臂	34
0601	进气歧管	35
0602	排气歧管	36
0800	电热灯和定时器	37
0808	附件和维修零件	38
0809	标签、使用说明书	39
090001	上部衬垫套件 [选购件]	40
090002	下部衬垫套件 [选购件]	41
■	零件号索引	42


CONTENTS

[D1105-E2B-RSYH-1]


0001	CRANKCASE	1
0002	OIL PAN	2
0003	CYLINDER HEAD	3
0004	GEAR CASE	4
0005	HEAD COVER	5
0006	OIL FILTER	6
0007	DIPSTICK AND GUIDE	7
0100	MAIN BEARING CASE	8
0101	CAMSHAFT AND IDLE GEAR SHAFT	9
0102	PISTON AND CRANKSHAFT	10
0103	FLYWHEEL	12
0105	FUEL CAMSHAFT AND GOVERNOR SHAFT	13
0180	IDLE APPARATUS	14
0201	STOP SOLENOID	15
0202	INJECTION PUMP	16
0204	GOVERNOR	17
0205	SPEED CONTROL PLATE	18
0206	NOZZLE HOLDER AND GLOW PLUG	19
0207	NOZZLE HOLDER (COMPONENT PARTS)	20
0300	FUEL FILTER	21
0302	FUEL PUMP (ELECTRICAL)	22
0305	COVER	23
0306	SEDIMENTER (COMPONENT PARTS)	24
0402	ALTERNATOR AND PULLEY	25
0403	ALTERNATOR (COMPONENT PARTS)	26
0404	STARTER	27
0405	STARTER (COMPONENT PARTS)	28
0406	OIL SWITCH AND PLUG	29
0500	WATER FLANGE AND THERMOSTAT	30
0501	WATER PUMP	31
0503	WATER PIPE	32
0504	FAN	33
0600	VALVE AND ROCKER ARM	34
0601	INLET MANIFOLD	35
0602	EXHAUST MANIFOLD	36
0800	GLOW LAMP AND TIMER	37
0808	ACCESSORIES AND SERVICE PARTS	38
0809	LABEL AND OPERATOR'S MANUAL	39
090001	UPPER GASKET KIT [OPTION]	40
090002	LOWER GASKET KIT [OPTION]	41
■	NUMERICAL INDEX	42

[illegible]

 ↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

[illegible]

 汽缸头




A:D1105-E2B-RSYH-1

[illegible]


3

000400 齿轮箱 GEAR CASE

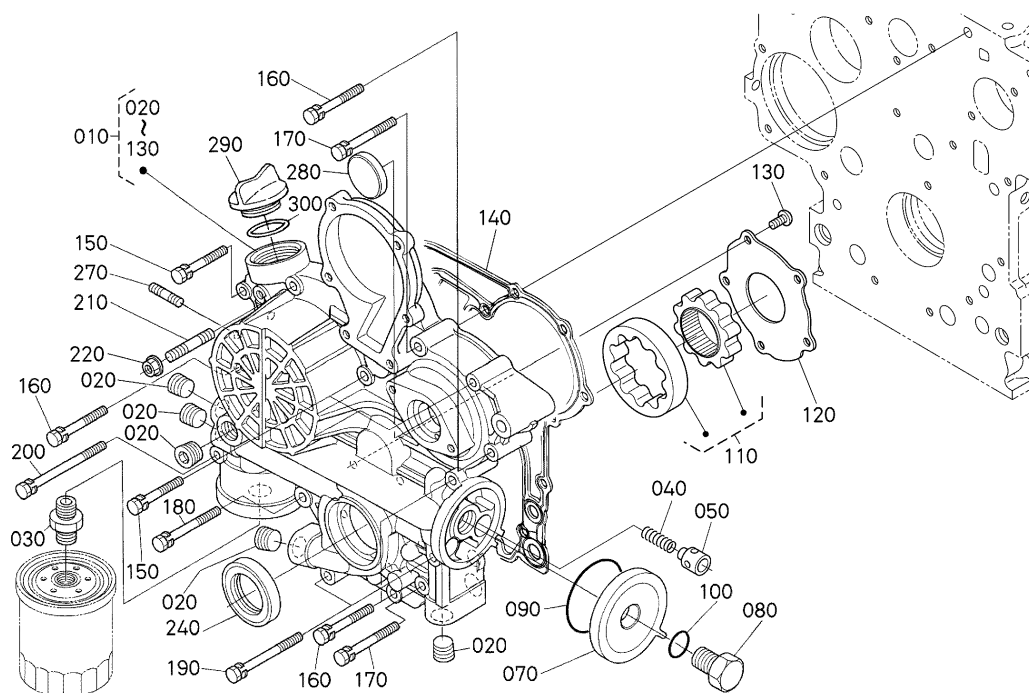

1J987-008-10

OLD

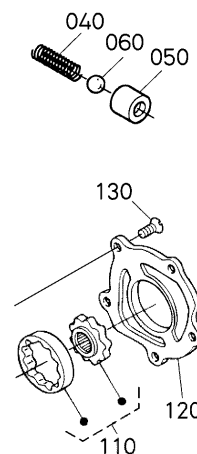

1J987-800-10


A:D1105-E2B-RSYH-1

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	16239-0402-2	齿轮箱组件	COMP.CASE,GEAR	1 <=1DPZ999	#	
010	16239-0402-4	齿轮箱组件	COMP.CASE,GEAR	1 >=1DQ0001	←	#
020	16241-9602-0	塞	PLUG	5		
030	15241-3229-0	管接头	JOINT,PIPE	1		
040	16241-3695-0	弹簧	SPRING	1 <=1DHZ999	#	
040	1J050-3695-0	弹簧	SPRING	1 >=1DJ0001	≠	#
050	16241-3693-0	气阀座	SEAT,VALVE	1 <=1DHZ999	#	
050	1J050-3693-0	溢流阀	VALVE(RELIEF)	1 >=1DJ0001	≠	#
060	07715-00201	钢珠	BALL	1 <=1DHZ999	#	
070	16259-3288-2	盖	COVER	1		
080	16259-3290-0	螺栓	BOLT	1		
090	04814-50600	O 型密封圈	O RING	1		
100	04814-00150	O 型密封圈	O RING	1		
110	16241-3507-0	油泵转子组件	ROTOR,ASSY(OIL PUMP)	1 <=1EFZ999	#	
110	1J050-3507-0	油泵转子组件	ROTOR,ASSY(OIL PUMP)	1 >=1EG0001	≠	#
120	16259-3513-2	油泵盖	COVER,OIL PUMP	1 <=1EFZ999	#	
120	16219-3513-0	油泵盖	COVER,OIL PUMP	1 >=1EG0001	≠	#
130	16241-9312-0	CSK-HD 螺钉	SCREW,CSK-HD	5 <=1EFZ999	#	
130	03017-50614	球面圆柱头小螺丝	SCREW,BINDING(PHILLI)	5 >=1EG0001	≠	#
140	16264-0413-2	齿轮箱衬垫	GASKET,GEAR CASE	1		
150	01023-50645	螺栓	BOLT,SEMS	3		
160	01023-50650	螺栓	BOLT,SEMS	4	#	
170	01023-50655	螺栓	BOLT,SEMS	2		
180	15841-9104-0	螺栓	BOLT	1		
190	16241-9104-0	螺栓	BOLT	2		
200	16259-9104-0	螺栓	BOLT	1		
210	16245-9153-0	双头螺栓	STUD	1		
220	02751-50060	法兰螺母	NUT,FLANGE	1		
230	----	无	BLANK	-		
240	16259-0421-0	油封	SEAL,OIL	1		

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件


[illegible]

 
顶盖



A:D1105-E2B-RSYH-1

 $\leftrightarrow$ 新旧部件可替换; $\neq$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件


[illegible]

 [illegible]

$\leftrightarrow$ 可互换; $\nrightarrow$ 不可互换; $\leftarrow$ 以新换旧; $\rightarrow$ 以旧换新

010000 主轴承箱


MAIN BEARING CASE

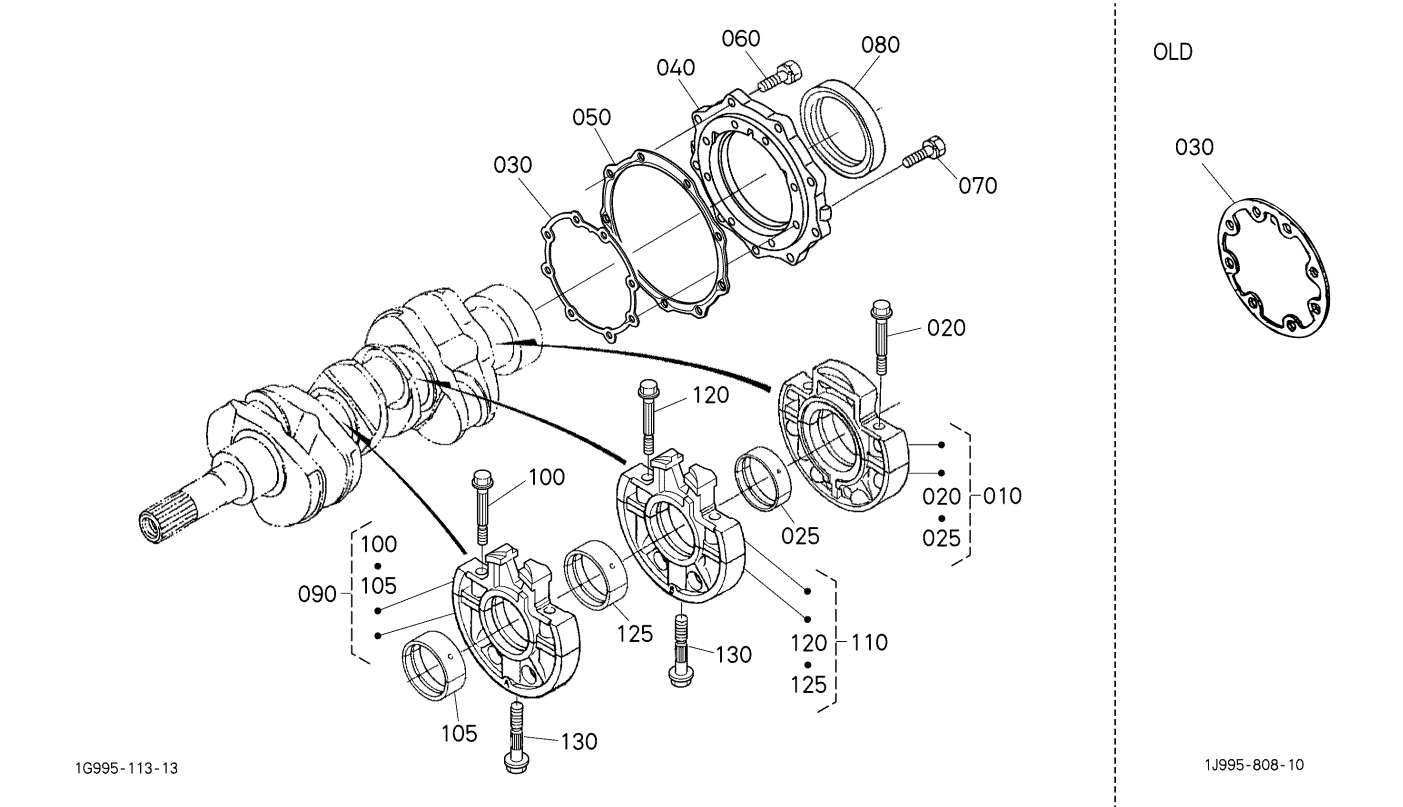

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	16292-0709-5	轮毂轴承箱组件	CASE,BRG,ASSY(WHEEL)	1		
020	16241-0454-0	轴承箱螺栓	BOLT(CASE,BRG)	2		
025	16292-2349-4	曲柄轴金属件	METAL,CRANKSHAFT	1		#标准 套
025	16292-2386-4	曲柄轴金属件	METAL,CRANKSHAFT	1		-0. 20mm 套
025	16292-2387-4	曲柄轴金属件	METAL,CRANKSHAFT	1		-0. 40mm 套
030	16264-0436-0	轴承箱衬垫	GASKET,BRG,CASE	1		#
030	1G679-0436-0	轴承箱衬垫	GASKET,BRG,CASE	1	←	#
030	1J095-0436-0	衬垫	GASKET,BRG,CASE	1	←	#
040	16241-0481-5	轴承箱盖	COVER(CASE,BRG)	1		
050	16264-0482-2	箱盖衬垫	GASKET	1		
060	01023-50620	螺栓	BOLT,SEMS	9		#
060	1G679-9102-0	螺栓	BOLT	9	←	#
070	01023-50625	螺栓	BOLT,SEMS	8		#
070	1G679-9101-0	螺栓	BOLT	8	←	#
080	16285-0446-0	油封	SEAL,OIL	1		
090	16261-0704-5	主轴承箱组件	CASE,BRG,ASSY(MAIN)	1		#
090	16261-0704-7	曲轴瓦座组件	ASSY BRG.CASE,MAIN	1	←	#
100	16241-0454-0	轴承箱螺栓	BOLT(CASE,BRG)	2		
105	16241-2348-0	曲柄轴金属件	METAL(CRANKSHAFT)	1		#标准 套
105	16292-2348-3	曲柄轴金属件	METAL,CRANKSHAFT	1	←	#标准 套
105	16241-2393-0	曲柄轴金属件	METAL(CRANKSHAFT)	1		#-0. 20mm 套
105	16292-2393-3	曲柄轴金属件	METAL,CRANKSHAFT	1	←	#-0. 20mm 套
105	16241-2394-0	曲柄轴金属件	METAL(CRANKSHAFT)	1		#-0. 40mm 套
105	16292-2394-3	曲柄轴金属件	METAL,CRANKSHAFT	1	←	#-0. 40mm 套
110	16261-0705-5	主轴承箱组件	CASE,BRG,ASSY(MAIN)	1		#
110	16261-0705-7	曲轴瓦座组件	ASSY BRG.CASE,MAIN	1	←	#
120	16241-0454-0	轴承箱螺栓	BOLT(CASE,BRG)	2		
125	16241-2348-0	曲柄轴金属件	METAL(CRANKSHAFT)	1		#标准 套
125	16292-2348-3	曲柄轴金属件	METAL,CRANKSHAFT	1	←	#标准 套

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件


主轴承箱

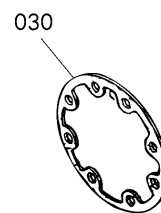

1J995-808-10

[illegible]

 010100 凸轮轴和中间齿轮轴
CAMSHAFT AND ID




1G347-841-11

A:D1105-E2B-RSYH-1

$\leftrightarrow$ 新旧部件可替换; $\neq$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

010200 活塞和曲柄轴 PISTON AND CRANKSHAFT

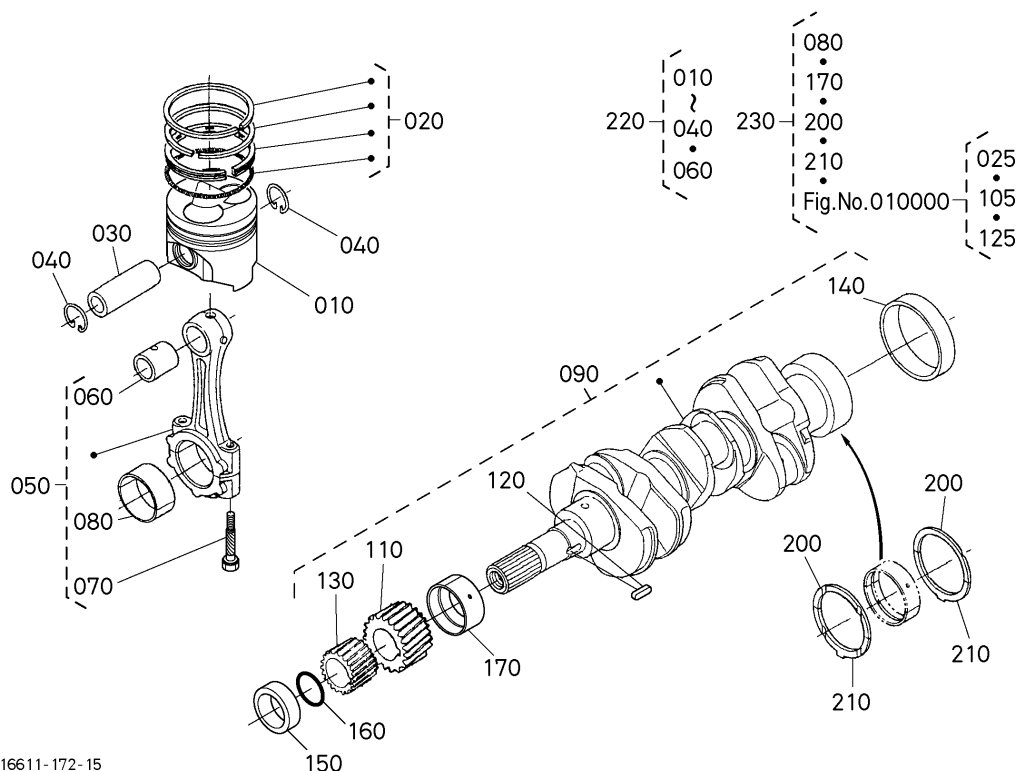

16611-172-15


A:D1105-E2B-RSYH-1

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	16060-2111-4	活塞	PISTON	3		#标准
010	16060-2191-4	活塞	PISTON	3		+0.50mm
020	16292-2105-0	活塞环组件	RING,PISTON,ASSY	3		#标准
020	16292-2109-0	活塞环组件	RING,PISTON,ASSY	3		+0.50mm
030	16241-2131-0	活塞销	PIN,PISTON	3		
040	16241-2133-0	活塞销挡圈	CIRCLIP(PIN,PISTON)	6		
050	1G700-2201-0	连杆组件	ROD,ASSY(CONNECTING)	3 <=ATZ999		#
050	16292-2201-6	连杆组件	ROD,CONNECTING,ASSY	3 >=AU0001	←	#
060	1G700-2198-0	活塞销衬套	BUSHING(PIN,PISTON)	3		
070	16241-2214-2	连杆螺栓	BOLT(CONNECTING ROD)	6		
080	16241-2231-0	曲柄销金属件	METAL(PIN,CRANK)	3 <=ATZ999		#标准 套
080	16292-2231-0	连杆瓦	METAL(PIN,CRANK)	3 >=AU0001	←	#标准 套
080	16241-2297-0	曲柄销金属件	METAL(PIN,CRANK)	3 <=ATZ999		#-0.20mm 套
080	16292-2297-2	连杆瓦	METAL,CRANKPIN	3 >=AU0001	←	#-0.20mm 套
080	16241-2298-0	曲柄销金属件	METAL(PIN,CRANK)	3 <=ATZ999		#-0.40mm 套
080	16292-2298-2	连杆瓦	METAL,CRANKPIN	3 >=AU0001	←	#-0.40mm 套
090	16265-2301-3	曲柄轴组件	CRANKSHAFT,COMP	1 <=9VZ999		#
090	1G065-2301-2	曲轴组件	CRANKSHAFT,COMP	1 >=9W0001	←	#
090	1G065-2301-3	曲轴组件	COMP.CRANKSHAFT	1 >=1CW0001	≠	#
100	—	无	BLANK	—		
110	16241-2411-0	曲轴齿轮	GEAR(CRANK)	1 <=9BZ999		
110	1A055-2411-0	齿轮. 曲轴	GEAR(CRANKSHAFT)	1 >=9C0001	←	
120	16271-9523-0	键	KEY	1		
130	16241-3563-0	油泵传动齿轮	GEAR(OIL PUMP DRIVE)	1 <=1CVZ999		#
130	1J050-3563-0	油泵传动齿轮	GEAR,OIL PUMP DRIVE	1 >=1CW0001	≠	#
140	16241-2328-0	曲柄轴套筒	SLEEVE,CRANKSHAFT	1		
150	16241-2325-0	曲柄轴环	COLLAR,CRANKSHAFT	1 <=1CVZ999		#
150	1J050-2325-0	曲柄轴环	COLLAR,CRANKSHAFT	1 >=1CW0001	≠	#
160	04814-10280	O型密封圈	RING	1		

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件


010200 活塞和曲柄轴

PISTON AND CRANKSHAFT

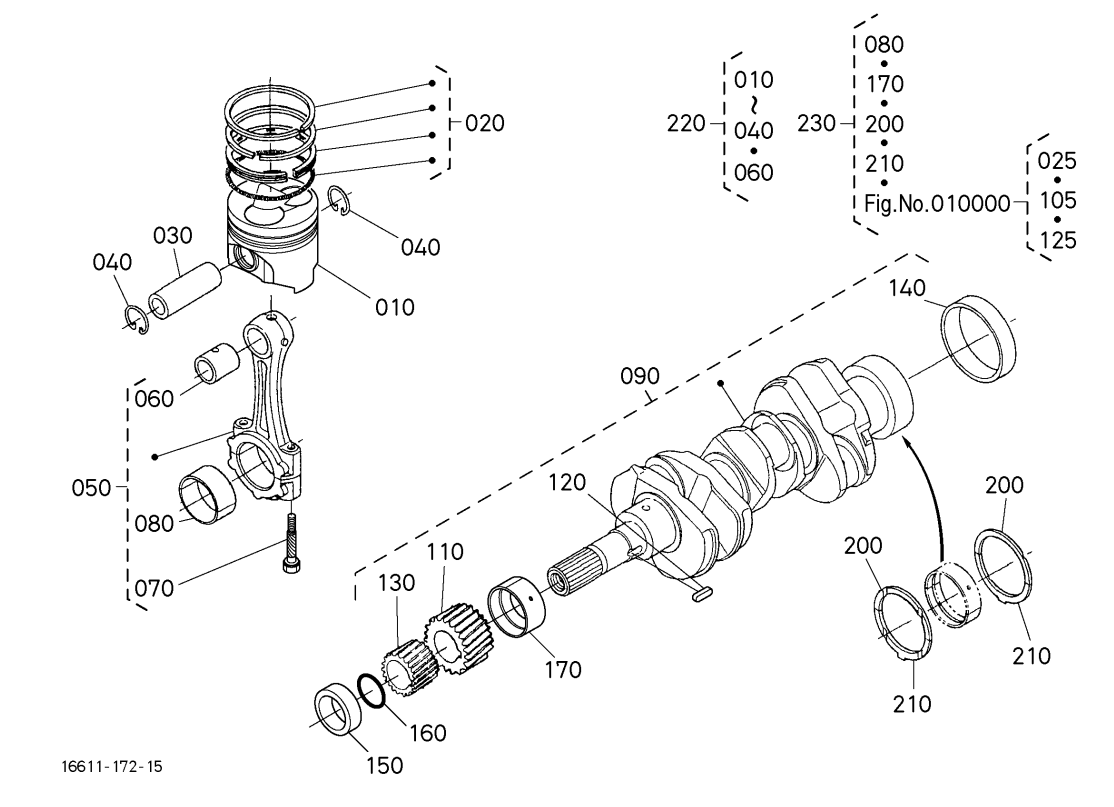


A:D1105-E2B-RSYH-1						
序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
170	16241-2347-0	曲柄轴金属件	METAL(CRANKSHAFT)	1 <=ATZ999		#标准
170	16292-2347-3	曲柄轴金属件	METAL(CRANKSHAFT)	1 >=AU0001	←	#标准
170	16241-2391-0	曲柄轴金属件	METAL(CRANKSHAFT)	1 <=ATZ999		#-0. 20mm
170	16292-2391-3	曲柄轴金属件	METAL(CRANKSHAFT)	1 >=AU0001	←	#-0. 20mm
170	16241-2392-0	曲柄轴金属件	METAL(CRANKSHAFT)	1 <=ATZ999		#-0. 40mm
170	16292-2392-3	曲柄轴金属件	METAL(CRANKSHAFT)	1 >=AU0001	←	#-0. 40mm
180	----	无	BLANK	-		
190	----	无	BLANK	-		
200	15521-2353-0	侧轴衬	METAL SIDE	2 <=ATZ999		#标准
200	15521-2353-3	金属侧	METAL,SIDE	2 >=AU0001	←	#标准
200	15521-2395-0	侧轴衬	METAL SIDE	2 <=ATZ999		#+0. 20mm
200	15521-2395-3	金属侧	METAL,SIDE	2 >=AU0001	←	#+0. 20mm
200	15521-2396-0	侧轴衬	METAL SIDE	2 <=ATZ999		#+0. 40mm
200	15521-2396-3	金属侧	METAL,SIDE	2 >=AU0001	←	#+0. 40mm
210	19202-2354-0	轴衬	METAL SIDE	2 <=ATZ999		#标准
210	19202-2354-3	金属侧	METAL,SIDE	2 >=AU0001	←	#标准
210	19202-2397-0	侧轴衬	METAL SIDE	2 <=ATZ999		#+0. 20mm
210	19202-2397-3	金属侧	METAL,SIDE	2 >=AU0001	←	#+0. 20mm
210	19202-2398-0	侧轴衬	METAL SIDE	2 <=ATZ999		#+0. 40mm
210	19202-2398-3	金属侧	METAL,SIDE	2 >=AU0001	←	#+0. 40mm
220	1G069-2177-5	活塞环套件	PISTON,KIT(STD)	3		#标准
220	1G069-2179-5	活塞环套件	PISTON,KIT(050)	3		+0. 50mm
230	1G069-2375-5	发动机金属套件	METAL,KIT(ENGINE)	1 <=ATZ999		#标准
230	1G995-2375-5	发动机轴瓦套件	METAL,KIT(ENGINE)	1 >=AU0001	←	#标准
230	1G069-2376-6	发动机金属套件	METAL,KIT(ENGINE)	1 <=ATZ999		#-0. 20mm/+0. 20mm
230	1G993-2376-5	发动机轴瓦套件	METAL,KIT(ENGINE)	1 >=AU0001	←	#-0. 20mm/+0. 20mm
230	1G069-2377-6	发动机金属套件	METAL,KIT(ENGINE)	1 <=ATZ999		#-0. 40mm/+0. 40mm
230	1G993-2377-5	发动机轴瓦套件	METAL,KIT(ENGINE)	1 >=AU0001	←	#-0. 40mm/+0. 40mm

 ↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

[illegible]


12

010500 燃油凸轮轴和调速器轴 FUEL CAMSHAFT AND GOVERNOR SHAFT

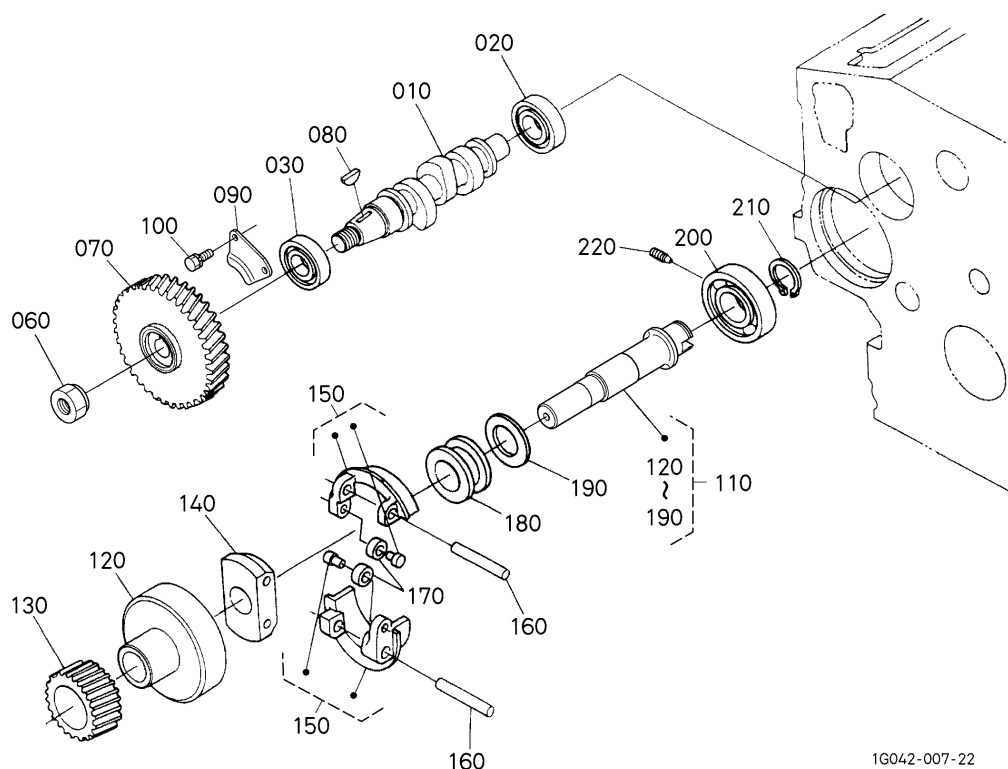

1G042-007-22

OLD

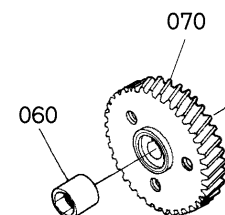

1G995-842-12

A:D1105-E2B-RSYH-1

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	16020-1617-0	燃油凸轮轴	CAMSHAFT(FUEL)	1		
020	16261-9730-0	球轴承	BRG,BALL	1		
030	16261-9731-0	球轴承	BEARING,BALL	1		
040	----	无	BLANK	-		
050	----	无	BLANK	-		
060	16241-9233-0	螺母	NUT,CAP	1 <=1CVZ999		#
060	1J050-9233-0	螺母	NUT	1 >=1CW0001	←	#
070	16272-5115-0	喷射泵齿轮	GEAR,INJECTION PUMP	1 <=9HZ999		
070	1G677-5115-0	喷射泵齿轮	GEAR,INJECTION PUMP	1 >=9J0001	←	
080	16241-9523-0	半月键	KEY,WOODRUFF	1		
090	16241-1632-0	燃油凸轮轴挡块	STOPPER(FUEL C/SHAFT)	1		
100	01023-50616	螺栓	BOLT,SEMS	2		
110	16265-5501-3	调速器轴组件	ASSY SHAFT,GOVERNOR	1 <=ADZ999		#请订购编号为 No. 110 的新零件
110	16265-5501-9	调速器轴总成	ASSY SHAFT,GOVERNOR	1 >=AE0001	←	#
120	16241-5539-2	调速器齿轮支座	HOLDER,GOVERNOR GEAR	1		
130	16282-5532-0	调速器齿轮	GEAR,GOVERNOR	1		
140	16241-5527-0	调速器配重支座	HOLDER(GOVERNOR WEIGHT)	1		
150	16241-5506-2	调速器配重组件	COMP.WEIGHT,GOVERNOR	2 <=ADZ999		#请订购编号为 No. 150 的新零件
150	16241-5506-4	调速器配重组件	COMP.WEIGHT,GOVERNOR	2 >=AE0001	←	#
160	16241-5526-0	调速器配重轴	SHAFT(GOVERNOR WEIGHT)	2		
170	19484-5544-0	滚子	ROLLER	2		
180	16241-5545-0	调速器套筒	SLEEVE(GOVERNOR)	1		
190	16241-5546-3	止推垫圈	WASHER,THRUST	1		
200	16261-9732-0	球轴承	BRG,BALL	1		
210	16271-5541-0	调速器轴挡圈	CIRCLIP(GOVERNOR SHAFT)	1		
220	16241-5555-4	固定螺钉	SCREW,SET	1		

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件


This diagram shows an exploded view of a mechanical assembly. The main component is a large, complex metal casting with a circular flange and various mounting points. Several smaller components are shown in their relative positions, indicated by dashed lines. The components are numbered as follows:

- 010: A small cylindrical pin or plug.
- 020: A small cylindrical pin or plug.
- 030: A small cylindrical pin or plug.
- 040: A small cylindrical pin or plug.
- 050: A small cylindrical pin or plug.
- 060: A small cylindrical pin or plug.
- 070: A small cylindrical pin or plug.
- 080: A small cylindrical pin or plug.
- 090: A small cylindrical pin or plug.
- 100: A small cylindrical pin or plug.
- 110: A small cylindrical pin or plug.
- 120: A long, thin cylindrical pin or plug.
- 130: A small cylindrical pin or plug.
- 140: A small cylindrical pin or plug.

1G062-005-31

[illegible]

020100 制动电磁阀
STOP SOLENOID

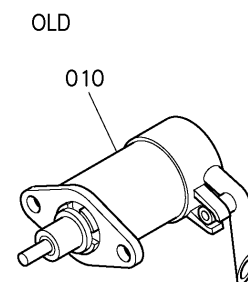

1J995-805-10

A:D1105-E2B-RSYH-1

[illegible]

[illegible]

[illegible]

$\leftrightarrow$ 可互换; $\neq$ 不可互换; $\leftarrow$ 以新换旧; $\rightarrow$ 以旧换新

This diagram shows an exploded view of a mechanical assembly. The components are labeled with numbers: 020, 030, 040, 050, 060, 070, 080, 090, 100, 110, 120, 130, 140, 160, 180, 190, 200, 210, and 220. A legend in the upper right corner defines the symbols used for the fasteners:


- A • (dot)
- 020 { (left brace)
- 120 { (left brace)
- 200 { (left brace)
- 220 { (left brace)
- 010 } (right brace)

The diagram illustrates the assembly of a central rectangular component (160) with various levers, pins, and springs. A dashed line indicates the assembly path for the lever (080) and its associated components (120, 110, 140, 200, 220, 210, 220). The final assembly is shown partially attached to a larger structure (130, 150).

16614-016-25

[illegible]


$\leftrightarrow$ 新旧部件可替换; $\neq$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

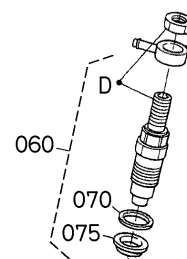020600 喷嘴座和电热塞
NOZZLE HOLDER


1J903-801-10

[illegible]

 19


020700 喷嘴座[零件]
NOZZLE HOLDER[illegible]

 20

[illegible]

21

030200 燃油泵（电磁式）
FUEL PUMP (ELECTRICAL)

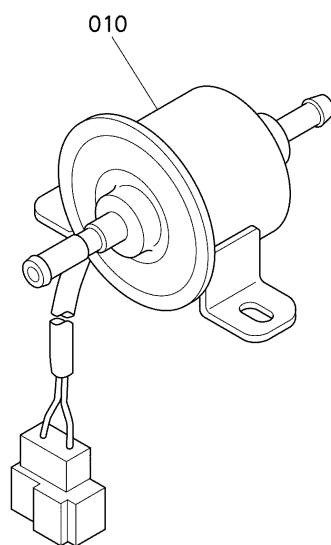


17553-014-22

A:D1105-E2B-RSYH-1


[illegible]

 $\longleftrightarrow$ 新旧部件可替换; $\neq$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

[illegible]

23

油水分离器 (零件)
SEDIMENTER (COMPONENT PARTS)

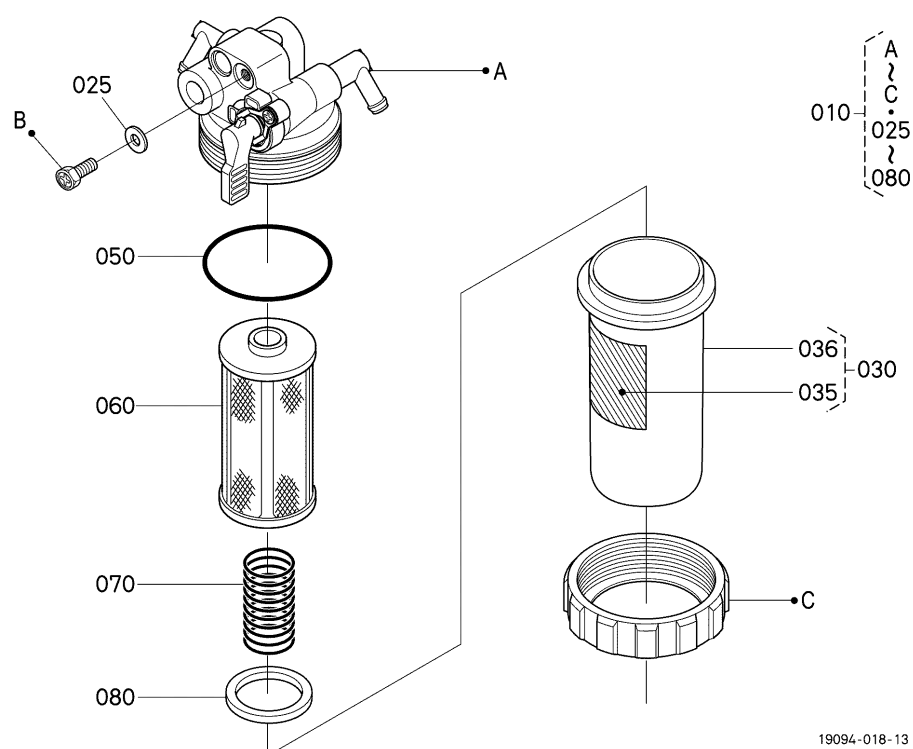


19094-018-13

A: D1105-E2B-RSYH-1

[illegible]

$\leftrightarrow$ 可互换; $\nrightarrow$ 不可互换; $\leftarrow$ 以新换旧; $\rightarrow$ 以旧换新

040200 交流发电机和皮带轮 ALTERNATOR AND PULLEY

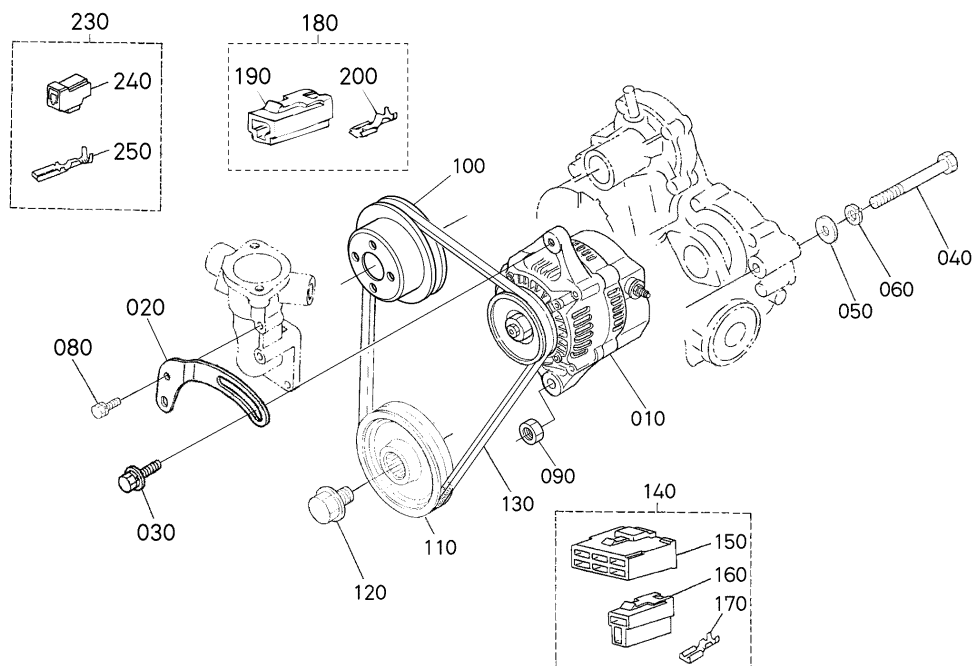

1G324-019-10


A:D1105-E2B-RSYH-1

序号 REF.No.	零件号 PART No.	零件名称	PART NAME	数量/机器序列号 Q'TY/S.No.	互换 I.C.	备注 REMARKS
				A		
010	16615-6401-2	交流发电机组件	ASSY ALTERNATOR	1		12V 60A
020	16615-6442-2	交流发电机撑条	STAY,DYNAMO	1		
030	01127-50830	螺栓	BOLT,W SEMS(LARGE WA	1		
040	01173-51085	螺栓	HEX.BOLT	1		
050	04011-50100	平垫圈	WASHER,PLAIN	1		
060	04512-50100	弹垫圈	WASHER,SPRING LOCK	1		#
070	----	无	BLANK	-		
080	01023-50616	螺栓	BOLT,SEMS	1		
090	02176-50100	螺母	HEX.NUT	1		
100	16241-7425-0	风扇皮带轮	PULLEY,FAN	1		
110	17213-7428-0	风扇驱动皮带轮	PULLEY,FAN DRIVE	1		
120	16241-9102-0	风扇驱动螺栓	BOLT(FAN DRIVE)	1		
130	16282-9701-0	V 形皮带	V-BELT	1		#37.5in
130	16282-9701-2	V 形皮带	V BELT	1	←	#37.5in
130	16282-9701-3	风扇皮带	V BELT	1	←	#37.5in
140	19883-6583-0	联轴器组件	ASSY COUPLER	1		
150	19872-6584-0	连接器	CONNECTOR	1		
160	19872-6588-0	连接器	CONNECTOR	1		
170	19237-6591-0	端子	TERMINAL	7		
180	19215-6375-0	端子	TERMINAL	1		
190	11521-6592-0	连接器	CONNECTOR	1		
200	11521-6597-0	端子	TERMINAL	1		
210	----	无	BLANK	-		
220	----	无	BLANK	-		
230	1C010-6583-0	联轴器组件	ASSY COUPLER	1		
240	1C010-6588-0	连接器	CONNECTOR	1		
250	1C010-6591-0	端子	TERMINAL	2		

↔ 新旧部件可替换; ≠ 新旧部件不可替换; ← 新部件可替换旧部件; → 旧部件可替换新部件

0403


交流发电机（零件）
ALTERNATOR（COMPONENT PARTS）

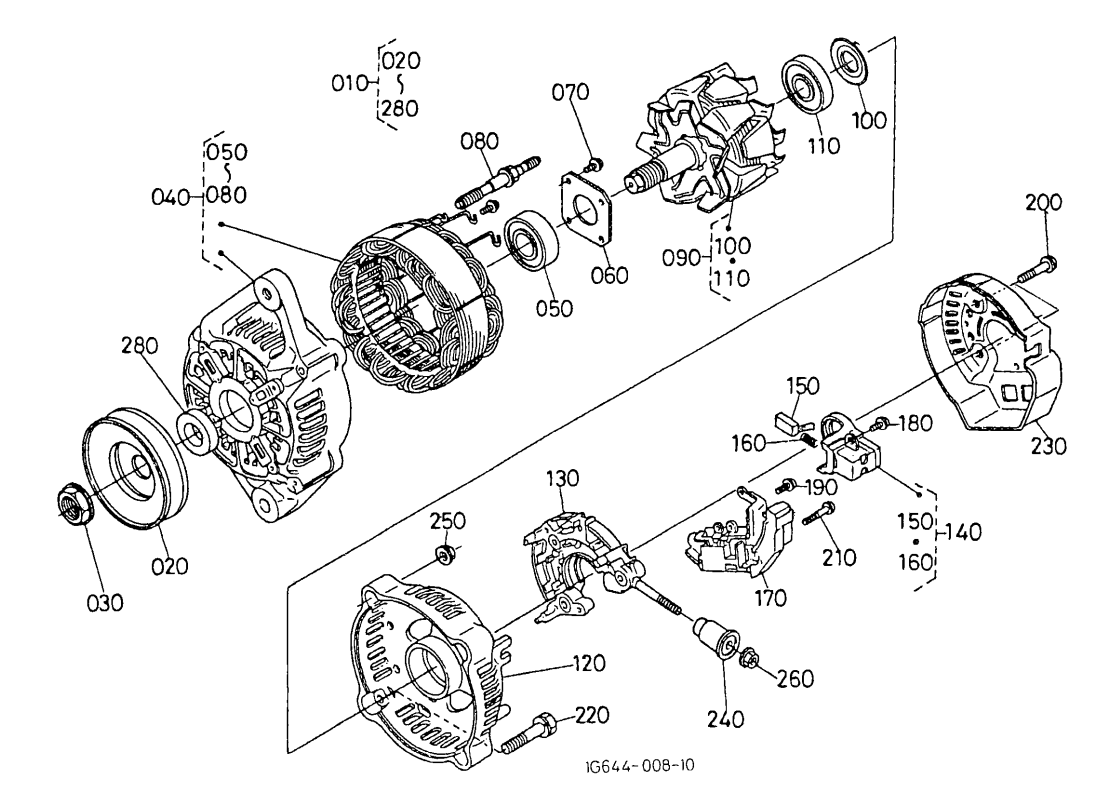


序号 REF. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY/S. No.		互 换 性 I. C.	备 注 REMARKS
				A	B		
010	16615-6401-2	交流发电机组件	ASSY ALTERNATOR	1	-		
020	15881-6411-0	发电机皮带轮	PULLEY, DYNAMO	1	-		
030	15881-9201-0	螺母	NUT	1	-		
040	TA043-7403-0	驱动端框架组件	FRAME, DRIVE END	1	-		
050	16652-6478-0	球轴承	BEARING, BALL	1	-		
060	15881-6471-0	定位板	PLATE, RETAINER	1	-		
070	15881-9301-0	半圆头螺钉	SCREW, ROUND HEAD	4	-		
080	15881-6426-0	贯穿螺栓	BOLT, THROUGH	2	-		
090	TA043-6404-0	转子	ROTOR	1	-		
100	15881-6480-0	轴承盖	COVER, BEARING	1	-		
110	16652-6477-0	球轴承	BEARING, BALL	1	-		
120	TA043-6406-0	端架	FRAME, END	1	-		
130	TA043-6485-0	支架	HOLDER	1	-		
140	16652-6431-0	电刷支架	HOLDER, BRUSH	1	-		
150	15881-6409-0	电刷	BRUSH	2	-		
160	15881-6433-0	电刷弹簧	SPRING, BRUSH	2	-		
170	16483-6460-0	调节器组件	ASSY REGULATOR	1	-		
180	15881-9303-0	半圆头螺钉	SCREW, ROUND HEAD	6	-		
190	15881-9304-0	半圆头螺钉	SCREW, ROUND HEAD	1	-		
200	15881-9104-0	螺栓	BOLT	3	-		
210	15881-9302-0	半圆头螺钉	SCREW, ROUND HEAD	2	-		
220	15881-9105-0	螺栓	BOLT	2	-		
230	17369-6423-0	端盖	COVER, END	1	-		
240	15881-6490-0	绝缘衬套	BUSH, INSULATION	1	-		
250	15881-9202-0	螺母	NUT	2	-		
260	14182-9203-0	螺母	NUT	1	-		
270	----	空白	BLANK	-	-		
280	15881-6415-0	轴环	COLLAR	1	-		

↔ 可互换； ≠ 不可互换； ← 以新换旧； → 以旧换新

 起动机

[illegible]

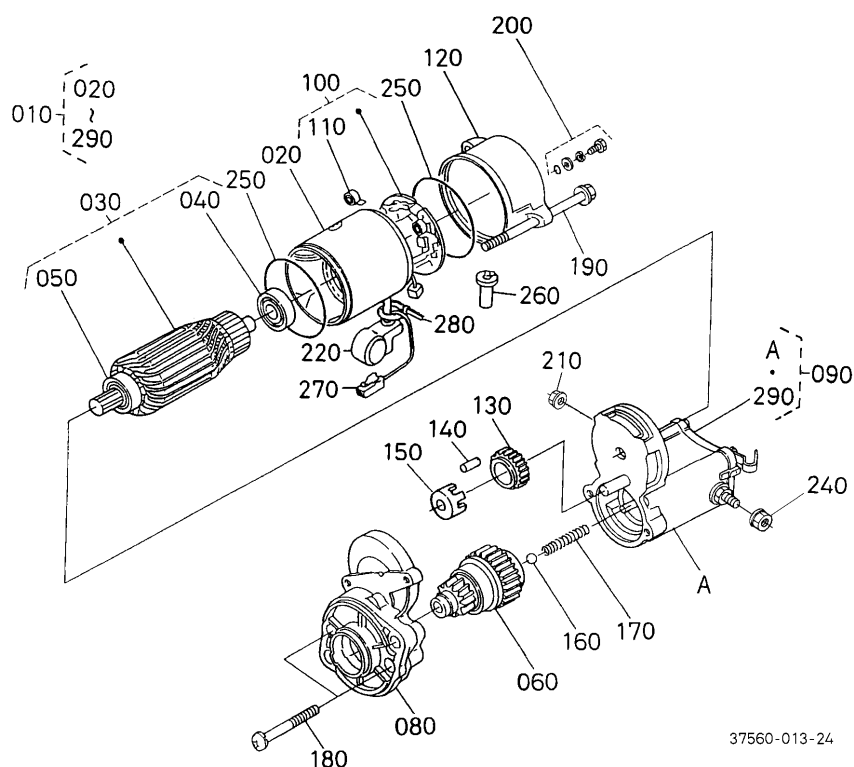


37560-013-24

A:D1105-E2B-RSYH-1

序号 REF. No.	零件号 PART No.	零件名称	PART NAME	数量 Q' TY/S. No.		互 换 性 I. C.	备 注 REMARKS
				A	B		
010	16611-6301-0	起动机组件	ASSY STARTER	1	-		
020	16661-6308-0	轭组件	ASSY YOKE	1	-		
030	11197-6307-0	电枢组件	ASSY ARMATURE	1	-		
040	11460-6353-0	轴承	BEARING	1	-		
050	11460-6350-0	轴承	BEARING	1	-		
060	16611-6304-0	超速离合器	CLUTCH, OVER RUNNING	1	-		
070	----	空白	BLANK	-	-		
080	16611-6303-0	驱动端框架	FRAME, DRIVE END	1	-		
090	16611-6302-0	电磁开关组件	ASSY SWITCH, MAGNETIC	1	-		
100	11197-6338-0	电刷支架组件	ASSY HOLDER, BRUSH	1	-		
110	15401-6339-0	电刷弹簧	SPRING, BRUSH	4	-		
120	17341-6320-0	端架	FRAME, END	1	-		
130	11460-6327-0	齿轮	GEAR	1	-		
140	19212-6310-0	滚子	ROLLER	5	-		
150	11460-6311-0	定位器	RETAINER	1	-		
160	19212-9713-0	钢珠	BALL	1	-		
170	11460-6312-0	弹簧	SPRING	1	-		
180	11460-9331-0	螺栓	BOLT	2	-		
190	11197-6332-0	螺栓	BOLT	2	-		
200	15511-6376-0	螺栓组件	ASSY BOLT	2	-		
210	16285-9201-0	六角螺母	NUT, HEXAGON	1	-		
220	16611-6345-0	盖	COVER	1	-		
230	----	空白	BLANK	-	-		
240	16611-9202-0	六角螺母	NUT, HEXAGON	1	-		
250	15511-9666-0	O 形环	O RING	2	-		
260	16285-6357-0	排液管	PIPE, DRAIN	1	-		
270	16611-6366-0	停止电磁阀线缆	CORD, STOP SOLENOID	1	-		
280	16612-6310-0	盖箍	BAND, COVER	1	-		
290	16271-9805-0	盖组件	ASSY COVER	1	-		


↔ 可互换; ≠ 不可互换; ← 以新换旧; → 以旧换新

 机油开关和塞 OIL SWITCH AND PLUG

[illegible]

29

 050000 进出水法兰和节温器
WATER FLANGE AND THERMOSTAT



1G324-818-10

A:D1105-E2B-RSYH-1


[illegible]


$\leftrightarrow$ 新旧部件可替换; $\nrightarrow$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

This diagram shows an exploded view of a fuel pump assembly. The components are labeled with numbers 010 through 090. A dashed line indicates the assembly sequence. The main body of the pump is shown in the center, with various components like the fuel inlet, outlet, and mounting flange. The fuel filter is shown to the right, and the fuel pump housing is shown to the left. The fuel pump housing is shown in two views: a top view and a side view. The fuel pump housing is shown in two views: a top view and a side view. The fuel pump housing is shown in two views: a top view and a side view.

[illegible]

 
水管


[illegible]

 [illegible]

$\leftrightarrow$ 可互换; $\nrightarrow$ 不可互换; $\leftarrow$ 以新换旧; $\rightarrow$ 以旧换新

 进气歧管

[illegible]

 
[illegible]


36




A: D1105-E2B-RSYH-1

 $\leftrightarrow$ 可互换; $\nrightarrow$ 不可互换; $\leftarrow$ 以新换旧; $\rightarrow$ 以旧换新

[illegible]

 080900 标签、使用说明书
LABEL AND OPERATING INSTRUCTIONS[illegible]

 **090001 上部衬垫套件 [选购件]
UPPER GASKET KIT [OPTIONAL]**




A:D1105-E2B-RSYH-1

[illegible]

$\Leftrightarrow$ 新旧部件可替换; $\neq$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

090002 下部衬垫套件 [选购件]
LOWER GASKET KIT

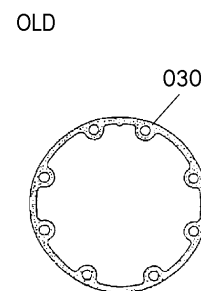

16216-010-14

1J993-807-10

A:D1105-E2B-RSYH-1

[illegible]

$\Leftrightarrow$ 新旧部件可替换; $\neq$ 新旧部件不可替换; $\leftarrow$ 新部件可替换旧部件; $\rightarrow$ 旧部件可替换新部件

零件号索引 NUMERICAL INDEX

零件号 PART No.	页码 序号 PAGE REF. No.	零件号 PART No.	页码 序号 PAGE REF. No.	零件号 PART No.	页码 序号 PAGE REF. No.	零件号 PART No.	页码 序号 PAGE REF. No.
E9151-3314-0.	4. . . 290	05712-00518.	9. . . 060	15841-5135-0.	16. . . 110	16032-9855-0.	20. . . 110
	5. . . 130	06311-55030.	30. . . 030	15841-5136-0.	19. . . 020	16032-9856-0.	20. . . 110
HH160-3209-3.	6. . . 010	07715-00201.	4. . . 060	15841-5362-2.	19. . . 070	16032-9857-0.	20. . . 110
R1401-5135-0.	22. . . 010	09318-88150.	5. . . 110		20. . . 120	16032-9858-0.	20. . . 110
TA043-6404-0.	26. . . 090	11197-6307-0.	28. . . 030		40. . . 130	16032-9859-0.	20. . . 110
TA043-6406-0.	26. . . 120	11197-6332-0.	28. . . 190	15841-5385-0.	19. . . 110	16060-2111-4.	10. . . 010
TA043-6485-0.	26. . . 130	11197-6338-0.	28. . . 100	15841-5386-0.	19. . . 120	16060-2191-4.	10. . . 010
TA043-7403-0.	26. . . 040	11460-6311-0.	28. . . 150	15841-7302-0.	1. . . 220	16219-7326-0.	30. . . 130
01023-50610.	34. . . 090	11460-6312-0.	28. . . 170	15841-9104-0.	4. . . 180	16221-5442-0.	14. . . 060
01023-50612.	17. . . 100	11460-6327-0.	28. . . 130	15841-9150-0.	16. . . 060	16221-7327-0.	30. . . 140
01023-50614.	2. . . 020	11460-6350-0.	28. . . 050	15841-9202-0.	14. . . 030	16221-7327-0.	40. . . 080
	2. . . 025	11460-6353-0.	28. . . 040	15841-9232-0.	16. . . 070	16222-5751-0.	18. . . 110
01023-50616.	9. . . 080	11460-9331-0.	28. . . 180	15841-9402-2.	34. . . 130	16226-3211-4.	2. . . 050
	9. . . 150	11521-6592-0.	25. . . 190	15841-9602-0.	29. . . 020	16239-0402-2.	4. . . 010
	13. . . 100	11521-6597-0.	25. . . 200	15841-9665-0.	16. . . 100	16239-7343-0.	31. . . 070
	18. . . 140	12581-4301-2.	38. . . 010	15841-9666-0.	16. . . 120		41. . . 070
	25. . . 080	13901-3375-0.	2. . . 030	15852-5285-0.	23. . . 010	16241-0175-3.	3. . . 010
	30. . . 060	14182-9203-0.	26. . . 260	15852-7334-0.	31. . . 060	16241-0177-0.	3. . . 020
01023-50618.	35. . . 030	14971-4275-0.	19. . . 050	15852-9233-0.	14. . . 040	16241-0345-0.	3. . . 100
01023-50620.	8. . . 060	15021-3366-0.	1. . . 200		14. . . 090	16241-0421-2.	41. . . 140
01023-50625.	8. . . 070	15108-4329-0.	21. . . 080	15861-9665-0.	16. . . 140	16241-0454-0.	8. . . 020
01023-50630.	31. . . 080	15108-4361-0.	21. . . 040	15881-6409-0.	26. . . 150		8. . . 100
	35. . . 040	15108-4378-0.	21. . . 050	15881-6411-0.	26. . . 020		8. . . 120
01023-50645.	4. . . 150	15221-0349-0.	1. . . 030	15881-6415-0.	26. . . 280	16241-0456-0.	8. . . 130
01023-50655.	4. . . 170	15221-3361-0.	1. . . 190	15881-6426-0.	26. . . 080	16241-0462-0.	12. . . 040
	30. . . 070	15221-4317-0.	21. . . 060	15881-6433-0.	26. . . 160	16241-0481-5.	8. . . 040
01023-50685.	31. . . 090	15224-4301-0.	21. . . 010	15881-6471-0.	26. . . 060	16241-0555-0.	35. . . 025
01023-60650.	4. . . 160	15224-4320-0.	21. . . 020	15881-6480-0.	26. . . 100	16241-1311-5.	34. . . 010
	35. . . 050	15224-8776-0.	21. . . 090	15881-6490-0.	26. . . 240	16241-1312-6.	34. . . 020
01053-50618.	18. . . 180	15231-3396-0.	1. . . 130	15881-9104-0.	26. . . 200	16241-1328-0.	34. . . 070
01123-50830.	27. . . 020	15241-3229-0.	4. . . 030	15881-9105-0.	26. . . 220	16241-1403-2.	34. . . 160
01123-50835.	30. . . 150	15261-0337-0.	3. . . 090	15881-9201-0.	26. . . 030	16241-1423-0.	34. . . 170
01123-60814.	3. . . 030	15261-1336-0.	34. . . 050	15881-9202-0.	26. . . 250	16241-1424-0.	34. . . 180
01123-60816.	2. . . 060	15261-9119-0.	12. . . 050	15881-9301-0.	26. . . 070	16241-1431-0.	34. . . 140
01127-50830.	25. . . 030	15261-9201-0.	34. . . 200	15881-9302-0.	26. . . 210	16241-1435-0.	34. . . 100
01173-51085.	25. . . 040	15261-9401-0.	34. . . 210	15881-9303-0.	26. . . 180	16241-1441-0.	34. . . 190
01202-50614.	15. . . 030	15261-9601-0.	1. . . 040	15881-9304-0.	26. . . 190	16241-1443-0.	34. . . 120
02176-50100.	25. . . 090		3. . . 060	15951-9666-0.	5. . . 090	16241-1511-0.	9. . . 020
02751-50060.	4. . . 220	15263-1237-0.	38. . . 020		40. . . 110	16241-1627-0.	9. . . 070
	18. . . 160		40. . . 050	15952-9233-0.	5. . . 080	16241-1632-0.	13. . . 090
02751-50060.	23. . . 030	15321-9626-0.	3. . . 050	16006-5209-2.	16. . . 030	16241-1651-0.	9. . . 050
02761-50040.	19. . . 160	15401-6339-0.	28. . . 110	16006-5211-2.	16. . . 030	16241-2131-0.	10. . . 030
03024-50510.	5. . . 060	15451-9627-0.	1. . . 020	16006-5212-2.	16. . . 030	16241-2133-0.	10. . . 040
03024-50520.	19. . . 130	15471-5798-0.	18. . . 100	16020-1617-0.	13. . . 010	16241-2214-2.	10. . . 070
04011-50100.	25. . . 050	15511-6376-0.	28. . . 200	16030-5101-0.	16. . . 020	16241-2231-0.	10. . . 080
04512-60060.	16. . . 080	15511-9666-0.	28. . . 250	16030-5132-0.	16. . . 090	16241-2297-0.	10. . . 080
04512-60100.	25. . . 060	15521-2353-0.	10. . . 200	16030-9601-0.	16. . . 130	16241-2298-0.	10. . . 080
04814-00100.	18. . . 040	15521-2395-0.	10. . . 200	16032-5316-0.	20. . . 060	16241-2325-0.	10. . . 150
04814-00150.	4. . . 100	15521-2396-0.	10. . . 200	16032-5317-0.	20. . . 040	16241-2328-0.	10. . . 140
04814-00160.	2. . . 070	15521-9361-0.	9. . . 040	16032-5323-0.	20. . . 030	16241-2347-0.	10. . . 170
04814-10280.	10. . . 160	15521-9602-0.	1. . . 070	16032-5328-0.	20. . . 070	16241-2348-0.	8. . . 105
04814-50300.	4. . . 300	15601-9665-0.	14. . . 050	16032-5335-0.	20. . . 050		8. . . 125
	5. . . 140		14. . . 100	16032-9203-0.	20. . . 020	16241-2391-0.	10. . . 170
	40. . . 100		18. . . 190	16032-9404-0.	20. . . 080	16241-2392-0.	10. . . 170
04814-50600.	4. . . 090		19. . . 030	16032-9810-0.	20. . . 100	16241-2393-0.	8. . . 105
05012-00508.	1. . . 100		41. . . 100	16032-9850-0.	20. . . 110		8. . . 125
05012-00610.	1. . . 120	15694-6599-0.	37. . . 010	16032-9851-0.	20. . . 110	16241-2394-0.	8. . . 105
05012-00814.	1. . . 110	15841-3901-0.	29. . . 010	16032-9852-0.	20. . . 110		8. . . 125
05411-00420.	18. . . 050	15841-4250-0.	19. . . 040	16032-9853-0.	20. . . 110	16241-2411-0.	10. . . 110
05411-00428.	34. . . 110	15841-4252-0.	19. . . 045	16032-9854-0.	20. . . 110	16241-2425-0.	9. . . 140

零件号索引

NUMERICAL INDEX

零件号 PART No.	页码 序号 PAGE REF. No.	零件号 PART No.	页码 序号 PAGE REF. No.	零件号 PART No.	页码 序号 PAGE REF. No.	零件号 PART No.	页码 序号 PAGE REF. No.
16241-2432-0...	9...130	16261-1354-0...	3...070	16292-0709-5...	8...010	1C010-6583-0...	25...230
16241-2436-0...	9...110	16261-1356-0...	3...080	16292-2105-0...	10...020	1C010-6588-0...	25...240
16241-2437-0...	9...120	16261-1426-4...	34...080	16292-2109-0...	10...020	1C010-6591-0...	25...250
16241-2516-0...	12...030	16261-1452-0...	5...030	16292-2349-4...	8...025	1G021-9665-0...	14...110
16241-3365-0...	1...140		40...030	16292-2386-4...	8...025	1G031-5421-0...	14...080
16241-3507-0...	4...110	16261-1691-0...	9...030	16292-2387-4...	8...025	1G032-1450-6...	5...010
16241-3563-0...	10...130	16261-4250-2...	19...010	16299-5626-0...	17...090	1G032-5613-0...	17...040
16241-3693-0...	4...050	16261-5214-0...	23...020		41...090	1G032-5615-0...	17...050
16241-3695-0...	4...040		41...050	16299-5701-5...	18...010	1G032-5647-0...	17...060
16241-5412-2...	14...070	16261-5628-0...	1...160	16483-6460-0...	26...170	1G053-0304-4...	3...040
16241-5506-2...	13...150	16261-5648-0...	17...010	16611-6301-0...	27...010	1G053-0551-0...	5...100
16241-5526-0...	13...160	16261-6556-0...	19...150		28...010	1G053-1177-0...	35...010
16241-5527-0...	13...140	16261-9671-0...	30...040	16611-6302-0...	28...090	1G063-0331-0...	3...110
16241-5539-2...	13...120	16261-9730-0...	13...020	16611-6303-0...	28...080		40...020
16241-5545-0...	13...180	16261-9731-0...	13...030	16611-6304-0...	28...060	1G065-5361-0...	20...090
16241-5546-3...	13...190	16261-9732-0...	13...200	16611-6345-0...	28...220	1G065-5390-0...	19...055
16241-5555-4...	13...220	16264-0150-0...	2...010	16611-6366-0...	28...270		20...010
16241-5621-0...	17...110	16264-0413-2...	4...140	16611-9202-0...	28...240	1G067-7284-0...	30...110
16241-5625-3...	17...080		41...020	16612-6310-0...	28...280	1G069-2177-5...	11...220
16241-5633-0...	17...070	16264-0436-0...	8...030	16615-6401-2...	25...010	1G069-2179-5...	11...220
16241-5634-0...	17...120	16264-0436-0...	41...030	16615-6401-2...	26...010	1G069-2375-5...	11...230
16241-5716-0...	18...030	16264-0482-2...	8...050	16615-6442-2...	25...020	1G069-2376-6...	11...230
16241-7335-0...	30...080		41...040	16652-6431-0...	26...140	1G069-2377-6...	11...230
16241-7336-0...	30...090	16264-5721-0...	18...130	16652-6477-0...	26...110	1G081-6382-0...	12...020
16241-7337-0...	30...020		41...060	16652-6478-0...	26...050	1G268-5601-0...	17...030
16241-7425-0...	25...100	16264-7292-0...	30...050	16661-6308-0...	28...020	1G311-4310-0...	24...030
16241-9102-0...	25...120		40...070	16683-9602-0...	1...050	1G311-4325-0...	24...080
16241-9104-0...	4...190	16264-8315-3...	23...040	16692-2501-3...	12...010	1G311-4328-0...	24...020
16241-9149-0...	36...030	16264-8334-2...	4...280	16871-9106-0...	16...050	1G311-4334-0...	24...025
16241-9202-0...	18...070	16265-1231-2...	36...010	17053-7415-0...	33...030	1G311-4335-0...	24...010
16241-9233-0...	13...060	16265-2301-3...	10...090	17203-7286-0...	32...010	1G311-4338-0...	24...060
16241-9312-0...	4...130	16265-5501-3...	13...110	17208-6001-5...	15...010	1G311-4357-0...	24...050
16241-9402-0...	18...060	16265-7411-0...	33...010	17208-9104-0...	33...020	1G311-4359-0...	24...040
16241-9523-0...	13...080	16265-9667-0...	41...120	17213-7428-0...	25...110	1G311-4393-0...	24...070
16241-9569-0...	16...010	16271-1324-0...	34...030	17331-7334-2...	5...070	1G311-8746-0...	24...035
16241-9601-0...	1...060	16271-2401-0...	9...090	17341-6320-0...	28...120	1G513-3655-0...	7...030
16241-9602-0...	4...020	16271-2498-0...	9...100	17369-6423-0...	26...230	1G642-7305-0...	31...040
16241-9626-2...	1...150	16271-5372-2...	19...090	17391-9616-0...	1...080	1G673-1555-0...	9...010
16245-9153-0...	4...210	16271-5373-2...	19...100	17456-3641-0...	7...020	1G680-7287-0...	32...020
16245-9154-0...	4...270	16271-5535-0...	1...180	17456-3642-0...	7...010	1G694-0101-2...	1...010
16245-9154-0...	18...150	16271-5541-0...	13...210	19008-7270-0...	30...010	1G700-2198-0...	10...060
16251-7303-4...	31...010	16271-5602-3...	18...080	19077-5365-0...	19...075	1G700-2201-0...	10...050
16259-0421-0...	4...240	16271-5715-0...	18...020		20...130	1G700-5216-0...	16...030
16259-0558-0...	5...120	16271-5772-0...	18...090		40...090	1G700-5220-0...	16...030
16259-3288-2...	4...070	16271-5774-0...	18...120	19202-2354-0...	10...210	1G801-0512-0...	5...050
16259-3290-0...	4...080	16271-9201-0...	36...040	19202-2397-0...	10...210	1G911-0520-3...	5...040
16259-3513-2...	4...120	16271-9523-0...	10...120	19202-2398-0...	11...210	1G995-9935-3...	40...010
16259-5409-3...	14...010	16271-9616-0...	1...090	19212-6310-0...	28...140	1G995-9936-6...	41...010
16259-5410-3...	14...020	16271-9805-0...	28...290	19212-9713-0...	28...160	1K530-8727-0...	39...020
16259-7351-2...	31...050	16272-5115-0...	13...070	19215-6375-0...	25...180	1K531-8911-0...	39...010
16259-7352-0...	31...020	16281-6551-0...	19...140	19222-4328-0...	21...070	36200-8272-0...	32...030
16259-7355-2...	31...030	16282-5371-2...	19...080	19237-6591-0...	25...170	6C090-5896-0...	2...040
16259-9104-0...	4...200	16282-5532-0...	13...130	19434-7301-4...	30...120		41...110
16261-0704-5...	8...090	16282-9601-0...	1...170	19484-5544-0...	13...170		
16261-0705-5...	8...110	16282-9701-0...	25...130	19498-8304-0...	30...100		
16261-1182-2...	35...020	16285-0446-0...	8...080	19872-6584-0...	25...150		
	40...040		41...150	19872-6588-0...	25...160		
16261-1235-0...	36...020	16285-5641-2...	17...020	19883-6583-0...	25...140		
	40...060	16285-6357-0...	28...260	1C010-1315-0...	34...060		
16261-1333-0...	34...040	16285-9201-0...	28...210		40...120		

PIES No.		EDA0001555
BLOCK No. 批号	No. 编号	LINE 行
01	01	A
		1G324-14000 D1105-E2B-RSYH-1

KUBOTA

THE BASIC NECESSITIES GIANT

"Technology for the Needs of Tomorrow" is the ambition of everyone at Kubota. Through research and the development of new products for agriculture, industry, construction, and many other areas of modern life, we at Kubota hope to realize this goal.

必须的基本理念

面向明天的技术是KUBOTA公司每位同仁的共同志向。通过研究和开发农业、工业、建筑业及现代生活的许多其他领域的新产品，我们希望在KUBOTA公司实现这个目标。