


INSTRUCTION MANUAL

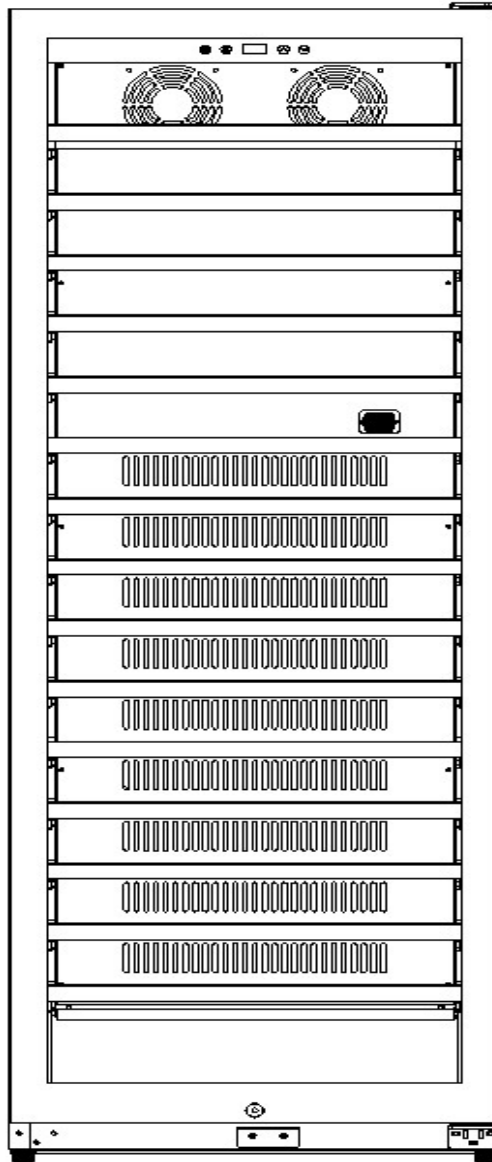

MODEL: ZS-A459

Content

I. Safety precautions

II. Structure diagram of the wine cabinet

III. Installation and use instructions









IV. Operation and temperature settings

V. Maintenance


VI. Fault handling

VII. Technical parameters

Safety precautions

-  Use the following safety principles to avoid damage to the wine cabinet arising from the working environment.
-  Read carefully before using the product and keep the instruction manual for future reference.
-  Do not allow young children to contact, operate the product, or play and crawl around in case of accidents.
-  Do not use damaged wires which must be replaced by the manufacturer or professional to avoid danger.
-  It is strictly prohibited to use inferior wire and plug board transfer. Please ensure to plug directly into the power socket.
-  Do not clean up the product with flammable and corrosive liquids. Please wash with a mild detergent.
-  Do not place the product close to any flammable area, should be far away from the heat source, avoid direct exposure to the sun.
-  Do not pull the wire to unplug the plug, should remove the plug from the socket, and do not plug in the power socket before installation.

Schematic diagram of the wine cabinet structure

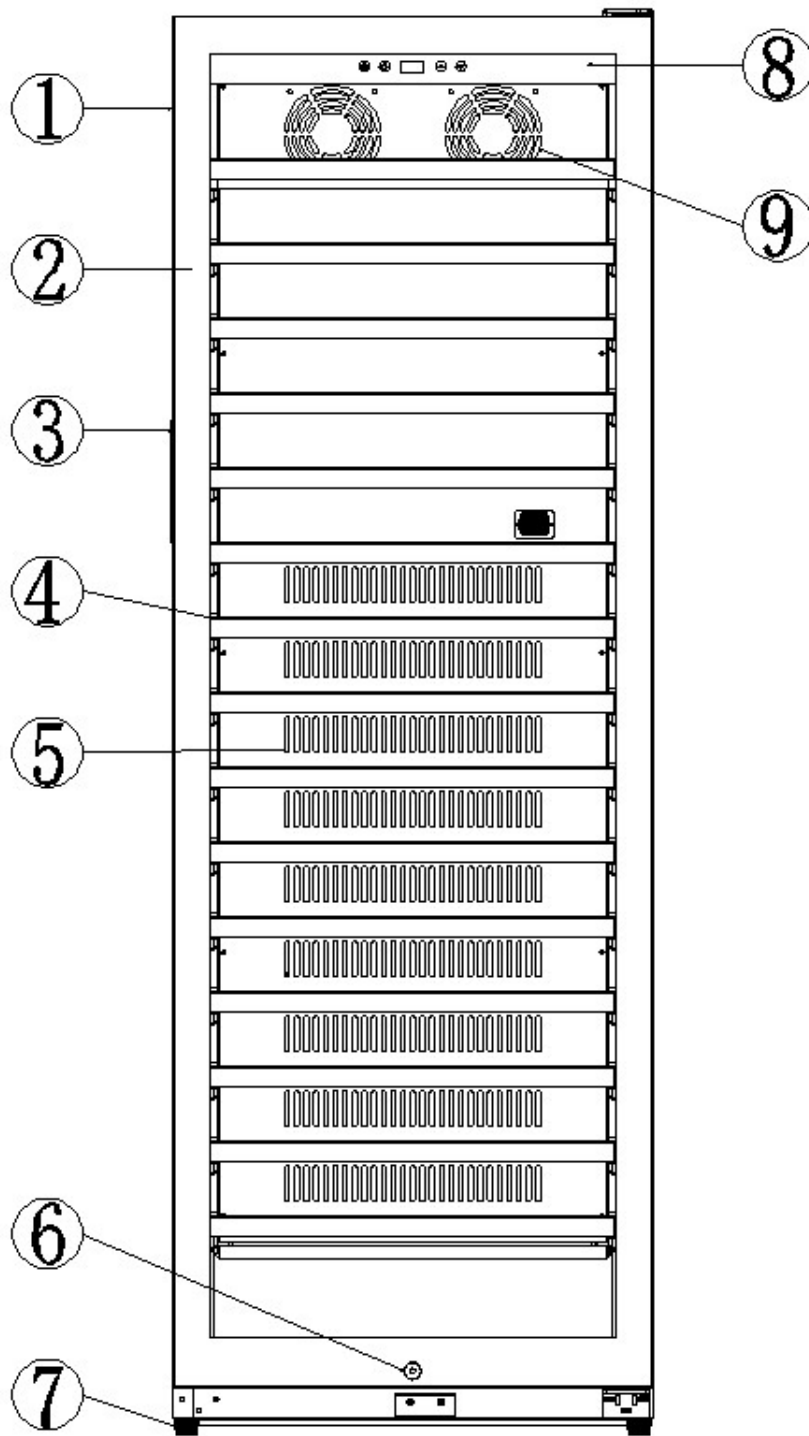

- (1) Cabinet
- (2) Glass door
- (3) Handle
- (4) Shelf
- (5) Cold air circulation window in the box
- (6) Lock
- (7) Adjustable foot
- (8) Control panel
- (9) Refrigeration window inside the box

Installation instructions

Note: Put the wine cabinet in the position that you want to install, which position should be:

- ① Far away from the heat source, good air mobility;
- ② Not wet;
- ③ On smooth surface;

Product maintenance and maintenance

1. After turning off the power, the self-protection of the compressor shall wait 5 minutes before starting the cooling; otherwise, the wine cabinet will not operate.
2. If you use the wine cabinet for the first time or reuse it after a long downtime, the temperature you set may not match the temperature displayed in the wine cabinet. After the wine cabinet runs for a period of time, the temperature display will return to normal.

Door lock

Some wine cabinets are equipped with safety locks. The wine cabinets are equipped with protective locks. The keys are placed in the packaging bag of the instruction manual. Take out the key and insert it into the lock hole and turn it to the left to open the cabinet door immediately. Operate the lock door in the opposite direction, take out the key and store it in a safe place.

Several non-fault phenomena

The surface of the wine cabinet is condensed

Condensation is a natural phenomenon. The wine cabinet works in the environment of high temperature and high humidity in summer. When the temperature is lower in the wine cabinet than the exterior environment, the moisture in the air will be condensed on the surface of the shell and the glass door. Dew condensation phenomenon mainly occurs in the door seal, door body surface and other parts. When the relative air temperature is more than 80%, the wine cabinet glass or surface will appear condensed. Hence, take caution to clean condensation with a soft cloth for prolonged longevity. When the temperature is relatively reduced, condensation will not take place. In order to reduce the phenomenon of condensation, please pay attention to the following points when using:

1. During rainy season especially in the summer, wipe the glass door surface and other condensation parts frequently.
2. Place the wine cabinet in a better ventilated position, which can also reduce the condensation phenomenon.

IMPORTANT:

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are under supervision and have been instructed on how to use the appliance by a person responsible for their safety.

Children have to observed and warned not to play with the appliance.



Correct disposal of this product

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



The product meets the requirements of the applicable EC directives

