


2023

# MQTT AP Operation Documentation

DALIAN SERTAG TECHNOLOGY CO., LTD

## 1. The base station and the computer are connected to the same router.

The router network segment is 192.168.1.1. The IP address can be DHCP. The computer IP is configured as 192.168.1.92.

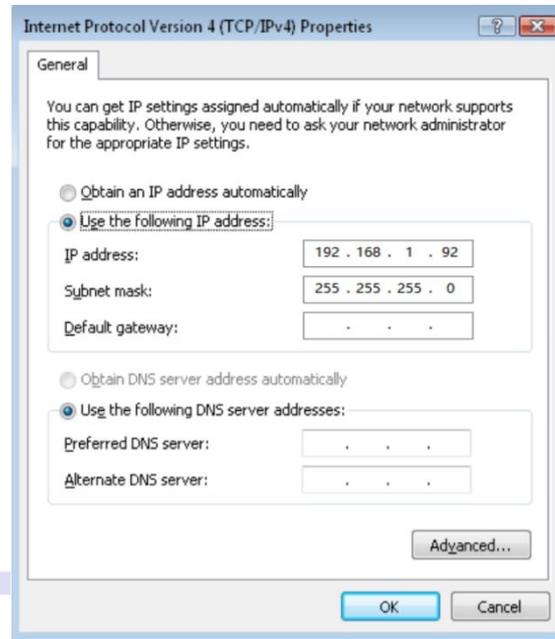

## 2. Open the MQTT configuration tool for initial configuration.


Network: Select the currently connected network card: 192.168.1.92

Port: 9080


User Name: test

Password: 123456

And click "run" to wait for the AP to come online.

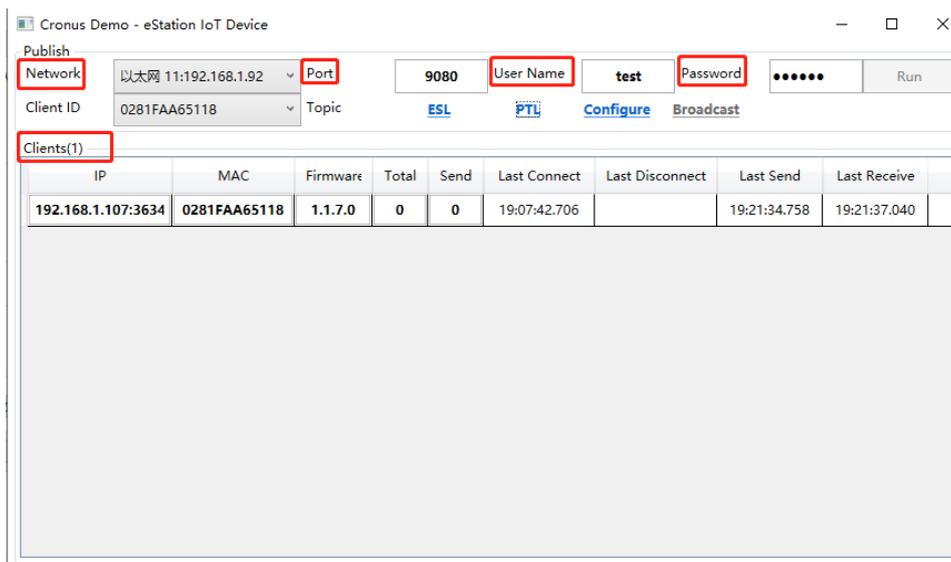

### 3. Instructions for issuing sound and light guidance labels.

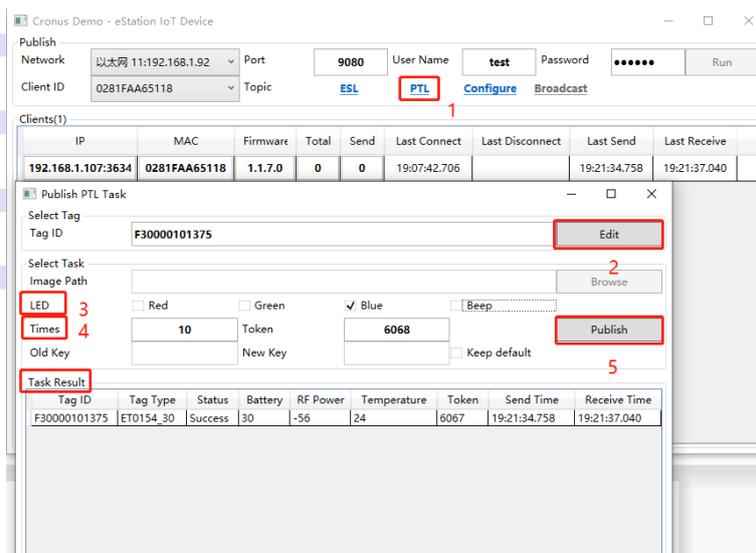

Step 1: Select the "PTL" control interface


Step 2: Add the ID of the tag, multiple entries can be made in batches

Step 3: Set the color of the flash and whether to buzz

Step 4: Adjust the number of flashes

Step 5: Distribute the task and push the flashing light and buzzer tasks to the price tag

### 4. Base station configuration instructions.

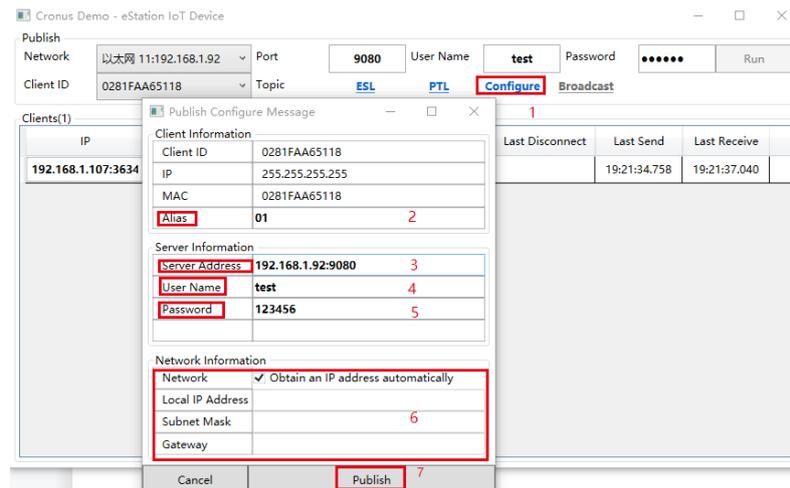

1: Open the configuration interface

2: The base station ID can be modified

3: The online server address and port can be modified

4: User account can be modified

5: User password can be modified

6: The base station can be configured to automatically obtain an IP address or DHCP IP

7: Run configuration

**Note:** If you accidentally configure the wrong configuration, long press the "RST" button on the back of the base station to reset it.