



• Using the 929 super glue to fill the small crack, if the the crack is big,then need to use the stone glue





Step 2: Polishing

• Using the manual polsihing machine with dry polishing pads to polish the glue area (the pads polishing degree from low to high)




Dry Polishing Pads

Portable Polishing Machine

Step 3: Applying Wax

• Brushing the stone wax to the polished area

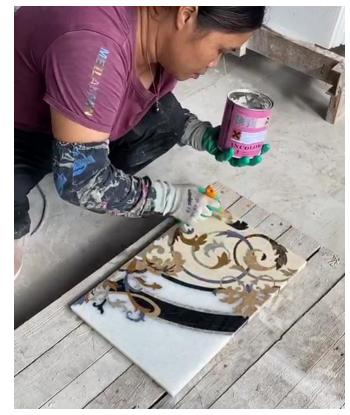



Step 4: Cleaning

• Cleaning the surface with steel wood







• Using the Polishing machine with the wood pad



