


Standard Industrial Monitors

VICPAS
HMI Parts Center

Catalog Numbers 6176M-15VN, 6176M-15VT, 6176M-15PN, 6176M-15PT, 6176M-17VN, 6176M-17VT, 6176M-17PN, 6176M-17PT, 6176M-19VN, 6176M-19VT, 6176M-19PN, 6176M-19PT

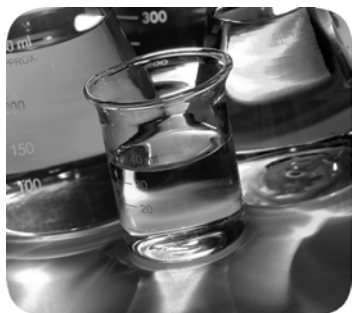

Important User Information

Solid-state equipment has operational characteristics differing from those of electromechanical equipment. Safety Guidelines for the Application, Installation and Maintenance of Solid State Controls (publication [SGI-1.1](#) available from your local Rockwell Automation sales office or online at <http://www.rockwellautomation.com/literature/>) describes some important differences between solid-state equipment and hard-wired electromechanical devices. Because of this difference, and also because of the wide variety of uses for solid-state equipment, all persons responsible for applying this equipment must satisfy themselves that each intended application of this equipment is acceptable.

In no event will Rockwell Automation, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Rockwell Automation, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Rockwell Automation, Inc. with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Rockwell Automation, Inc., is prohibited.

Throughout this manual, when necessary, we use notes to make you aware of safety considerations.



WARNING: Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.



ATTENTION: Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequence.



SHOCK HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that dangerous voltage may be present.



BURN HAZARD: Labels may be on or inside the equipment, for example, a drive or motor, to alert people that surfaces may reach dangerous temperatures.

IMPORTANT

Identifies information that is critical for successful application and understanding of the product.

Notes:

Preface	Preface Objectives.....	7
	Purpose of This Manual	7
	Abbreviations.....	7
	Additional Resources.....	7
	 Chapter 1	
Monitor Features	Chapter Objectives.....	9
	Monitor Overview	9
	Monitor Options	10
	Before You Begin	10
	Parts List	10
	 Chapter 2	
Installation	Chapter Objectives.....	11
	Installation Precautions.....	12
	Environment and Enclosure Information.....	12
	European Union Directive	12
	Installation Guidelines	13
	Required Tools	14
	Mounting Clearance Requirements.....	14
	Monitor Dimensions.....	15
	Install the Monitor.....	15
	Panel Mounting.....	15
	Rack Mounting (1950M monitors)	17
	VESA Mounting	18
	Monitor Connections	19
	Connect to an Analog Video Source	20
	Connect to a Digital Video Source.....	20
	Connect USB Peripheral Devices.....	21
	Connect the Optional Touchscreen Interface.....	21
	Connect Power	23
	Functional Ground Screw	23
	Secure Cables.....	23
	 Chapter 3	
Display Configuration	Chapter Objective	25
	Set the Monitor Type	25
	Check and Change the Display Resolution.....	25
	How to Use the OSD Buttons	26
	Lock Access to the OSD	26
	Adjust the Monitor Brightness.....	26
	Use the Auto Adjust Control	27
	Change Monitor Settings with OSD.....	28
	General OSD Menu Navigation Guidelines	28

	OSD Menus	29
	OSD Main Menu.....	29
	Signal Selection Menu.....	30
	Brightness and Contrast Menu	30
	Color Menu.....	31
	Image Menu.....	32
	Tool Menu.....	33
	Chapter 4	
Perform Routine Maintenance	Chapter Objective.....	35
	Clean the Monitor	35
	Replace a Line Cord	35
	Other Maintenance.....	36
	Backlight Assembly Disposal	36
	Ship or Transport the Monitor	36
	Chapter 5	
Troubleshoot the Monitor	Chapter Objective.....	37
	Run the Self-test.....	37
	Troubleshooting	38
	Appendix A	
Specifications	41
	Appendix B	
Touchscreen Serial Interface	Set Up the Touchscreen Interface.....	43
	Enable the Touchscreen Interface.....	44
	Install the Touchscreen Driver Software.....	44
	Perform a Calibration.....	44
	Appendix C	
Video Cables	HD-15 Video Connector	45
	DVI Video Connector	46
Index	47

Preface Objectives

This preface covers the following topics:

- [Purpose of This Manual](#)
- [Abbreviations](#)
- [Additional Resources](#)

Purpose of This Manual

This manual is a user guide for the monitors. It provides procedures to the following:

- Install the monitor.
- Make monitor connections.
- Configure the monitor's video setup.
- Troubleshoot the monitor.

Abbreviations

The following abbreviations are used in this publication.

Abbr	Meaning	Abbr	Meaning
BIOS	Basic input/output system	PELV	Protective extra-low voltage
COM	Communication (serial port interface)	POST	Power on self test
CRT	Cathode ray tube	SELV	Safety extra-low voltage
DIMM	Dual in-line memory module	TFT	Thin film transistor
DVI	Digital visual interface	USB	Universal serial bus
LCD	Liquid crystal display	VGA	Video graphics array
OSD	On screen display		

Additional Resources

These documents contain additional information concerning related products from Rockwell Automation.

Resource	Description
Industrial Monitors Cutout Template, publication 6186M-DS001	Provides cut-out templates to panel mount 6176M industrial monitors.
Industrial Automation Wiring and Grounding Guidelines, publication 1770-4.1	Provides general guidelines for installing a Rockwell Automation industrial system.

You can view or download publications at the <http://www.rockwellautomation.com/literature/>. To order paper copies of technical documentation, contact your local Allen-Bradley distributor or Rockwell Automation sales representative.

Notes:

Monitor Features

Chapter Objectives

This chapter covers the following topics:

- [Monitor Overview](#)
- [Monitor Options](#)
- [Before You Begin](#)
- [Parts List](#)

Monitor Overview

Standard industrial monitors provide the latest in LCD flat panel technology. Combine these monitors with an industrial non-display computer or any computer to create a visualization, maintenance, control, or information computing solution.

Standard industrial monitors offer the following features:

- 15, 17, and 19-inch displays
- VESA and panel mount options
- Active matrix TFT display
- Native display resolutions from 1024x768 to 1280x1024
- Wide viewing angles
- Optional RS-232 or USB touchscreen interface
- USB hub for external devices such as keyboard and mouse
- One button screen auto-adjust
- OSD controls with lockout feature
- Input power, adapter (AC models)
- Space efficient chassis that is less than 58 mm (2.3 in.) deep
- Optional bench-mount adapters (for VESA mount monitors)

Monitor Options

This table summarizes the options available for standard industrial monitors.

Cat. No.	Display Size (in.)	Mounting Option	Bezel	Touch Screen
6176M-15VN	15	VESA	Plastic with reinforced steel	None
6176M-15VT				Resistive touch screen
6187M-15PN		Panel	Aluminum alloy	None
6176M-15PT				Resistive touch screen
6186M-17VN	17	VESA	Plastic with reinforced steel	None
6186M-17VT				Resistive touch screen
6186M-17PN		Panel	Aluminum alloy	None
6186M-17PT				Resistive touch screen
6186M-19VN	19	VESA	Plastic with reinforced steel	None
6186M-19VT				Resistive touch screen
6186M-19PN		Panel	Aluminum alloy	None
6186M-19PT				Resistive touch screen

Before You Begin

Before unpacking the monitor, inspect the shipping carton for damage. If damage is visible, immediately contact the shipper and request assistance. Otherwise, proceed with unpacking.

Keep the original packing material in case you need to return the monitor for repair or transport it to another location. Use both the inner and outer packing cartons to provide adequate protection for a monitor returned for service.

Parts List

The monitors are shipped with the following items:

- Industrial Monitors and Accessories CD that contains device drivers
- Installation instructions (this document)
- Cutout template (publication [6186M-DS001](#))
- Mounting clips
- Four VESA mounting screws (M4 x 0.7)
- Power adapter and line cord (both AC)
- HD-15 analog video cable
- RS-232 touchscreen interface cable (for touch-enabled monitors)
- USB touchscreen interface cable (for touch-enabled monitors)

Installation

Chapter Objectives

This chapter provides pre-installation information and procedures to mount the monitor and make connections. The chapter covers the following topics:

- [Installation Precautions](#)
- [Installation Guidelines](#)
- [Required Tools](#)
- [Mounting Clearance Requirements](#)
- [Monitor Dimensions](#)
- [Install the Monitor](#)
- [Monitor Connections](#)
- [Connect Power](#)
- [Functional Ground Screw](#)
- [Secure Cables](#)

Review each mounting type and the monitor dimensions before installation.

Installation Precautions

Read and follow these precautions before installing the monitor.

Environment and Enclosure Information



ATTENTION: This monitor is intended for use in a Pollution Degree 2 industrial environment, in overvoltage Category II applications (as defined in IEC 60664-1), at altitudes up to 2000 m (6561 ft) without derating.

This monitor is considered Group 1, Class A industrial equipment according to IEC/CISPR 11. Without appropriate precautions, there may be potential difficulties ensuring electromagnetic compatibility in other environments due to conducted as well as radiated disturbance.

This monitor is supplied as open-type equipment. UL recognized and hazardous location equipment must be mounted in an enclosure that is suitably designed or rated for those specific environmental conditions that will be present, and designed to prevent personal injury resulting from accessibility to live parts.

UL Listed equipment need not be mounted inside another enclosure in ordinary (nonhazardous) locations if NEMA Type and IEC ratings are not required, but the mounting method must limit the tilt of the product to no more than 30° from vertical. The mounting means must be firmly attached to the supporting surface using screws, bolts, or clamps so the monitor cannot tip.

All monitors ship with a gasketed bezel to meet specified NEMA and IEC ratings only when mounted in a panel or enclosure with an equivalent rating.

Subsequent sections of this publication may contain additional information regarding specific enclosure type ratings that are required to comply with certain product safety certifications.

In addition to this publication, see the following:

- Industrial Automation Wiring and Grounding Guidelines, publication [1770-4.1](#), for additional installation requirements
- NEMA Standard 250 and IEC 60529, as applicable, for explanations of the degrees of protection provided by enclosures

European Union Directive

This monitor meets the European Union Directive requirements when installed within the European Union or EEA regions and have the CE mark. A copy of the declaration of conformity is available at the Rockwell Automation website at <http://www.rockwellautomation.com/certification/overview.page>.



ATTENTION: This monitor is intended to operate in an industrial or control room environment, which uses some form of power isolation from the public low-voltage mains. Some computer configurations may not comply with the EN 61000-3-2 Harmonic Emissions standard as specified by the EMC Directive of the European Union. Obtain permission from the local power authority before connecting any computer configuration that draws more than 75 W of AC power directly from the public mains.

Installation Guidelines

Follow these guidelines to make sure your monitor provides safe and reliable service:

- The installation site must have sufficient power.




ATTENTION: To maintain an electrically safe installation, the AC powered monitors must be plugged into a grounded outlet.

- The enclosure must allow sufficient space around air inlets and outlets to provide the circulation necessary for cooling. See [Mounting Clearance Requirements on page 14](#) for further information. Never allow air passages to become obstructed.
- The ambient air temperature must not exceed the maximum operating temperature specified in [Table 13 on page 42](#). Consider heat produced by other devices in the enclosure. You may need a user-supplied fan, heat exchanger, or air conditioner to meet this condition.

TIP Hot air rises. The temperature at the top of the enclosure is often higher than the temperature in other parts of the enclosure, especially if air is not circulating.

IMPORTANT The monitor can operate at a range of extremes. However, the life span of any electronic device is shortened if you continuously operate the monitor at its highest rated temperature.

- The humidity of the ambient air must not exceed limits specified in [Table 13 on page 42](#), and must avoid condensation.
- In dry environments, static charges build up easily. Proper grounding of the equipment through the AC power cord helps to reduce static discharges, which may cause shocks and damage electronic components.
- The enclosure or cover must remain in place at all times during operation. The cover provides protection against high voltages inside the monitor and inhibits radio-frequency emissions that might interfere with other equipment.
- For VESA mounting, the installation must provide sufficient mechanical stability to minimize the effects from vibration and shock. The mounting means must be firmly attached to the supporting surface with the appropriate hardware.
- When mounted, the monitor cannot be tilted more than 30° from vertical.

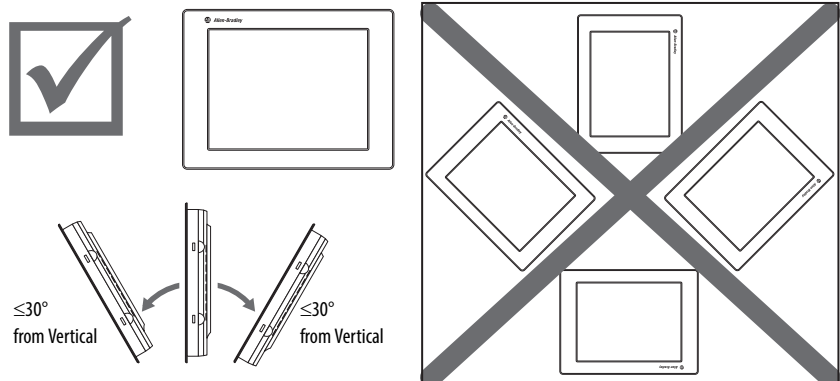


Required Tools

These tools are required for installation:

- Panel cutout tools
- #2 Phillips torque screwdriver

Mounting Clearance Requirements

Review the monitor dimensions to make sure you allow adequate clearance around the monitor for ventilation and cable connections.

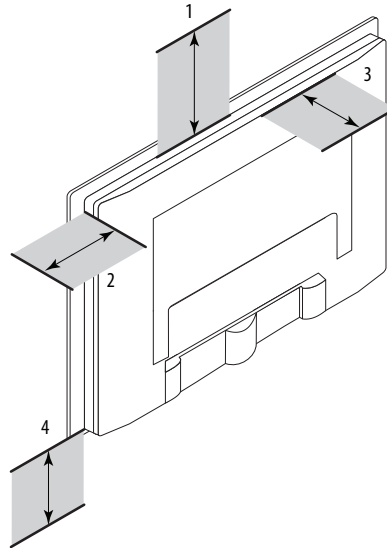

Item	Monitor Location	Clearance, min
1	Top	77 mm (3 in.)
2	Side (both)	50 mm (2 in.)
3	Back	50 mm (2 in.)
4	Bottom	50 mm (2 in.)

IMPORTANT

Do not operate the monitor in an enclosure that uses minimum clearances unless adequate ventilation or other cooling methods are used to maintain the monitor temperature at its specified rating.

The ambient temperature around the monitor must not exceed the operating temperature specified in [Table 13 on page 42](#).

Monitor Dimensions

The following illustration and table show dimensions for the panel mount and VESA mount monitors.

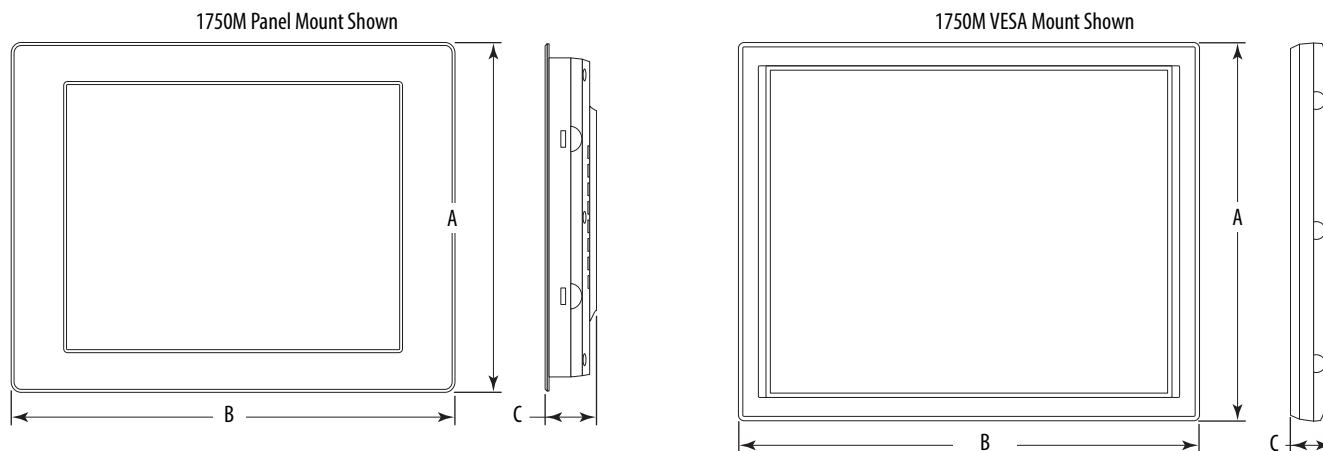


Table 1 - Monitor Dimensions

6176M Model	Mount	A (height)	B (width)	C (depth)	Panel Cutout Height	Panel Cutout Width
1550M	Panel	309 mm (12.3 in.)	410 mm (16.1 in.)	50 mm (2.0 in.)	285.6 mm (11.24 in.)	386.6 mm (15.22 in.)
	VESA	282.6 mm (11.0 in.)	383.6 mm (15.0 in.)	50 mm (2.0 in.)	—	—
1750M	Panel	356 mm (14.0 in.)	452 mm (17.8 in.)	53 mm (2.1 in.)	329.5 mm (12.97 in.)	424 mm (16.69 in.)
	VESA	326.5 mm (12.9 in.)	421 mm (16.6 in.)	53 mm (2.1 in.)	—	—
1950M	Panel	399.3 mm (15.7 in.)	482.6 mm (19.0 in.)	58 mm (2.3 in.)	363.5 mm (14.31 in.)	449.6 mm (17.70 in.)
	VESA	357 mm (14.1 in.)	444 m (17.5 in.)	58 mm (2.3 in.)	—	—

Install the Monitor

There are various ways to install the monitors:

- Panel mount
- Rack mount (for only 1950M monitors)
- VESA mount

Review each mounting type and monitor dimensions before installation.

Panel Mounting

Panel mount monitors are installed directly into a panel with mounting clips. The number of clips varies by model.

Cat. No.	Monitor Model	Mounting Clips
6176M-15PN, 6176M-15PT	1550M	10
6176M-17PN, 6176M-17PT	1750M	10
6176M-19PN, 6176M-19PT	1950M	12

Cat. No.	Description
6189V-MCLPS2	Replacement mounting clips (12)

Panel Mounting Guidelines

Observe these guidelines when installing the monitor in a panel:

- Included with the monitor is Industrial Monitors Cutout Template, publication [6186M-DS001](#), with a cutout template for each monitor model. Panel cutout dimensions are also listed in [Table 1 on page 15](#).
- Cut supporting panels to specifications before installation. Take precautions so metal cuttings do not enter components already installed in the panel.
- Supporting panels must be at least 14 gauge to be sure of proper sealing against water and dust and to provide proper support. The mounting hardware supplied accommodates panels up to 6.25 mm (0.25 in.) thick.



ATTENTION: Failure to follow these guidelines may result in personal injury or damage to the panel components.

Mount the Monitor in a Panel


Follow these steps to mount the monitor in a panel.

1. Cut the panel opening using the appropriate cutout dimensions.
2. Attach cables to the monitor before installing if rear access to the monitor is limited after installation.

See [Monitor Connections on page 19](#) for where to attach cables.

3. Verify that the sealing gasket is properly positioned on the monitor.
This gasket forms a compression-type seal. Do not use sealing compounds.
4. Place the monitor in the panel cutout.
5. Slide the mounting clips into the slots on the top, bottom, and sides of the monitor.
6. Hand-tighten the clips in the sequence shown in [Figure 1](#) until the gasket is compressed uniformly against the panel.

Figure 1 - Tightening and Torque Sequence

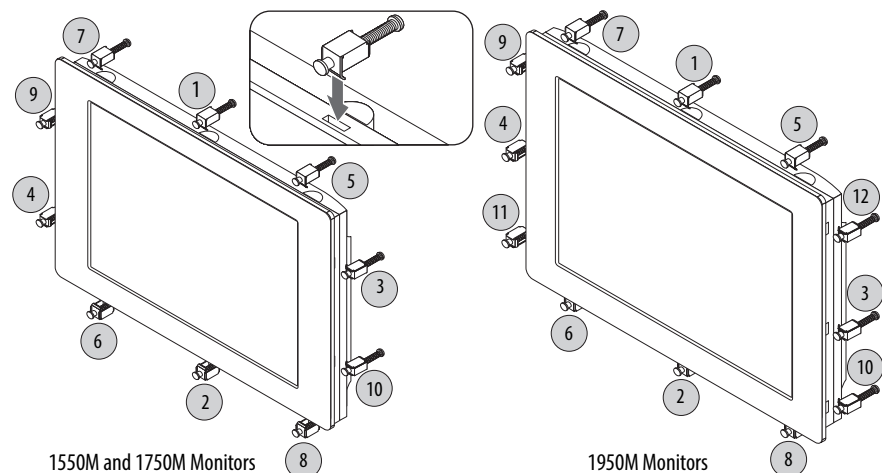

7. Tighten the mounting clips to a torque of 1.1 N•m (10 lb•in) by following the torque sequence in [Figure 1 on page 16](#), making sure to not overtighten.



ATTENTION: Tighten the mounting clips to the specified torque to provide a proper seal and prevent damage to the monitor. Rockwell Automation assumes no responsibility for water or chemical damage to the monitor or other equipment within the enclosure because of improper installation.

8. Repeat the torque sequence at least three times until all mounting clips are torqued to 1.1 N•m (10 lb•in) and the sealing gasket is compressed uniformly against the panel.

Rack Mounting (1950M monitors)

The 1950M monitor is installed directly into a standard 19-inch rack.

Make sure there is adequate space behind the rack panel. Allow minimum clearances for cables and airflow. See [Panel Mounting Guidelines on page 16](#).

Mount the 1950M Monitor in a Rack


Follow these steps to mount the 1950M monitor in an EIA-rack cabinet.

1. Position the monitor into a standard 19-inch EIA-rack cabinet (A) as shown in [Figure 2 on page 18](#).

TIP For ease of installation, make sure two or more people help to install the monitor.

2. Slide the two clips into the first slots on the sides of the monitor (B).
3. Tighten the clips to a torque of 1.1 N•m (10 lb•in) (C).
4. Slide the remaining clips into the slots on the sides of the monitor (D).
5. Tighten the remaining clips to a torque of 1.1 N•m (10 lb•in) (C).

Figure 2 - Rack Mounting a 1950M Monitor

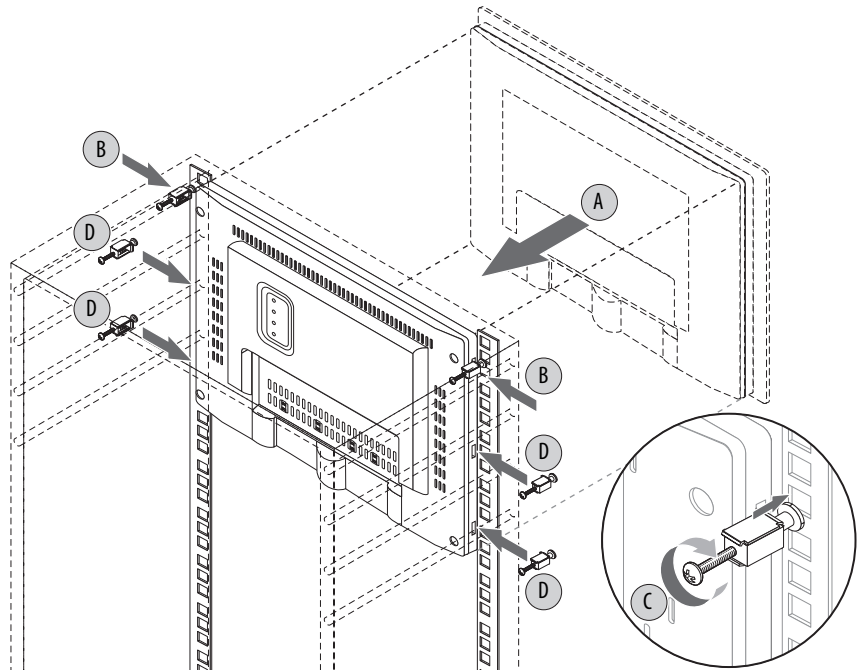

ATTENTION: The mounting rails that run vertically along the inside edges of the front opening of an EIA-rack cabinet are either wide or universal:

- **Wide rails** have holes spaced 12.7 mm (0.5 in.) and 31.8 mm (1.25 in.) on centers, in a repeating pattern. Wide rails are prevalent in Europe.
- **Universal rails** have holes spaced 12.7 mm (0.5 in.), 15.9 mm (0.625 in.), and 31.8 mm (1.25 in.) on centers, in a repeating pattern. The universal rails have a hole pattern that contains the wide pattern but provides an additional hole at the midpoint of the pattern. Universal rails are prevalent in the United States.

VESA Mounting

Use the optional bench/tabletop adapter for monitors, catalog number 6189V-MBA, to mount your VESA monitor on a bench or tabletop.

VESA Mounting Guidelines


Observe these guidelines when installing the VESA monitor on an arm:

- The mounting surface and the mounting arm must be strong enough to support both the monitor and the mounting hardware.
- The interface between the arm and the monitor must meet VESA FPMPMI 100 mm (3.94 in.) standards.
- The mounting location must provide adequate clearance for positioning and moving the adjustable unit and for routing cables.

Mount the Monitor on a Bench or Tabletop

Follow these directions to mount the VESA monitor to a bench or tabletop.

1. Mount the arm to the bench or tabletop by using screws, bolts, or clamps so the monitor cannot tip.
2. Align the VESA mounting holes in the back of the monitor with the holes in the arm bracket.
3. Insert the four supplied VESA mounting screws through the arm brackets and into the monitor.

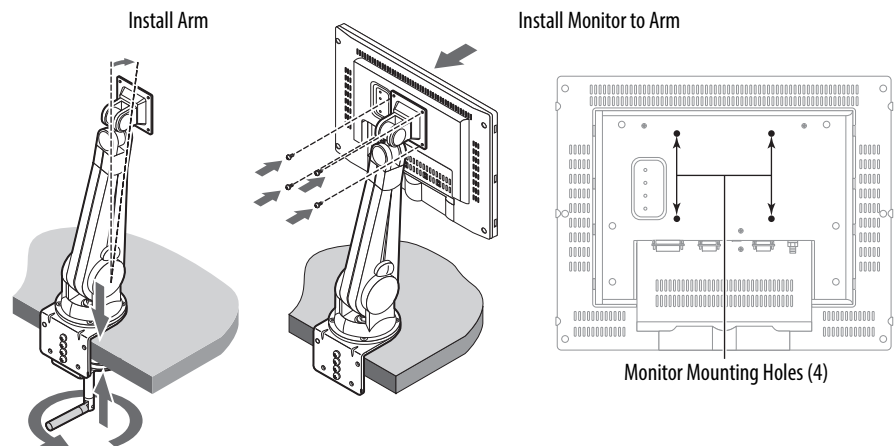


4. Tighten the screws to secure the VESA monitor to the arm.

Monitor Connections

Use the connectors on the rear of the monitor to connect the following:

- Analog video source (HD-15 VGA connector)
- Digital video source (DVI connector)
- Serial port on a computer for the optional touchscreen interface
- USB port on a computer for the optional touchscreen interface
- USB hub device ports for connecting peripheral devices
- Power (DC input connector must be used with supplied AC power adapter)

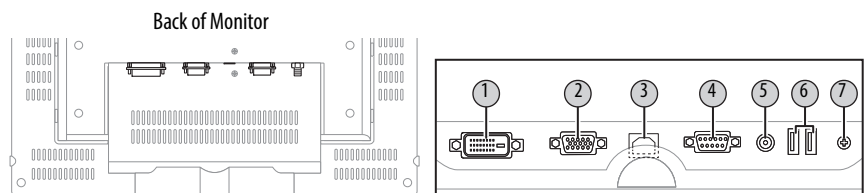

No.	Connector
1	DVI-D video input
2	HD-15 video input
3	USB Type B connection to computer
4	RS-232 input (optional)

No.	Connector
5	DC power input (AC adapter)
6	USB Type A connection to peripheral devices (2)
7	M5 ground screw

Connect to an Analog Video Source

All monitors support analog video. Your monitor is shipped with a high-quality analog video cable. Use this video cable to connect a computer to the monitor.

Cat. No.	Description
6189V-VGACBL2	Analog video cable, 1.9 m (6.3 ft)
6189V-PCIDVI	Dual analog/digital video card, PCI

Follow these steps to connect the monitor to an analog video source.

1. Connect one end of the analog video cable to the female, HD-15 video input connector on the monitor.
2. Connect the other cable end to the VGA port on the computer or to the video generator VGA port, if used.

TIP You can use a cable with a maximum length of 15 m (50 ft) at lower monitor resolutions, provided it is a high-quality video cable. Video amplifiers are available for longer distances.

You can connect the monitor to a video generator that does not conform to VGA standards if the generator provides analog RGB video signals (0.714V above reference black into 75 W) and separate horizontal and vertical sync signals. Depending on the signal, the monitor may or may not function properly.

Connect to a Digital Video Source

All monitors support digital video. Use a digital video cable to connect a computer to the DVI connector on the monitor. This cable is not supplied, but can be purchased as an accessory.

Cat. No.	Description
6189V-DVICBL2	Digital video cable, 1.8 m (6 ft)
6189V-DVICBL5	Digital video cable, 5 m (16.4 ft)
6189V-PCIDVI	Dual analog/digital video card, PCI


Follow these steps to connect the monitor to a digital video source.

1. Connect one end of the digital video cable to the female, DVI video input connector on the monitor.
2. Connect the other cable end to the output of any digital DVI video source.

TIP For a DVI cable longer than 5 m (16.4 ft), use a DVI cable extension. However, DVI cables longer than 5 m (16.4 ft) exceed the DVI maximum cable length specification.

Connect USB Peripheral Devices

The monitor is equipped with a USB hub that provides communication between a computer and any USB compatible device, such as a keyboard, mouse, or memory stick. The USB hub ports are enabled only when the monitor is powered on and the connection is made between the type B connector and the computer.

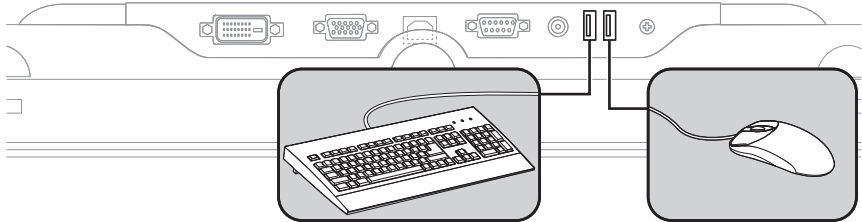

Connect the Optional Touchscreen Interface

An optional touchscreen provides a high-resolution touch input system. The driver software included with the monitor lets the touchscreen function with many Microsoft Windows industrial applications such as a pointing device or mouse.

A touchscreen interface to the computer can be configured using either the serial RS-232 connection or USB connection.

Connect the Optional Serial RS-232 Touchscreen Interface

The RS-232 DB9 (female) D-shell connector on the bottom side of the monitor provides the serial touchscreen interface connection to the host.

Follow these directions to connect the touchscreen interface.

1. For units with the touchscreen option, connect one end of the included touchscreen serial cable to the RS-232 port connector on the monitor.
2. Connect the other end of the cable to a serial port on the host computer.
3. Tighten the captive screws on the cable connector to secure it.


Connect the USB and Optional USB Touchscreen Interface

The USB Type A connection to the host computer is used to connect USB devices and the optional USB touchscreen interface to the host computer.

Cat. No.	Description
6189V-TCHCBL2	Serial touch cable, RS-232 cable, 1.8 m (6 ft)
6189V-USBCBL2	USB/USB touch cable, Type A to Type B, 1.8 m (6 ft)

Follow these directions to connect the touchscreen interface.

1. Connect the USB Type A male connector on the included USB cable to the USB Type A female connector on the monitor.
2. Connect the USB Type B male connector on the USB cable to the USB Type B female connector on the host computer.

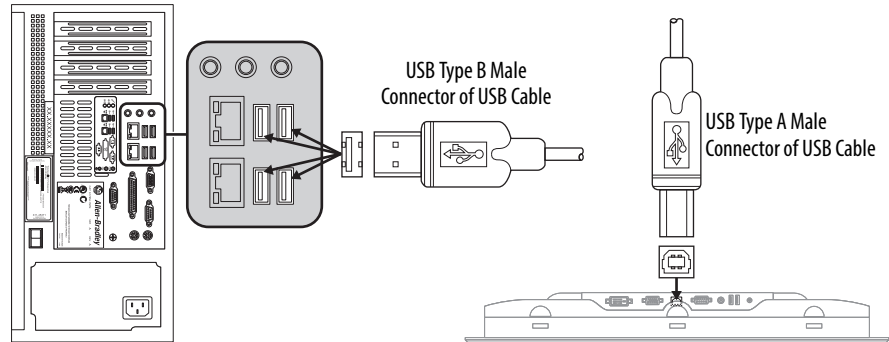

Install the Touchscreen Driver

Before installing the touchscreen driver, we recommend that you check cable connections and communication rate for the interface you are using.

Interface	Action
RS-232	<ul style="list-style-type: none"> • Verify that the supplied RS-232 cable is properly installed between RS-232 input connector on the monitor and the host's COM port. • Verify that the communication rate of the COM port matches the touchscreen controller communication rate. The controller communication rate is factory-set at 9,600 baud.
USB	<ul style="list-style-type: none"> • Verify that the USB cable is properly installed between the USB input connector on the monitor and a USB port on the host computer.

You are now ready to install the touchscreen driver found on the Accessories CD or at <http://www.ab.com/linked/industrialcomputers/drivers/monitors.html>.

Perform a Calibration

After installing the driver, follow the calibration instructions in the touchscreen documentation. After calibration, the touchscreen is ready to use.

Connect Power


With the AC power adapter, the monitor can use a single-phase AC power supply, providing 90...264V AC at 47...63 Hz. Use only the AC adapter supplied with the monitor.

Power must be available at a nearby grounded outlet. Whenever possible, connect the monitor to the same AC power source that supplies the computer.

Cat. No.	Description
6189V-MPS3	Replacement AC power adapter

Follow these steps to connect power to the monitor.

1. Connect the supplied AC power adapter cable to the power input connector on the monitor (A).
2. Secure this connection by screwing the barrel over the threads (B).

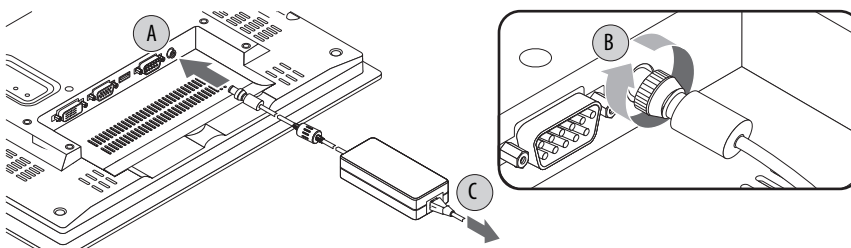


3. Connect the AC power cord to the main power supply (C).

Functional Ground Screw

Using the functional ground screw is not required for safety and regulatory compliance. However, you can use the functional ground screw on the rear panel of the monitor if a supplemental ground is desired.

Secure Cables

Use optional cable ties to organize the monitor cables and secure them to the cable restraints on the back of the monitor. Organizing your cables provides easier access and identification.

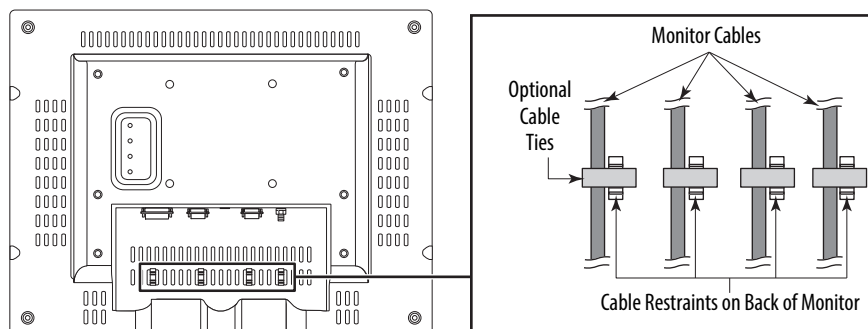

Notes:

Display Configuration

Chapter Objective

This chapter covers the following topics:

- [Set the Monitor Type](#)
- [Check and Change the Display Resolution](#)
- [How to Use the OSD Buttons](#)
- [How to Use the OSD Buttons](#)
- [Use the Auto Adjust Control](#)
- [Change Monitor Settings with OSD](#)
- [OSD Menus](#)

Set the Monitor Type

The monitors are plug-and-play compliant devices. Your computer automatically sets the monitor type. Additional setup is not required.

Check and Change the Display Resolution

Flat panel monitors are fixed-resolution devices. The image looks best when the monitors are operated at their native resolution. However, the monitors have advanced scaling capabilities to make the display look as good as possible while running in non-native modes.

These are the native resolutions of the monitors:

- 1550M: 1024x768
- 1750M and 1950M: 1280x1024

If you switch the resolution of your monitor from its native resolution, the display may look slightly distorted due to the replication techniques used to fill the full screen with an image.

To check or change your monitor's display resolution, access the Display settings in the Control Panel on your computer.

TIP A refresh rate of 60 Hz is optimal for LCD flat-panel displays. █

How to Use the OSD Buttons

To adjust your monitor, use the OSD buttons at the rear of the monitor.

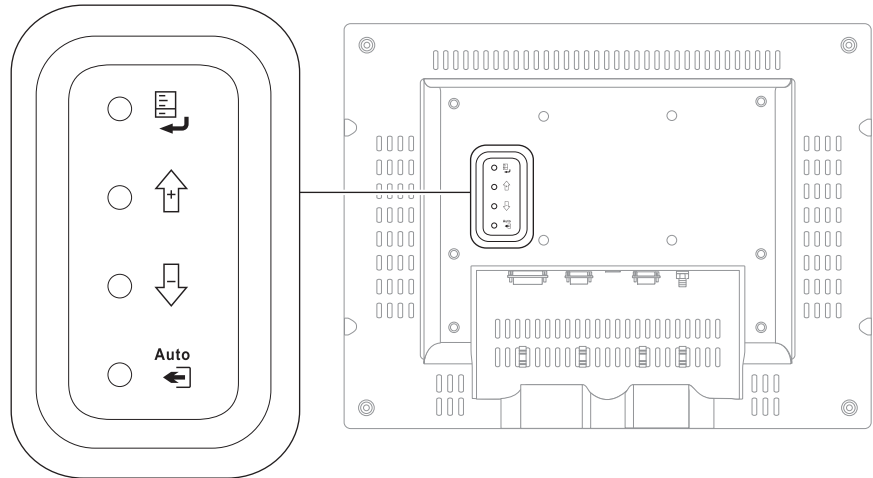


Table 2 - OSD Buttons Description

OSD Button	Control	Description
	Menu/Return	<ul style="list-style-type: none"> • Opens the OSD and submenus. • Selects the highlighted function. • Saves selections.
	Adjust Buttons (up and down arrows)	<ul style="list-style-type: none"> • Moves between OSD menus and submenus. • Increases or decreases values in OSD menus and submenus. • Increase or decrease monitor brightness level when OSD is off.
Auto 	Auto Adjust/Exit	<ul style="list-style-type: none"> • Starts the automatic (video) adjustment function. • Exits the OSD.

Lock Access to the OSD



OSD Lockout prevents unauthorized or unintentional adjustments to OSD functions.


To perform an OSD Lock or Unlock on the monitors while the OSD is off, press and hold the up and down arrow buttons simultaneously for at least three seconds. ■

Adjust the Monitor Brightness


To adjust brightness levels, use the Adjust buttons on the rear of the monitor. Press the '+' button to increase brightness and the '-' button to decrease brightness while the OSD is off. Adjusted settings are automatically saved.

Use the Auto Adjust Control

IMPORTANT The Auto Adjust function applies only to a VGA **analog** video source; there is no effect on a DVI digital video source.

When you press the Auto Adjust/Exit  button, the monitor samples the input video signal and accurately adjusts the screen size, position, and phasing. This function works with most screens that use reasonable video content, but Rockwell Automation ships a ScreenSet monitor set-up utility on a CD to display the best possible image for setup.

IMPORTANT The ScreenSet monitor set-up utility is designed for only Windows 32-bit and 64-bit operating systems.

1. Insert the Accessories CD, provided with the monitor, into your computer's CD-ROM drive.
2. Locate and start the ScreenSet utility that is named ScreenSet.exe.
3. Press the Auto Adjust/Exit  button.

The auto adjustment display appears. Your screen has the potential to flicker during the Auto Setup process. When the auto adjustment is complete, your monitor is properly adjusted and the settings are automatically saved.



TIP A computer switches through several video modes while starting. The monitor stores set-up information for each video mode. If you have trouble reading the display during the starting video modes, you can also press the Auto Adjust/Exit button during that time.





Change Monitor Settings with OSD

Use the OSD buttons on the back of your monitor to change your monitor's settings.

The OSD contains similar menu functions for each monitor. The menus are icon driven.

General OSD Menu Navigation Guidelines

See [How to Use the OSD Buttons on page 26](#) for where the Menu/Return and arrow buttons are located. See any of the six OSD main menu tabs starting on [page 30](#) for where the Back  and Exit  buttons are located.

- Press the Menu/Return  button to do the following:
 - Open the OSD main menu.
 - Activate the highlighted function.
 - Activate a highlighted sub-function.
- Press the arrow  buttons to do the following:
 - Move between the function icons.
 - Make your changes.
 - Select the sub-function if an icon has more than one sub-button.
- As you move from one function to the other, the function menu changes to represent the correct icon.
- Press the Back  button once to return to the OSD main menu where you can select another function.
- Press the Exit  button to exit the OSD main menu.

OSD Menus

You can modify the settings to the monitors by using the following menus:

- Signal Selection
- Brightness and Contrast
- Color
- Image
- Tools

OSD Main Menu

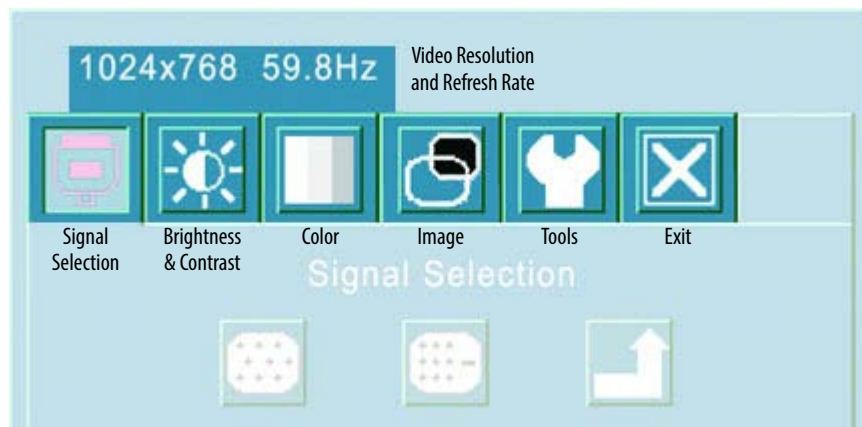


Table 3 - Main Menu Description

Main Menu	Description
Signal Selection	Accesses options for selecting analog or digital picture input. The input selection depends on the signal from the computer and the type of cable connected to the monitor.
Brightness & Contrast	Accesses functions to adjust the brightness and contrast.
Color	Accesses functions to select standard RGB levels, manually adjust RGB levels or set the color temperature.
Image	Accesses functions to auto-adjust the display settings or manually adjust the horizontal and vertical image position, frequency phase, and width level.
Tools	Accesses functions to adjust the OSD, reset factory settings.
Exit	Exits the OSD main menu.

Signal Selection Menu

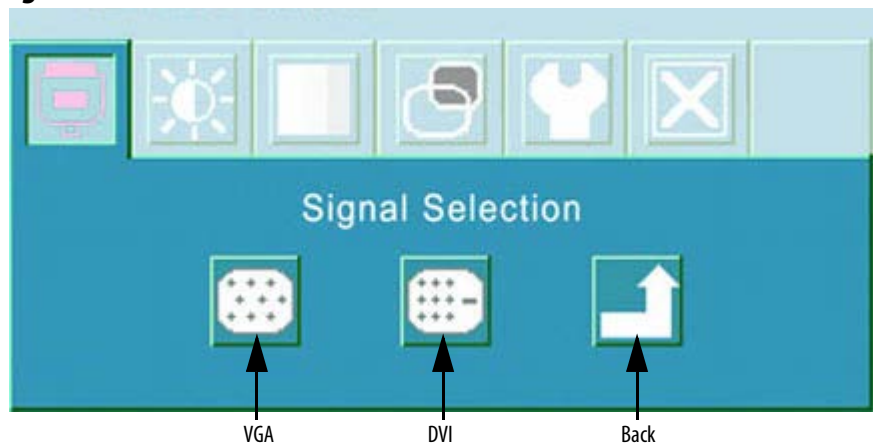


Table 4 - Signal Selection Menu Description

Icon	Function
VGA (analog input)	Displays the incoming VGA analog signal from the 15-pin VGA input connector.
DVI (digital input)	Displays the incoming DVI digital signal from the DVI input connector.
Back	Returns to the OSD main menu.

Brightness and Contrast Menu


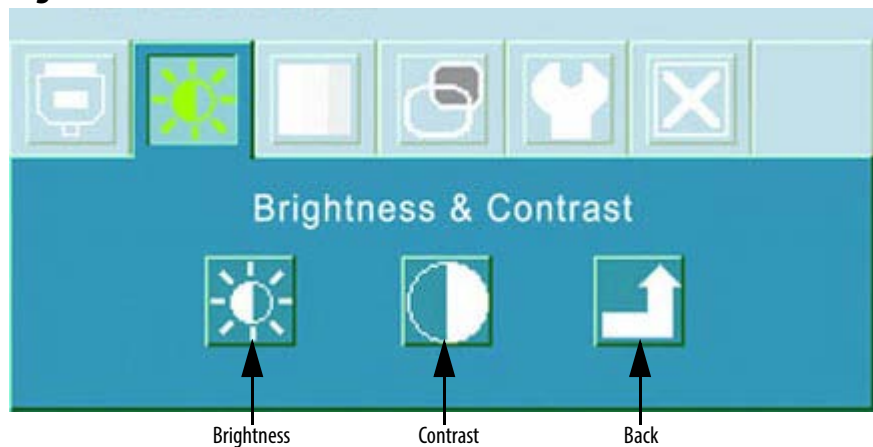


Table 5 - Brightness and Contrast Menu Description

Icon	Function	Value Range
Brightness	Adjusts the brightness of the screen.	0...100
Contrast	Adjusts the contrast of the screen.	0...100
Back	Returns to the OSD main menu.	

TIP The more common way to adjust brightness is to use the Up/Down buttons on the back of the monitor. See [page 26](#) for further information.

Color Menu

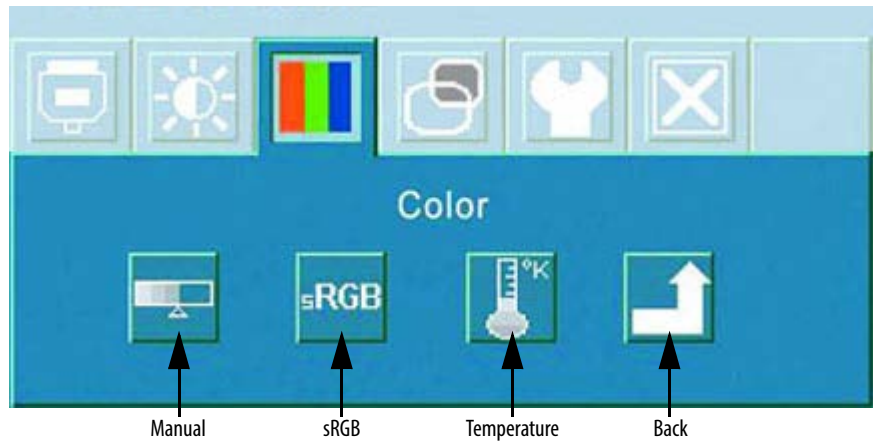

Temperature Submenu



Table 6 - Color Menu and Temperature Submenu Descriptions

Color Functions	Description	Value Range
Manual	Adjusts the amount of red, green, and blue on the screen.	0...100
sRGB	Automatically adjusts the RGB settings.	
Temperature	Adjusts the color temperature values.	
Back	Returns to the OSD main menu.	

Temperature Functions	Description	Value Range
Temperature Settings	Sets the white point/color temperature based on degrees Kelvin (K): <ul style="list-style-type: none"> • 4200 • 5000 • 6500 = typical personal computer • 7500 • 9300 = typical television and monitor default setting 	4200...9300
Back	Returns to the Color menu.	

