

BLACK PEARL_{Rc801}

7"HD Screen FPV Diversity RX Instruction Manual



Before operating the unit, please read this manual thoroughly, and retain it for future reference.

| | |
|------------------------------|---|
| Safety Notice | 1 |
| Warning | 1 |
| Battery | 1 |
| Caution | 1 |
| Packing List | 2 |
| Battery | 3 |
| Battery Installation | 3 |
| Recharge the Battery | 3 |
| Sun-shadow | 3 |
| Install the Sun-shadow | 3 |
| Icons | 4 |
| Function Icons | 4 |
| Screen Icons | 4 |
| Operation Instruction | 5 |
| Power on/off | 5 |
| Working Mode | 5 |
| Diversity Mode | 5 |
| RX1 and RX2 Mode | 5 |
| AV IN Mode | 5 |
| HDMI Mode | 5 |
| Function Instruction | 6 |
| ZOOM Function | 6 |
| Display Scale | 6 |
| DNR | 7 |
| Display Direction | 7 |
| Menu | 8 |
| Color | 8 |
| Sound | 8 |
| Function | 8 |
| Wireless | 8 |
| Specification | 9 |

Warning

- In order to reduce the damage of fire, electric shock or product hazard, do not expose the unit to rain or moisture.
- Please use only the recommended accessories.
- Do not disassemble this product, it should be repaired by the professional people.


Battery

- DO NOT dismantle the battery.
- DO NOT make the battery short or its terminals in touch with metal objects, there is explosion danger.
- DO NOT use any damaged or leaking battery.
- DO NOT throw the battery into fire
- DO NOT put the battery in the place over 65°C.
- DO NOT expose the battery to strike, fall, etc..
- Be sure to keep the battery out of children's reach.
- Please replace the battery immediately if its working life becomes short significantly.
- Replace the battery with the same one or the equivalent recommended by the manufacturer.
- This device uses Li battery, which is recyclable resources, to deal with the waste battery, please send it to the resource recycling.


Caution

- The magnetic field with certain frequency may affect the image and sound of this device.
- DO NOT install or store this device in book cabinet, closet or other closed spaces to avoid such risks as electronic shock, fire and so on due to overheat.
- DO NOT place this device near open fire.
- This device is not dustproof, waterproof, please note when using.


Packing List

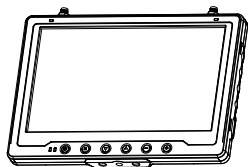


① Main Body

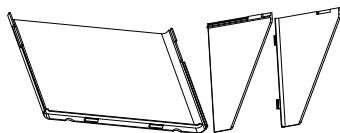


② Sun Shadow

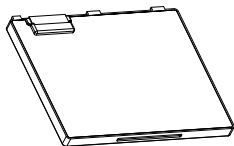

③ Battery

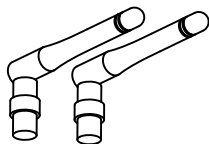


④ Antenna

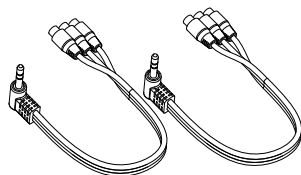


⑤ AV Cable

⑥ DC Input Cable

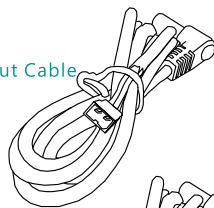


⑦ DC Output Cab

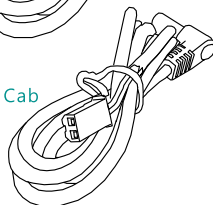

Battery

Battery Installation

- Push the battery socket with gold contacts toward the gold contacts of the battery compartment of the device, and press the battery down; when battery reaches the bottom of the battery compartment, the battery lock will fix the battery automatically.
- If you don't install the battery, you can use 7~28V power supply.

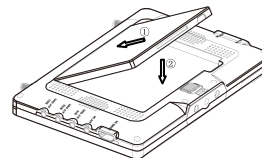


Recharge the Battery

- Please use power supply with 15V/2A at least
- Please recharge the battery fully at the first time
- During recharging, the red indicated light is on; after recharging, the green indicated light is on.


Sun-shadow

Install The Sun-shadow


- 3 pieces of baffles make up the sun-shadow, first install 2 pieces of baffles on the both sides of main body, then install
- The top baffle toward the card slot of the main body according to the icon as below, and make sure they are fixed well.
- When you disassemble the sun-shadow, please take off the top baffle, then the right and left one.

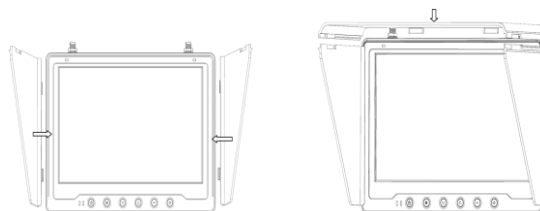


Function Icons

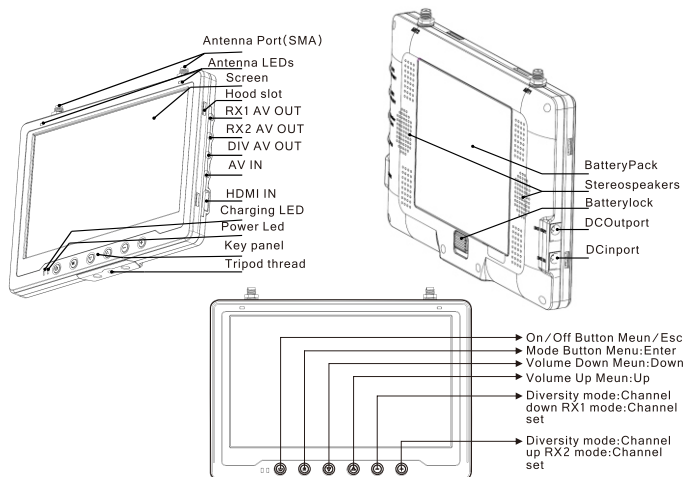

Screen Icons

- There are different icons in different working modes.
- When battery icons shows as  it means the batter need be recharged or changed

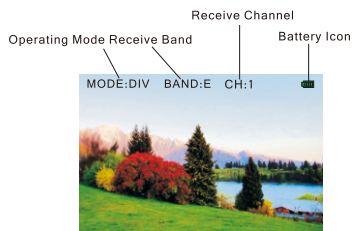

Power on/off

- Press the power button until the device is on,the red indicated light will be on.

Working Mode

- Press mode button can set up: DIV, RX1, RX2, AV IN, HDMI IN model.
- Video TV system set-up(except HDMI mode): Press menu button to enter 'function', then 'Video sys' to choose PAL or NTSC.
- Under DIV, RX1, RX2 modes,you need press menu button first to enter RF to set up the frequency band to make sure,the device Work with the transmitter in the same band.

Diversity Mode

- The due antenna diversity receiver is made up of ANT1, ANT2 and receiving circuit, according to their RSSI output,the device can keep receive the strongest signal all the time, and maximize image display stability.
- Antenna LED will show the current stronger one.
- < - > and < + > button controls the channel change.
- DIV AV OUT outputs diversity receiving signal for video recorder and external display purposes.
- DIV AV OUT ONLY works under the diversity mode.

Diversity Mode

- Under this mode, the channel of RX1 and RX2 can be set up separately; can set up the current shown video signal of RX1 or RX2 by mode button.
- < - > button controls RX1 channel, < + > button controls RX2 channel.
- Rx1 AV OUT and RX2 AV OUT output the corresponding channel of themselves,the device can receive the video signals from 2different transmitters at the same time. If there is only one transmitter working, there is no different to use RX1 and RX2. If there are two transmitters working,Please pay attention to adjust the bang and the channel,let each other dose not affect the image effect.

AV IN Mode

- For inputting external video and audio signal.
- In AV IN mode, wireless receiving circuit automatically shut down to save battery life.

HDMI Mode

- HDMI can input HD video to show much clearer image,and automatically adapt to the resolution (the maximum input 1920X1080/60Hz).
- In HDMI mode,wireless receiving circuit automatically shut down to save battery life.
- Press the mode button in the HDMI mode, may slow response, this is a normal phenomenon, because HDMI mode requires multiple attempts to connect with an external device, after success connecting,the device can quickly display.

Function Instruction

ZOOM Function

● Vertical Scaling

Use this function, can make vertical scaling, only show 16:9 moving image region of 4:3 picture on the screen.

Support shortcut keys: Long press <+> button to ZOOM IN, long press <-> button to ZOOM OUT (back to original scale)

Attention: NOT Support HDMI video vertical scaling.

For example: original scale



ZOOM IN



● Horizontal Scaling

Use this function, can make horizontal scaling, change input 4:3 image into 16:9 image displayed on the screen.

The default in 16:9 mode (ZOOM IN full screen display), to change settings, please enter the menu->Function->Display Ratio to choose 4:3 or 16:9 displaying.

For example: original scale



16:9 (ZOOM IN)



Through these functions can realize image full screen easily display, in order to obtain the best display effect, enable the above functions at the same time can also obtain the following display effect:



Function Instruction

DNR

When external signal is input, due to various reasons, for example: signal source is interference transmission line caused by EMI, which may cause more image noise and more serious picture ripples; set up DNR function can improve these phenomena. When you set DNR to "High", you will reduce the noise to the maximum extent to improve the display effect.

-When there is some serious noise interference, the DNR features may not function.

Display Direction

In the menu, Flip Horizontal, Flip Vertical can control video display direction. Flip Horizontal is for image mirror display, Flip Vertical is for image upside down display.

-This feature helps CAMERA inverted installation, the reversed image display on the screen; open the two functions at the same time can make sure the image displayed in normal correct direction for ever.

-Attention: this function starts, the screen icon will also change the display direction

Menu

(Works in black for explaining the menu function)

Press **U** button into menu setup; these menu consists of 4 directories:

Color、Audio、Function、Wireless; Press **M** button to enter settings, press **▲** or **▼** button to browse options and adjust value.

Color

- Picture Mode Bright
Standard Default setup, we advise to use this setup, which applies to most image display Soft
User-Brightness, Contrast, Saturation, Sharpness
- Color Temp Warm
Normal
Cool
- DNR off turn off DNR
Low light noise
Mid middle noise
High strengthening noise, may reduce the quality of the image

Sound

- Sound Mode Standard
Class
Dance
Live
Pop
Rock
User-Bass, Treble
0~20 adjust the volume balance of speakers; the default is 10, two speakers with the same volume.
- Balance

Function

- Language English、French、German、Spanish、Portuguese、Japanese、Russian、Italian
- OSD setting OSD Timeout 0~60S, can set up the menu shown time on the screen Transparency 0~4 level, control menu into a translucent display effect

Specification

- Display Ratio 4 : 3
16 : 9
Auto default automatically that video will display full screen according to input resolution
- Reset all specifications are back to factory settings
- Auto Power Off Off. 15Mins. 30 Mins. 45 Mins. 60 Mins
- Flip Horizontal On. Off mirror image display control
- Flip Vertical On. Off image 180 degree rotating display control
- Icon On. 5 Sec. 10 Sec. 15 Sec. 20 Sec. 25 Sec. 30 Sec. 35 Sec. 40 Sec. 45 Sec. 50 Sec. 55 Sec. 60 Sec
set the status icon on the screen shown all the time or hidden automatically according to set time

- Video Sys PAL, NTSC

Wireless

- Diversity band A, B, F
- RX1 band A, B, F
- RX2 band A, B, F

| | | | | | | | | | | |
|---------------------|---------------------|---|------------------------------------|-------|-------|-------|-------|-------|-------|-------|
| Display Screen | Diagonal | 7 inch | | | | | | | | |
| | Resolution | 1024X600 | | | | | | | | |
| | Contrast | 700:1 | | | | | | | | |
| | Luminance | 300cd/m' | | | | | | | | |
| Wireless Receiving | Working frequency | ISM 5.8GHz | | | | | | | | |
| | | Band | CH 1 | CH2 | CH3 | CH4 | CH5 | CH6 | CH7 | CH8 |
| | | A | 5865M | 5845M | 5825M | 5805M | 5785M | 5765M | 5745M | 5725M |
| | | B | 5733M | 5752M | 5771M | 5790M | 5809M | 5828M | 5847M | 5866M |
| | F | 5740M | 5760M | 5780M | 5800M | 5820M | 5840M | 5860M | 5880M | |
| | Sensitivity | -90dBm±1dBm | | | | | | | | |
| | Channel | 32Channel (4 Band X 8 Channel) | | | | | | | | |
| | Antenna Port | 2 X SMA, 50ohm | | | | | | | | |
| | Diversity receiving | Antenna diversity | | | | | | | | |
| | TV System | NTSC/PAL | | | | | | | | |
| AV Port | Video output level | 1.0Vp-p Typ.75ohm | | | | | | | | |
| | Audio output level | 1.0Vp-p Typ.10Kohm | | | | | | | | |
| | RX1 AV OUT | Video. Audio output | | | | | | | | |
| | RX2 AV OUT | Video. Audio output | | | | | | | | |
| | DIV AV OUT | Diversity receiving, Video. Audio output | | | | | | | | |
| | AV IN | Video. Stereo Audio input | | | | | | | | |
| | HDMI IN(A Type) | Support HDMI 1.3 Digital Input, Support HDMl Audio in | | | | | | | | |
| | Built-in Microphone | 8Ω/1W X 2 | | | | | | | | |
| Power Supply | DC IN | 7 ~ 28V/ 2A | | | | | | | | |
| | DC OUT | Output Voltage : DC IN or Battery voltage | | | | | | | | |
| | | Output Current : 1A | | | | | | | | |
| | | Battery | 11.1V/1000mAh(3 series LiPo cells) | | | | | | | |
| Dimensions | Consumption | 12V input:7.8W | | | | | | | | |
| | Main Body | 183X126X19.5mm(not include sun shadow) | | | | | | | | |
| | Battery | 105X87.5X6.7 mm(not include prominent part) | | | | | | | | |
| Weight | Main body | 350 g | | | | | | | | |
| | Battery | 95 g | | | | | | | | |
| Tripod connector | | General 1/4 "thread | | | | | | | | |
| Working Temperature | | -10℃ ~ +65℃ | | | | | | | | |